

[Manuals.plus](#) /

> [Nillkin](#) /

> Nillkin Foldable Keyboard with Touchpad User Manual

Nillkin B0F5HC2J3M

Nillkin Foldable Keyboard with Touchpad User Manual

Model: B0F5HC2J3M

INTRODUCTION

This manual provides detailed instructions for the Nillkin Foldable Keyboard with Touchpad, Model B0F5HC2J3M. This full-size wireless keyboard is designed for portability and efficiency, featuring a multi-touch trackpad, numeric keypad, and multi-device connectivity. Please read this manual thoroughly before using the product to ensure proper operation and maintenance.



Image: The Nillkin Foldable Keyboard, fully unfolded and held in two hands, showcasing its compact yet full-size design with a numeric keypad and touchpad.

WHAT'S IN THE BOX

- Nillkin Foldable Keyboard
- USB Cable
- Velvet Storage Bag
- Multilingual Manual

SETUP AND CONNECTIVITY

Initial Charging

Before first use, fully charge the keyboard using the provided USB-C cable. Connect the USB-C end to the keyboard's charging port and the other end to a USB power source. The red indicator light will stay on during charging and turn off when fully charged.

TRAVEL LIGHT, WORK LONGER

USB-C Fast Charge & 120-Days of Power



Image: The Nillkin Foldable Keyboard connected via a USB-C cable to a power bank, illustrating the charging process. The image highlights the USB-C port and charging indicator.

Bluetooth Pairing (Up to 3 Devices)

1. Turn on the foldable keyboard's power switch.
2. Select a Bluetooth channel by pressing **FN + BT1**, **FN + BT2**, or **FN + BT3**. The corresponding Bluetooth channel

light will flash.

3. Press **FN + C** to enter pairing mode. The selected Bluetooth channel light will flash rapidly.
4. On your device (iPad, Laptop, PC, Tablet, Smartphone), turn on Bluetooth and search for "Nillkin Keyboard" or similar. Select it to pair and connect.
5. Once connected, the light will stop flashing. You can effortlessly switch between connected devices by pressing **FN + BT1/BT2/BT3**.

3 DEVICES COMPATIBILITY



Image: The Nillkin Foldable Keyboard shown connected wirelessly to a laptop, a desktop monitor, and a tablet, demonstrating its multi-device compatibility.

OPERATING INSTRUCTIONS

Keyboard Layout and Special Functions

The Nillkin Foldable Keyboard features a full-size layout with a dedicated numeric keypad and multi-touch trackpad. Many functions are accessed using the **FN** key in combination with other keys.

- **FN + F1-F12:** Access multimedia and system functions (e.g., volume, playback, screen brightness).
- **FN + Command (Q/W/E):** Switch between trackpad and numeric keypad modes. This allows the numeric keypad area to function as either a numerical input pad or a multi-touch trackpad.
- **FN + BT1/BT2/BT3:** Switch between paired Bluetooth devices.

**FOLDING FOR PORTABLE LIFE
DESIGNED FOR PORTABILITY
BUILT FOR EFFICIENCY**



**100,000 TIMES Folding Action
5 YEARS Stable Hinge**




Image: A close-up of the Nillkin Foldable Keyboard's right side, highlighting the integrated trackpad and numeric keypad. An arrow indicates the FN+Command key combination for switching modes.

ONE KEYBOARD ENJOYS KEYBOARD + MOUSE FUNCTION

One keyboard enjoys keyboard + mouse function



LARGER SIZE KEYCAPS

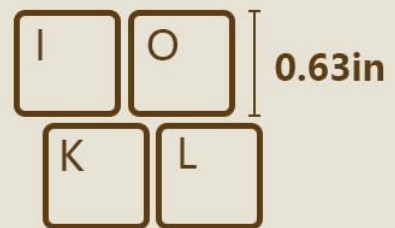

Expanded size 13.5*4*0.4 inch
Folded size 7*4*0.6 inch

Image: A visual comparison showing the larger keycap size of the Nillkin Foldable Keyboard compared to a standard keyboard, emphasizing comfortable typing.

Checking Battery Level

To view the current keyboard battery level, press **FN + Right COMMAND**. The indicator light will flash according to the battery percentage:

- Green light flashes 3 times: 70-100% battery
- Blue light flashes 3 times: 30-70% battery
- Red light flashes 3 times: 0-30% battery (low battery, please charge)

Your browser does not support the video tag.

Video: Demonstrates how to check the battery indicator light on the Nillkin Foldable Keyboard by pressing FN + Right COMMAND, showing the different light colors corresponding to battery levels.

MAINTENANCE

To ensure the longevity of your Nillkin Foldable Keyboard, follow these maintenance guidelines:

- Keep the keyboard clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Protect the keyboard from extreme temperatures, direct sunlight, and moisture.
- When not in use, fold the keyboard and store it in the provided velvet storage bag to prevent scratches and dust accumulation.
- Avoid placing heavy objects on the keyboard to prevent damage to the keys or hinges.

TROUBLESHOOTING

Problem	Solution
Keyboard does not turn on.	Ensure the power switch is in the ON position. Charge the keyboard fully using the USB-C cable.
Unable to pair via Bluetooth.	Make sure the keyboard is in pairing mode (FN + C). Ensure Bluetooth is enabled on your device. Forget previous pairings on your device and try again. Restart both the keyboard and your device.
Keys are not responding.	Check battery level. Re-pair the keyboard with your device. Ensure the keyboard is within Bluetooth range (up to 30ft).
Trackpad/Numeric Keypad not working.	Press FN + Command to switch between trackpad and numeric keypad modes. Ensure the correct mode is active for your intended use.

SPECIFICATIONS

- **Brand:** Nillkin
- **Model:** B0F5HC2J3M
- **Connectivity Technology:** Bluetooth
- **Compatible Devices:** Laptop, PC, Tablet, Smartphone
- **Keyboard Description:** Multi Functional
- **Special Features:** Portable, Quiet, Foldable, Trackpad, Numeric Keypad
- **Color:** Black
- **Number of Keys:** 64
- **Material:** Polyurethane (PU), Acrylonitrile Butadiene Styrene (ABS)
- **Item Weight:** 1.04 pounds (approx. 472g)

- **Package Dimensions:** 10.04 x 5.75 x 1.14 inches
- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Nillkin customer service or refer to the official Nillkin website. Keep your purchase receipt for warranty claims.

Manufacturer: Neekin-US