

[Manuals.plus](#) /

> [Sweetcrispy](#) /

> Sweetcrispy Ergonomic Mid-Back Mesh Office Chair Model 718BK Instruction Manual

Sweetcrispy 718BK

Sweetcrispy Ergonomic Mid-Back Mesh Office Chair Model 718BK Instruction Manual

Model: 718BK

INTRODUCTION

Thank you for choosing the Sweetcrispy Ergonomic Mid-Back Mesh Office Chair. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new chair. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: The Sweetcrispy Ergonomic Mid-Back Mesh Office Chair in a home office setting.

SETUP AND ASSEMBLY

The Sweetcrispy office chair is designed for straightforward assembly. All necessary hardware and tools are included. Please follow these steps for a quick and easy setup, typically completed within 10-15 minutes.

Included Components



Image: All components and tools required for chair assembly.

Assembly Steps

1. **Attach Casters to Base:** Insert the five casters into the holes at the end of each leg of the chair base. Push firmly until they click into place.



Image: Illustration of casters being inserted into the chair base.

2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the assembled chair base.
3. **Attach Mechanism to Seat:** Secure the control mechanism to the underside of the seat cushion using the provided screws. Ensure the front of the mechanism aligns with the front of the seat.



Image: The control mechanism being attached to the bottom of the seat cushion.

4. **Attach Armrests to Seat:** Fasten the armrests to the sides of the seat cushion using the designated screws.

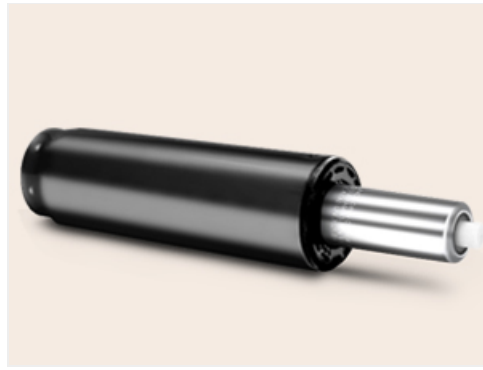 


Image: Armrests being secured to the seat cushion.

5. **Attach Backrest to Seat/Armrests:** Connect the backrest to the seat and armrests using the remaining screws. Ensure all connections are tight.



Image: The backrest being attached to the assembled seat and armrest structure.

6. **Connect Seat Assembly to Gas Lift:** Carefully place the assembled seat and backrest onto the gas lift cylinder, ensuring it is centered and stable.

OPERATING INSTRUCTIONS

Your Sweetcrispy office chair offers several adjustment features to customize your seating experience for optimal comfort and support.

Ergonomic Lumbar Support

Backrest with a Storage Basket



Image: Visual guide to the three main adjustment points on the chair: Tension Control, Seat Height, and Rocking Mode.

Adjustment Features

- **Seat Height Adjustment:** Locate the pneumatic adjustment lever (labeled '2' in the image above) on the right side beneath the seat. Pull the lever upwards to raise the seat. To lower the seat, remain seated and pull the lever downwards. The seat height can be adjusted within a range of 18.5 to 22.2 inches.

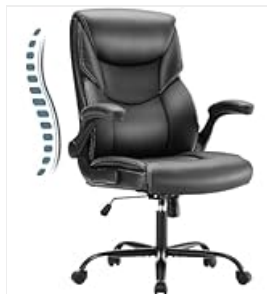


Image: The gas lift cylinder, responsible for smooth seat height adjustments.

- **Rocking Mode:** The chair features a 90-120 degree rocking mode. To activate or deactivate the rocking function, use the lever (labeled '3' in the image above) on the left side beneath the seat.

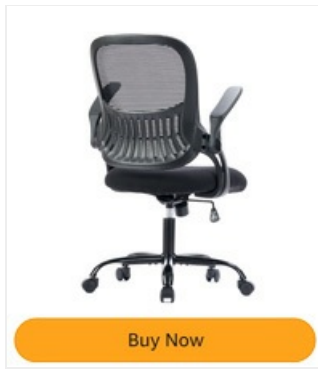


Image: Detail of the rocking mechanism, allowing for a 90-120 degree recline.

- **Tension Control:** Adjust the rocking tension by turning the round knob (labeled '1' in the image above) located at the front of the control mechanism. Turn clockwise to increase tension (making it harder to recline) and counter-clockwise to decrease tension (making it easier to recline).
- **360° Swivel:** The chair is designed to rotate 360 degrees for enhanced mobility and convenience.



Image: Close-up of the multi-direction casters, enabling smooth movement on various floor types.

MAINTENANCE

To ensure the longevity and optimal performance of your Sweetcrispy office chair, follow these simple maintenance guidelines:

- **Cleaning:** Wipe clean with a damp cloth. Avoid harsh chemicals or abrasive cleaners, as these may damage the mesh or fabric.
- **Regular Inspection:** Periodically check all screws and bolts to ensure they are tight. Re-tighten if necessary to maintain stability.
- **Caster Care:** Keep the casters free of hair and debris to ensure smooth rolling.

TROUBLESHOOTING

If you encounter any issues with your chair, please refer to the following common solutions:

- **Chair feels wobbly:** Ensure all assembly screws are securely tightened. Check that the gas lift is properly seated in the base.
- **Chair does not adjust height:** Verify that the pneumatic lever is functioning correctly and that the gas lift is not damaged. If the issue persists, contact customer support.
- **Casters not rolling smoothly:** Inspect casters for trapped debris (hair, lint, etc.) and clean them thoroughly.

For further assistance, please contact Sweetcrispy customer support.

SPECIFICATIONS

Detailed specifications for the Sweetcrispy Ergonomic Mid-Back Mesh Office Chair Model 718BK:

Product Dimension

Weight capacity: **250lbs**



Image: Front view of the chair, showcasing its design and dimensions.

Feature	Detail
Brand	Sweetcrispy
Model Name	Ergonomic Mid-Back Mesh Home Office Desk Chair with Wheels
Model Number	718BK
Color	Night Black
Product Dimensions	18"D x 20"W x 41"H
Seat Depth	17.5 inches
Seat Height Range	18.5 - 22.2 inches
Back Style	Solid Back (Mesh)
Special Features	Arm Rest, Ergonomic, Rolling, Swivel, Lumbar Support
Product Care Instructions	Wipe Clean
Recommended Uses	Gaming, Office, Reading

Style	Fixed Armrest
Room Type	Office
Included Components	A Chair, Assembly Tool, User Manual
Fill Material	Sponge
Furniture Base Movement	Swivel
Indoor/Outdoor Usage	Indoor
Reclining Position Count	3 (90-120 degree rocking)
Chair Backrest Width	18 Inches
Item Weight	21.4 pounds
Assembly Required	Yes
Maximum Weight Capacity	250 lbs

WARRANTY AND SUPPORT

For any questions, concerns, or warranty claims regarding your Sweetcrispy Ergonomic Mid-Back Mesh Office Chair, please contact Sweetcrispy customer support. Refer to your purchase documentation for specific warranty terms and contact information.

You can visit the official Sweetcrispy store for more information: [Sweetcrispy Store](#)