

Juskys 301652

Juskys Lago Roof Tent User Manual

Model: 301652

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Juskys Lago Roof Tent. Please read these instructions carefully before installation and operation. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

- Ensure the roof tent is securely mounted to your vehicle's roof rack system according to the installation guidelines.
- Verify the weight capacity of your vehicle's roof and roof rack before installation. The tent weighs approximately 57 kg.
- Do not exceed the maximum load capacity of the telescopic ladder (approximately 150 kg).
- Always check for proper tent closure and secure all straps before driving.
- Avoid using the tent in extreme weather conditions, such as strong winds or heavy snowfall.
- Keep open flames and heat sources away from the tent fabric.
- Ensure adequate ventilation to prevent condensation and maintain air quality inside the tent.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly.

- 1 x Juskys Lago Roof Tent
- 1 x Protective Cover
- 1 x Mattress (60mm high-density foam)
- 1 x Telescopic Ladder
- 2 x Black Shoe Bags
- 1 x Mounting Hardware Kit

- 1 x User Manual (this document)

4. SETUP AND INSTALLATION

The Juskys Lago Roof Tent is designed for quick and straightforward installation on compatible vehicle roof racks.

4.1 Mounting the Tent to the Roof Rack

1. Position the roof tent on your vehicle's roof rack. Ensure it is centered and aligned correctly.
2. Use the provided mounting hardware to secure the tent to the roof rack bars. Follow the specific instructions in the mounting hardware kit for tightening bolts and brackets.
3. Double-check all connections to ensure the tent is firmly attached and cannot shift during travel.

4.2 Deploying the Tent

1. Unlatch the protective cover and remove it.
2. Gently unfold the tent. The base will extend, creating the sleeping platform.
3. Extend the telescopic ladder to the ground, ensuring it is stable and at a safe angle. The ladder provides support for the extended tent section.
4. Insert the internal support poles to create the tent's structure. Secure them in their designated positions.
5. Attach the rainfly (if separate) and secure all guy ropes and stakes for stability.



Image 1: The Juskys Lago Roof Tent fully deployed on a vehicle. The tent is open, showing the sleeping area and the extended telescopic ladder providing access.

5. OPERATING THE TENT

5.1 Using the LED Lighting

The tent features an integrated LED ceiling light. Connect the USB cable to a compatible power source (e.g., power bank, car USB port) to activate the light.

5.2 Ventilation

Utilize the tent's windows and vents to ensure proper airflow. This helps reduce condensation and maintains a comfortable interior climate.

5.3 Packing Away the Tent

1. Remove all personal items from inside the tent.

2. Collapse the internal support poles.
3. Retract the telescopic ladder and store it securely.
4. Fold the tent base back onto itself, ensuring the fabric is neatly tucked in to avoid pinching.
5. Secure the tent with the integrated straps.
6. Place the protective PVC travel cover over the folded tent and secure all buckles and zippers.

6. MAINTENANCE

- **Cleaning:** Clean the tent fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow the tent to dry completely before packing it away to prevent mold and mildew.
- **Mattress Care:** The 60mm high-density foam mattress has a removable and washable cover. Follow the care instructions on the mattress cover label.
- **Zippers:** Periodically lubricate zippers with a silicone-based lubricant to ensure smooth operation.
- **Storage:** Store the tent in a dry, cool place when not in use. Ensure the protective cover is securely fastened.
- **Inspection:** Regularly inspect the tent fabric, poles, ladder, and mounting hardware for any signs of wear, damage, or corrosion. Replace damaged components as necessary.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent not opening/closing smoothly	Fabric caught in hinges; stiff hinges; damaged poles.	Check for obstructions; lubricate hinges; inspect and replace damaged poles.
Water leakage	Improper setup; damaged fabric; worn seams.	Ensure all zippers are closed and rainfly is properly positioned; inspect fabric for tears; apply seam sealer if necessary.
Condensation inside tent	Insufficient ventilation; high humidity.	Open windows and vents for better airflow; use a dehumidifier if available in enclosed spaces.
LED light not working	USB cable not connected; faulty power source; damaged LED strip.	Ensure USB cable is securely connected; try a different power source; contact support if LED strip is damaged.

8. SPECIFICATIONS

- **Model Name:** Lago
- **Model Number:** 301652
- **Dimensions (L x W x H):** 141 x 242 x 113 cm (deployed)
- **Mattress Dimensions (L x W x H):** 140 x 240 x 6 cm
- **Weight:** Approximately 57 kg
- **Exterior Tent Material:** 420D Diamond Ripstop Oxford Polyester
- **Interior Tent Material:** 420D Oxford Ripstop Polyester
- **Travel Cover Material:** 680 g/m² Heavy-Duty PVC
- **Mattress:** 60 mm High-Density Foam

- **Mattress Cover:** Polyester and Cotton
- **Tent Floor:** Anti-scratch Aluminum Layer and Fire-retardant EPS
- **Ladder:** Anodized Aluminum, Max. Load 150 kg
- **Internal Frame:** Anodized Aluminum Bars
- **Color:** Black/Grey
- **UV Protection:** UV 50+
- **Water Column:** 2500 mm
- **Capacity:** 2-3 persons

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Juskys customer service. Keep your proof of purchase for warranty claims.

Manufacturer: Juskys Gruppe GmbH

For further assistance, visit the official Juskys website or contact their customer support channels.

