

NuYupo DHC100

NuYupo DHC100 Cordless Vacuum Cleaner Instruction Manual

Model: DHC100

INTRODUCTION

This manual provides essential information for the safe and effective use of your NuYupo DHC100 Cordless Vacuum Cleaner. Please read all instructions carefully before operating the appliance and retain this manual for future reference.

SAFETY INSTRUCTIONS


- Always ensure the vacuum is fully charged before first use.
- Do not use the vacuum cleaner to pick up water or wet substances.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Store the vacuum in a dry, indoor area.
- Only use attachments recommended by the manufacturer.

PACKAGE CONTENTS

Verify that all components are present in your package:

- Cordless Vacuum Cleaner (Main Unit)
- 6x2600mAh Battery Pack
- Extension Tube
- LED Floor Brush
- Pet Hair Brush

- Dust Brush
- Dryer Vent Cleaner
- Hair Cleaning Tool
- HEPA Filter Suits (2 sets) & Metal Filter (1)
- Wall Hanger
- Original Charger
- User Manual

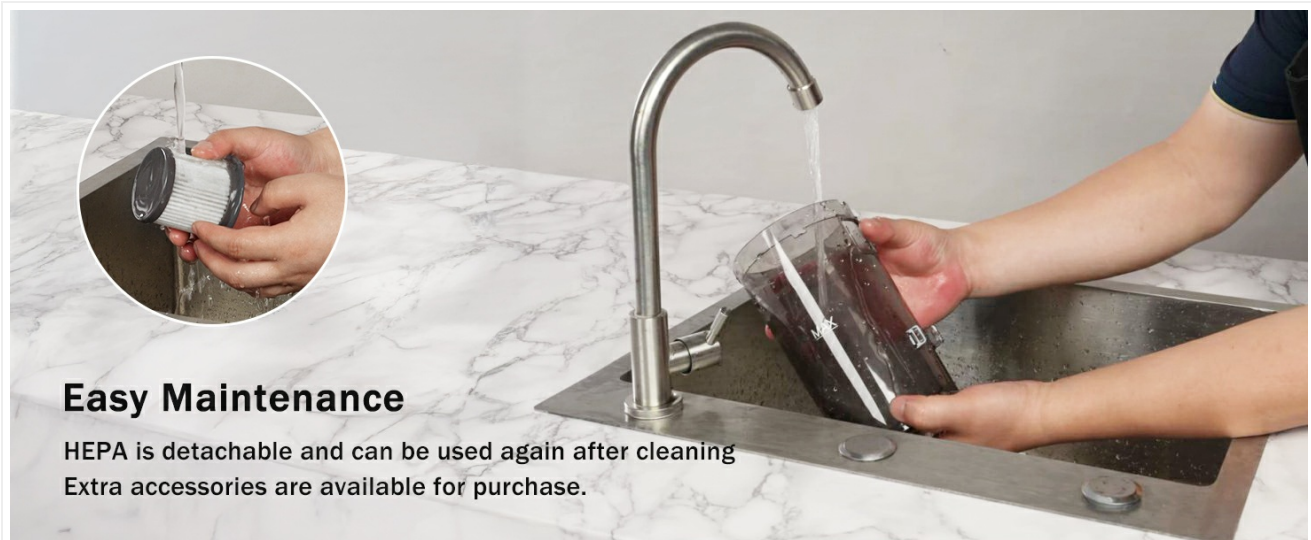

Easy Maintenance

HEPA is detachable and can be used again after cleaning
Extra accessories are available for purchase.

Image: All components included with the NuYupo DHC100 Cordless Vacuum Cleaner.

SETUP

1. Assembly

1. Attach the extension tube to the main vacuum unit until it clicks into place.
2. Connect the LED floor brush to the other end of the extension tube.
3. For handheld use, attach desired accessories (e.g., combination brush, pet hair brush) directly to the main unit.

Video: Demonstrates the assembly and features of the NuYupo DHC100 Cordless Vacuum Cleaner.

2. Charging the Battery

The 2600mAh detachable battery can be charged while attached to the vacuum or separately. Use the original charger provided.

- Connect the charger to the battery pack or the main unit.
- Plug the charger into a power outlet.
- The LED display will indicate charging status and battery level. A full charge takes approximately 4.5 hours.

Rechargeable Battery

6*2600mAh Battery can be charged separately



45 Mins
Low Suction



30 Mins
Mid Suction



20 Mins
Max Suction



Image: The detachable 2600mAh battery and its charging capabilities, showing approximate runtimes for different suction modes.



Image: The removable and rechargeable battery can be charged while connected to the vacuum or independently.

3. Wall-Mounted Storage

The included wall hanger allows for convenient storage and charging.

- Install the wall hanger in a suitable location using the provided screws.
- Hang the vacuum cleaner on the wall mount for storage and to charge.

Self-standing & Easy to Store



Image: The vacuum features a self-standing design for easy pausing during cleaning and convenient storage.

OPERATING INSTRUCTIONS

1. Power On/Off and Suction Modes

- Press the power button to turn the vacuum on or off.
- Use the LED touch screen to switch between the 3 suction modes: Eco, Mid, and Max.
- The screen displays real-time running status and remaining power.

LED Smart Touch Screen



Image: The LED Smart Touch Screen allows for easy monitoring of battery life and switching between 3 suction modes.

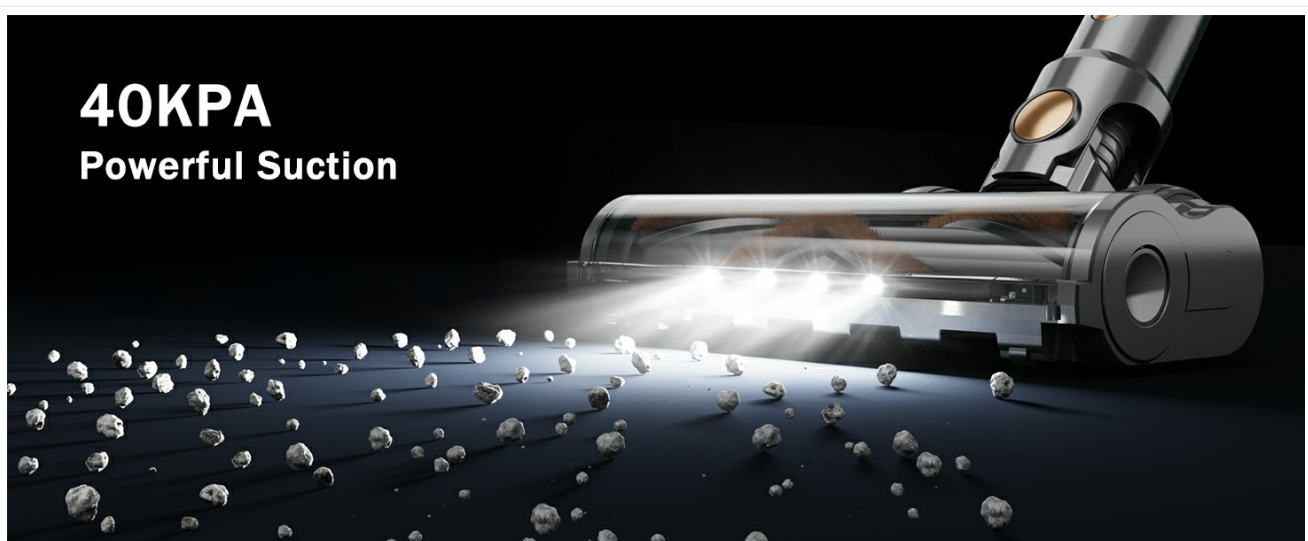


Image: The LED Smart Touch Screen monitors machine status and provides touch control for suction modes.

2. Cleaning Different Surfaces

- **Hard Floors & Carpets:** Use the LED floor brush for effective cleaning on various floor types. The V-shaped anti-tangle brush design helps prevent hair wrapping.
- **Under Furniture:** The 270° rotating brush head and flexible adjustment allow easy access under beds and other furniture.
- **Pet Hair:** Utilize the dedicated pet hair brush for efficient removal of pet hair from upholstery and carpets.
- **Crevices & Upholstery:** The combination brush is ideal for cleaning tight spaces, corners, and delicate surfaces.
- **Dryer Vents:** The dryer vent cleaner tool is designed for removing lint from dryer vents and other narrow areas.
- **High Areas:** The lightweight telescopic tube extends to reach curtains, cobwebs, and other high-up spots.

480W Powerful Suction



Image: The vacuum demonstrates powerful suction on a hard floor, effectively picking up debris.

Suitable for all floor types



Image: The vacuum is suitable for cleaning all floor types, from hard floors to carpets.

ANTI-TANGLE BRUSH



Image: The anti-tangle brush design minimizes hair wrapping, as shown in a comparison with other brush types.

LED Headlight & Flexible Adjustment

More clearly capture dust and dirt



Image: The LED headlight illuminates dust and dirt, while the flexible head allows for easy maneuverability (90° up/down, 180° left/right).

Multifunctional Easily Converts



Image: The 10-in-1 multifunctional design allows the vacuum to easily convert for cleaning sofas, curtains, staircases, car seats, pet hair, and dryer vents.


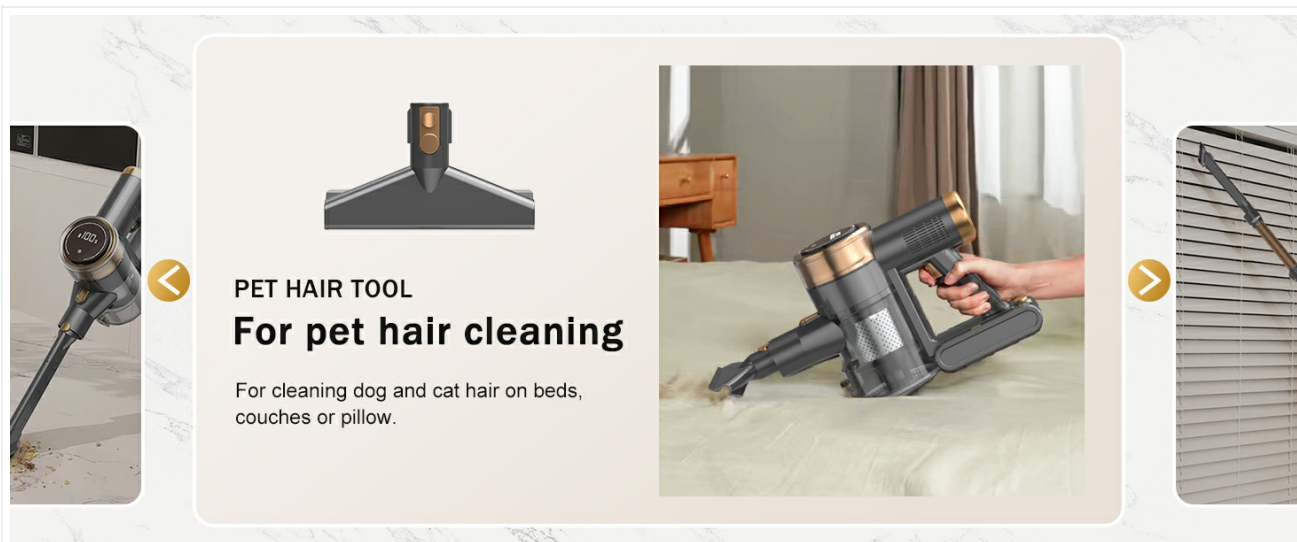


Image: The lightweight telescopic tube is ideal for reaching hard-to-access areas.

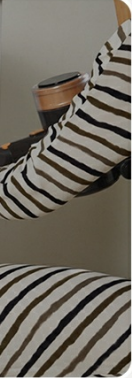


COMBINATION TOOL

For variety of crevices and surfaces

The included crevice tool features a circumferential row of adjustable bristles, perfect for cleaning crevices and upholstery dust buildup.





 
Image: The pet hair tool is specifically designed for cleaning dog and cat hair from beds, couches, or pillows.

7-Stage HEPA Filtration System

Traps Particles as Small as 0.1um with 99.99% Efficiency



Image: The dryer vent cleaner tool is engineered to clean dryer lint and other complex areas like refrigerator coils.

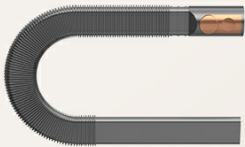DRYER VENT CLEANER TOOL

For Dryer Vent

Engineered to clean the dryer lint, and can also be used to clean the refrigerator coils, radiators and other complex areas.





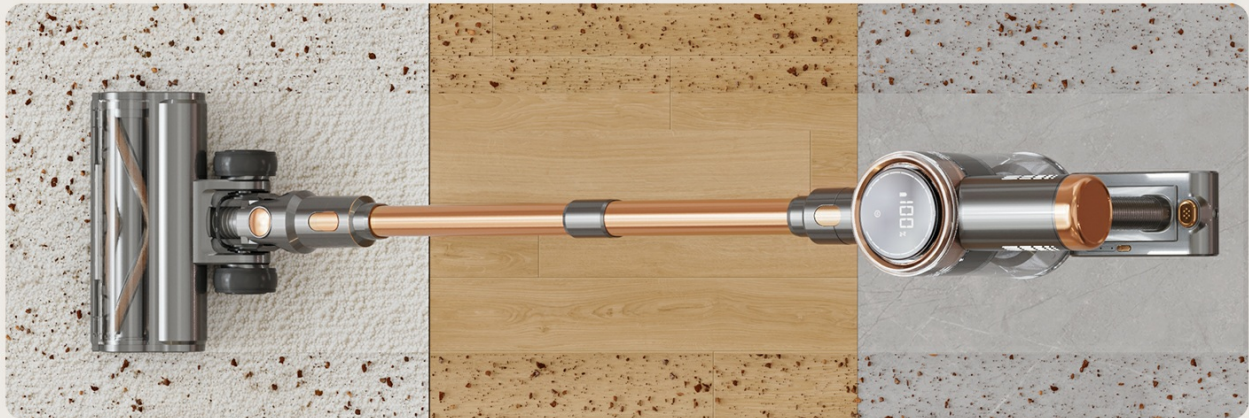
Image: The combination tool is perfect for cleaning crevices and upholstery dust buildup.

MAINTENANCE

1. Emptying the Dust Cup

The 1.5-liter dust cup features a one-click empty design for hygienic disposal of debris.

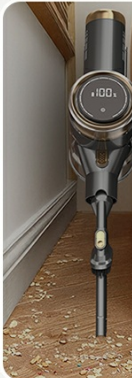- Position the dust cup over a trash bin.
- Press the release button to open the bottom flap and empty the contents.



Versatile Floor Cleaning

3 Suction Modes for Tailored Performance

Image: The 1.3L large dust cup can be emptied with a single click for efficient collection and less frequent emptying.

2. Cleaning Filters

The vacuum features a 6-stage HEPA filtration system. Regular cleaning of filters is crucial for optimal performance.

- Remove the HEPA filter from the dust cup.
- Tap off loose dirt or rinse under running water. Ensure the filter is completely dry before reinserting.
- It is recommended to clean the HEPA filter every 2-3 weeks and replace it every 3 months. An extra HEPA filter set is included.

One-Click Empty

1.3L Large Dust Cup
Efficient Collection, Less Frequent Emptying



Image: Easy maintenance: The HEPA filter is detachable and reusable after cleaning. Extra accessories are available for purchase.

LED Smart Touch Screen

Monitor Machine Status Whenever Needed



Battery
Indicator



Touch
Control



Image: The 7-stage HEPA filtration system traps particles as small as 0.1um with 99.99% efficiency, releasing clean air.

TROUBLESHOOTING

Refer to the following common issues and solutions:

Problem	Solution
Low suction or not picking up debris	• Check battery level and charge if low. • Ensure filters are clean and properly installed. • Remove the vacuum head and check for clogs in the suction inlet. • Inspect the vacuum stick for any blockages. • Check the dust bin air inlet for blockages. • Clean the filters and roller brush if they haven't been cleaned for a long time.
Vacuum won't turn on	• Ensure the vacuum is fully charged. • Check if the battery pack is damaged, loose, or incorrectly installed. • If unresponsive, record a video of the issue and contact Customer Service.
Battery won't charge	• Ensure you are using the original charger and it is properly plugged in. • Check the charger and cable for any damage. • Ensure environmental temperature is not below 24.8°F (-4°C). • If the battery is overheating, remove it and place it in a room-temperature environment to cool down.
Vacuum turns off automatically after short use	• Check for muffled suction sounds or if the dust bin cover is open. • Inspect the vacuum head, stick, and body for blockages. • Ensure the dust bin cover is fully closed.

Small Tip: Vacuum cleaners usually take some time to process particles, so keep the vacuum cleaner working for about 5 seconds before turning it off. If closed immediately, some heavier particles may fall off from the head.



Image: Common questions and answers for troubleshooting the NuYupo DHC100 Cordless Vacuum Cleaner.

SPECIFICATIONS

Feature	Detail
Brand	NuYupo
Model Number	DHC100
Motor Power	480W Brushless Motor
Suction Power	Up to 40KPA
Battery Type	6x2600mAh Lithium-Ion (Detachable)
Runtime	20-45 minutes (Eco mode: 45 mins, Mid mode: 30 mins, Max mode: 20 mins)
Charge Time	4.5 hours
Dust Cup Capacity	1.5 liters
Filtration System	6-Stage HEPA Filtration
Weight	5 pounds
Noise Level	68 dB
Control Method	Touch (LED Smart Touch Display)
Special Features	10-in-1 Multifunctional, LED Floor Brush, Self-Standing, Height Adjustable
Surface Recommendation	All floors (Hardwood, Carpet, Tiles)

WARRANTY AND SUPPORT

Your NuYupo DHC100 Cordless Vacuum Cleaner comes with a 24-month protection plan. For any issues or inquiries, please contact NuYupo customer service.

- **Warranty Period:** 24 months from the date of purchase.
- **Customer Service:** Available 24/7. Contact us via message or email for assistance.
- **Returns/Exchanges:** 30-day exchange and money-back policy.



Image: NuYupo is committed to creating healthier and more intelligent living spaces through innovative home cleaning technology.