

HORI NSW-499U

HORI Nintendo Switch Wireless HORIPAD (Teal) Instruction Manual

Model: NSW-499U

[Introduction](#) [Package Contents](#) [Parts Identification](#) [Setup](#) [Operating](#) [Maintenance](#)
[Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for purchasing the HORI Nintendo Switch Wireless HORIPAD. This controller is officially licensed by Nintendo and designed to enhance your gaming experience with the Nintendo Switch. It features Bluetooth wireless technology, a built-in rechargeable lithium-ion battery, and full motion control capabilities through its accelerometer and gyroscope. Please read this manual thoroughly to ensure proper setup and operation.

2. PACKAGE CONTENTS

Please ensure all items listed below are included in your package:

- HORI Nintendo Switch Wireless HORIPAD (Teal)
 - USB-C Charging Cable
-

3. PARTS IDENTIFICATION

Familiarize yourself with the various parts and controls of your Wireless HORIPAD.



Figure 3.1: Front View of the Wireless HORIPAD



Figure 3.2: Side View of the Wireless HORIPAD



Figure 3.3: Back/Top View of the Wireless HORIPAD with USB-C Port

3.1 Button Layout

- **Left Analog Stick:** For movement and camera control.
- **Right Analog Stick:** For camera control and aiming.
- **D-Pad:** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **L/R Buttons:** Shoulder buttons.
- **ZL/ZR Buttons:** Trigger buttons.
- **HOME Button:** Returns to the Nintendo Switch HOME Menu.
- **+ (Plus) Button:** Start/Pause button.
- **- (Minus) Button:** Select button.
- **Capture Button:** Takes screenshots or video clips.
- **USB-C Port:** For charging the controller.

4. SETUP

4.1 Charging the Controller

Before initial use, fully charge the Wireless HORIPAD. A full charge provides approximately 15 hours of playtime.

1. Connect the included USB-C charging cable to the USB-C port on the top of the controller.
2. Connect the other end of the USB-C cable to a USB port on your Nintendo Switch Dock or a compatible USB wall adapter.
3. The LED indicator on the controller will illuminate to show charging status. It will turn off or change color when fully charged.

4.2 Pairing with Nintendo Switch

Follow these steps to wirelessly connect your HORIPAD to your Nintendo Switch console:

1. From the Nintendo Switch HOME Menu, select **Controllers** > **Change Grip/Order**.
2. While on the Change Grip/Order screen, press and hold the **SYNC Button** on the top of the Wireless HORIPAD for a few seconds until the player LEDs begin to flash.
3. Once the controller is successfully paired, the player LED(s) corresponding to its player number will remain lit.
4. Press the **A Button** to confirm and exit the pairing screen.

The controller will automatically attempt to reconnect to the last paired Nintendo Switch console when powered on.

5. OPERATING INSTRUCTIONS

5.1 Basic Controls

The Wireless HORIPAD functions like a standard Nintendo Switch Pro Controller. Use the analog sticks for movement and camera control, the D-pad for directional input, and the A/B/X/Y buttons for in-game actions. The L/R and ZL/ZR buttons provide additional input options, commonly used for attacking, defending, or special abilities.

5.2 Motion Controls

This controller is equipped with an accelerometer and gyroscope, enabling full motion control in compatible Nintendo Switch games. Tilt, shake, or rotate the controller to interact with games that support these features. Ensure the controller is calibrated correctly within the Nintendo Switch system settings if you experience issues with motion sensing.

5.3 Battery Life

The built-in rechargeable lithium-ion battery provides over 15 hours of gameplay on a single charge. Battery life may vary depending on usage and game type. When the battery is low, the player LEDs may flash to indicate that charging is required. Connect the USB-C cable to recharge.

6. MAINTENANCE

6.1 Cleaning

To clean your Wireless HORIPAD, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with

water. Do not use harsh chemicals, abrasive cleaners, or solvents, as these can damage the controller's finish and internal components. Avoid getting moisture into any openings.

6.2 Storage

Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid placing heavy objects on the controller. If storing for an extended period, ensure the battery is partially charged (around 50%) to help maintain its longevity.

7. TROUBLESHOOTING

If you encounter any issues with your Wireless HORIPAD, please refer to the table below for common problems and solutions.

Issue	Solution
Controller does not connect to Nintendo Switch.	<ul style="list-style-type: none">• Ensure the controller is charged.• Repeat the pairing process (Section 4.2).• Ensure the Nintendo Switch console is updated to the latest system software.• Try restarting the Nintendo Switch console.
Controller does not charge.	<ul style="list-style-type: none">• Verify the USB-C cable is securely connected to both the controller and the power source.• Try a different USB-C cable or power source.• Ensure the power source is providing sufficient power.
Input lag or unresponsive buttons/sticks.	<ul style="list-style-type: none">• Ensure the controller is within the 32-foot wireless range of the console.• Minimize interference from other wireless devices.• Check the controller's battery level.• Recalibrate the analog sticks and motion controls in the Nintendo Switch system settings.
Motion controls are not working correctly.	<ul style="list-style-type: none">• Calibrate the motion controls in the Nintendo Switch system settings (HOME Menu > System Settings > Controllers and Sensors > Calibrate Motion Controls).• Ensure the game you are playing supports motion controls.

8. SPECIFICATIONS

Technical details for the HORI Nintendo Switch Wireless HORIPAD (Model NSW-499U):

Feature	Detail
---------	--------

Feature	Detail
Model Number	NSW-499U
Connectivity	Bluetooth Wireless
Wireless Range	Up to 32 feet (approx. 10 meters)
Battery Type	Rechargeable Lithium-ion
Battery Life	Approx. 15+ hours per charge
Charging Port	USB-C
Motion Control	Accelerometer, Gyroscope
Weight	1.18 pounds (approx. 0.54 kg)
Package Dimensions	7.05 x 6.22 x 3.03 inches (approx. 17.9 x 15.8 x 7.7 cm)
Manufacturer	HORI
Official License	Officially Licensed by Nintendo

9. WARRANTY & SUPPORT

For warranty information, technical support, or further assistance with your HORI Nintendo Switch Wireless HORIPAD, please visit the official HORI website or contact their customer support directly. Details regarding product warranty periods and service procedures are typically available on the manufacturer's official support pages.

Please retain your proof of purchase for any warranty claims.