

HP EliteDesk 705 G5 Mini PC

HP EliteDesk 705 G5 Mini PC User Manual

INTRODUCTION

This manual provides essential information for the setup, operation, maintenance, and troubleshooting of your HP EliteDesk 705 G5 Mini PC. Please read this guide thoroughly to ensure proper use and to maximize the lifespan of your device. This compact and powerful mini PC is designed for business and everyday use, offering robust performance in a small form factor.

SAFETY INFORMATION

- Always connect the PC to a grounded power outlet.
- Do not expose the PC to moisture or extreme temperatures.
- Ensure adequate ventilation around the PC to prevent overheating.
- Avoid placing heavy objects on top of the PC.
- Disconnect the power cord before cleaning or performing any maintenance.
- Use only the power adapter supplied with the device.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- HP EliteDesk 705 G5 Mini PC
- Power Adapter
- Power Cord
- Keyboard
- Mouse



Image: Included accessories such as the keyboard, mouse, and power cord.

PRODUCT OVERVIEW

The HP EliteDesk 705 G5 Mini PC is a compact desktop solution, designed for efficiency and performance. Its small footprint makes it ideal for various environments.

Front Panel



Image: Front view of the HP EliteDesk 705 G5 Mini PC, displaying the power button, USB ports, and audio jacks.

The front panel provides convenient access to frequently used ports:

- **Power Button:** To turn the PC on or off.
- **USB-C Port:** For connecting modern USB-C devices.
- **USB 3.0 Ports (SS):** For high-speed data transfer with compatible devices.
- **Headphone Jack:** For connecting headphones or external speakers.
- **Microphone Jack:** For connecting a microphone.

Rear Panel



Image: Rear view of the HP EliteDesk 705 G5 Mini PC, showing DisplayPort, USB ports, and Ethernet port.

The rear panel houses the main connectivity options:

- **DisplayPort:** For connecting to monitors or displays.
- **USB 3.0 Ports:** Additional ports for peripherals.
- **Ethernet Port:** For wired network connection.

- **Power Connector:** For connecting the power adapter.

SETUP

1. **Connect Peripherals:** Connect your monitor(s) to the DisplayPort(s) on the rear panel. Connect the keyboard and mouse to any available USB ports.
2. **Connect Power:** Plug the power adapter into the PC's power connector, then plug the power cord into a grounded electrical outlet.
3. **Power On:** Press the power button on the front panel of the PC. The system will boot up, and Windows 11 Pro will load.
4. **Initial Setup (if applicable):** Follow the on-screen instructions to complete any initial Windows 11 Pro setup, including network connection and user account creation.

OPERATING INSTRUCTIONS

Powering On/Off

- **To Power On:** Press the power button on the front of the PC.
- **To Shut Down:** Click the Start button in Windows 11, then select Power > Shut down.
- **To Restart:** Click the Start button in Windows 11, then select Power > Restart.
- **To Sleep:** Click the Start button in Windows 11, then select Power > Sleep.

Connecting to Networks

- **Wired Connection:** Connect an Ethernet cable from your router or modem to the Ethernet port on the rear of the PC.
- **Wireless (Wi-Fi) Connection:** Click the Wi-Fi icon in the taskbar, select your desired network, enter the password, and click Connect.
- **Bluetooth Devices:** Go to Windows Settings > Bluetooth & devices, turn on Bluetooth, and pair your devices.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the PC. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals.
- **Software Updates:** Regularly check for and install Windows updates to ensure system stability and security. Go to Settings > Windows Update.
- **Data Backup:** Periodically back up important data to an external drive or cloud storage to prevent data loss.
- **Ventilation:** Ensure that the vents on the PC are not blocked to maintain proper airflow and prevent overheating.

TROUBLESHOOTING

Problem	Possible Solution
PC does not power on	Check power cable connections to the PC and the wall outlet. Ensure the power adapter is functioning.

Problem	Possible Solution
No display on monitor	Verify monitor power and cable connections. Ensure the correct input source is selected on the monitor. Try a different display cable or port.
No internet connection	For wired: Check Ethernet cable. For Wi-Fi: Ensure Wi-Fi is enabled and connected to the correct network. Restart your router/modem.
Slow performance	Close unnecessary applications. Check for background processes. Ensure Windows is up to date. Consider running a disk cleanup.
Audio not working	Check speaker/headphone connections. Verify audio output settings in Windows. Ensure volume is not muted.

SPECIFICATIONS

Feature	Detail
Brand	HP
Model Name	HP EliteDesk 705 G5 Mini PC
Operating System	Windows 11 Pro
CPU Model	AMD Ryzen 5 PRO 3400GE
CPU Speed	3.3 GHz
RAM Memory Installed	16 GB DDR4
Memory Storage Capacity	512 GB SSD
Graphics Coprocessor	AMD Radeon Vega 11 Graphics
Wireless Connectivity	Wi-Fi, Bluetooth
Item Dimensions (LxWxH)	11.7 x 3.7 x 10.6 inches
Total USB Ports	6
Video Output	DisplayPort

WARRANTY AND SUPPORT

This HP EliteDesk 705 G5 Mini PC, being a renewed product, typically comes with a **90-day warranty**. For specific warranty details and to initiate a claim, please refer to your purchase documentation or contact the seller directly. Additionally, free U.S.-based technical support is often provided for renewed PCs. For assistance, please contact the support channels specified by your vendor.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question