

[manuals.plus](#) /

› [Dyson](#) /

› [Dyson Airstrait™ Straightener User Manual - Model 143280-01](#)

Dyson 143280-01

Dyson Airstrait™ Straightener User Manual

Model: 143280-01

1. PRODUCT OVERVIEW

The Dyson Airstrait™ Straightener is engineered to dry and straighten hair simultaneously, transitioning from wet to dry. It is designed to create a natural straight finish for multiple hair types without using hot plates, thereby minimizing heat damage. This innovative tool simplifies your hair routine by combining two steps into one.

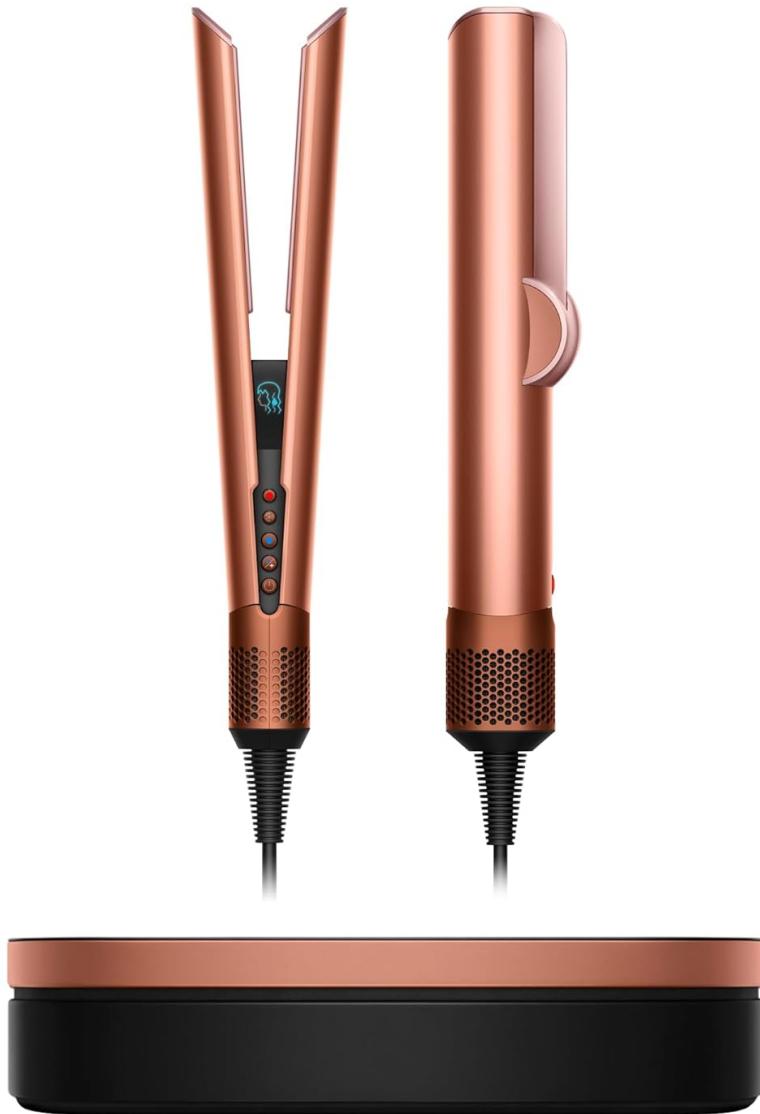


Image: The Dyson Airstrait™ Straightener, showcasing its sleek design and the open plates.

Key Benefits:

- **Wet to Finished Look:** Style your hair from damp to a finished look with a single device.
- **No Heat Damage:** Air is precisely heated and projected evenly through the hair tress as you style, protecting hair strength and shine.
- **Efficient Styling:** The device senses when hair is between the arms and automatically reduces airflow when not in use, ensuring quieter and more efficient operation.

2. WHAT'S IN THE Box

Your Dyson Airstrait™ Straightener package includes the following items:

- Dyson Airstrait™ Straightener
- Heat-resistant mat
- Power cord



Naturally straight blow out

A polished, everyday look,
straightened from wet

Image: The Dyson Airstrait™ Straightener, its heat mat, and power cord as packaged.

3. SETUP

Follow these steps to set up your Dyson Airstrait™ Straightener for first use:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Connect to Power:** Plug the power cord into a suitable electrical outlet. Ensure the power adapter is securely connected to the device.
3. **Unlock Arms:** Slide the lock button located at the base of the straightener to release the arms. The device will emit a sound and the display will activate.
4. **Select Language:** Upon first use, the device may prompt you to select a language. Use the control buttons to navigate and confirm your selection.

4. OPERATING INSTRUCTIONS

The Dyson Airstrait™ offers versatile styling options for both wet and dry hair.

4.1. Wet Mode Styling

For best results, start with towel-dried hair. This mode is designed to dry and straighten simultaneously.

1. **Prepare Hair:** Ensure hair is damp, not dripping wet. Detangle thoroughly.
2. **Select Wet Mode:** Press the appropriate button on the device to activate Wet mode. The display will show a wet hair icon.
3. **Adjust Settings:** Select your desired airflow and temperature. For initial drying, maximum airflow and high temperature are recommended.
4. **Rough Dry Roots (Optional):** If roots are very wet, lock the arms and use the device to rough dry the roots until damp.
5. **Section Hair:** Divide your hair into manageable sections using clips.
6. **Straighten:** Unlock the arms. Take a section of hair and glide the Airstrait™ from root to tip, ensuring even tension. Repeat until the section is dry and straight.



Image: A user styling damp hair with the Dyson Airstrait™ Straightener.

4.2. Dry Mode Styling

Use Dry mode for touch-ups or to refresh your style on already dry hair.

1. **Select Dry Mode:** Press the appropriate button on the device to activate Dry mode. The display will show a dry hair icon.

2. **Adjust Settings:** Select your desired airflow and temperature. A Boost mode is available if additional heat is required for stubborn sections.
3. **Section Hair:** Divide your hair into manageable sections.
4. **Straighten:** Glide the Airstrait™ through each section to smooth and align hair for a refreshed look.



Image: A user styling dry hair with the Dyson Airstrait™ Straightener.

4.3. Controls and Settings

The Dyson Airstrait™ features intuitive controls for precise styling:

- **Power Button:** Turns the device on/off.
- **Mode Selection:** Toggle between Wet and Dry modes.
- **Temperature Settings:** Adjustable temperatures for Wet mode (175°F, 230°F, 285°F) and Dry mode (250°F, 285°F, Boost).
- **Airflow Settings:** Control the intensity of the airflow (Low, Medium, High).
- **Cool Shot:** Activates a burst of cool air to set your style.



No heat damage

Preserves hair strength, promotes less breakage, and protects natural shine to leave hair feeling healthy.



Easy natural styling

Creates a naturally straight style with reduced frizz and flyways, for a smooth and shiny finish, to leave hair feeling softer while keeping natural volume.



Convenience without compromise

Combines two steps in one - drying and styling - saving you time without compromising your style or hair health.

Image: Detailed view of the control buttons and digital display on the Dyson Airstrait™.

Auto-Pause Feature: The device will automatically pause airflow after 3 seconds of inactivity to conserve energy and reduce noise.

5. MAINTENANCE

Proper care ensures the longevity and optimal performance of your Dyson Airstrait™ Straightener.

- **Cleaning:** Always unplug the device before cleaning. Wipe the exterior with a soft, damp cloth.
- **Filter Maintenance:** Regularly check and clean the filter located at the base of the handle to prevent blockages and maintain airflow performance. Refer to the visual guide on the filter for instructions.
- **Storage:** Store the straightener in a safe, dry place, ideally on its heat-resistant mat or in its original packaging.

In the box



Image: The filter area of the Dyson Airstrait™ Straightener, important for maintenance.

6. TROUBLESHOOTING

If you encounter any issues with your Dyson Airstrait™ Straightener, refer to the following common solutions:

- **Device Not Turning On:** Ensure the power cord is securely plugged into both the device and a functional electrical outlet. Check for any tripped circuit breakers.
- **Hair Not Straightening Effectively:** Ensure your hair is damp (not soaking wet or completely dry for Wet mode). Use smaller sections of hair and glide the device slowly and evenly from root to tip. Verify the correct temperature setting for your hair type.
- **Excessive Frizz:** Ensure hair is adequately detangled before styling. Apply a small amount of heat protectant or anti-frizz serum. Use the Cool Shot feature at the end of styling to help set the hair and reduce frizz.
- **Device Feels Heavy:** The Airstrait™ is designed for efficient styling. If fatigue occurs, take short breaks between sections. Utilize the provided heat-resistant mat to rest the device.
- **Unusual Noises or Reduced Airflow:** Check the filter for any debris or blockages and clean it as per the maintenance instructions.

7. SPECIFICATIONS

- **Product Dimensions:** 13 x 1.6 x 1.6 inches
- **Weight:** 5.8 Pounds
- **Item Model Number:** 143280-01
- **UPC:** 885609040622
- **Manufacturer:** Dyson
- **Hair Type Compatibility:** All
- **Number of Items:** 1
- **Unit Count:** 1.0 Ounce
- **GTIN:** 885609040622

8. WARRANTY AND SUPPORT

Your Dyson Airstrait™ Straightener comes with a **2-year warranty** from the manufacturer, Dyson, covering defects in materials and workmanship under normal use.

For returns, a **30-day return policy** is typically offered. Please refer to your retailer's specific return policy for details.

For further assistance, product registration, or to access detailed support resources, please visit the official Dyson website or contact Dyson customer service directly.