

[manuals.plus](#) /

› [FLEXISPOT](#) /

› [FLEXISPOT EC5 Lite Electric Height Adjustable Desk User Manual](#)

FLEXISPOT EC5S+1208+White

FLEXISPOT EC5 Lite Electric Height Adjustable Desk User Manual

Model: EC5S+1208+White

INTRODUCTION

Thank you for choosing the FLEXISPOT EC5 Lite Electric Height Adjustable Desk. This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your new desk. Please read this manual thoroughly before use and retain it for future reference.



Image: The FLEXISPOT EC5 Lite Electric Height Adjustable Desk, showcasing its spacious desktop and sturdy frame, equipped with a monitor and laptop.

SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Keep children and pets away from the desk during operation.
- Do not overload the desk. The maximum load capacity is 100 kg.
- Avoid placing liquids directly on the control panel or near electrical components.
- In case of malfunction, disconnect power immediately and contact customer support.
- The desk features an anti-collision system. Ensure there are no obstructions in the desk's path during height adjustment.

SETUP AND ASSEMBLY

Assembly of the FLEXISPOT EC5 Lite desk is required. Please follow the instructions provided in the separate assembly guide included with your product. Ensure all parts are present and undamaged before beginning assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the packing list.
2. **Assemble Frame:** Attach the T-shaped legs to the desk frame, ensuring all screws are tightened securely.
3. **Attach Desktop:** Secure the desktop to the assembled frame. The desktop is a single-piece design, offering waterproof, scratch-resistant, and smooth properties.
4. **Connect Control Panel:** Plug in the digital control panel and motor cables as per the assembly guide.
5. **Power Connection:** Connect the power cable to a suitable power outlet.



Image: Illustration of the desk's height adjustment range, demonstrating its minimum height of 60cm and maximum height of 125cm, suitable for various user heights.

OPERATING INSTRUCTIONS

The EC5 Lite desk features a user-friendly digital control panel for easy height adjustment and memory functions.



Image: Close-up of the digital control panel, highlighting its intuitive buttons for up/down movement, four memory presets, LED display, and anti-collision system.

- **Adjusting Height:** Use the **Up** and **Down** arrow buttons on the control panel to raise or lower the desk to your desired height. The current height will be displayed on the LED screen.
- **Memory Presets:** The desk has 4 programmable memory presets.
 - a. Adjust the desk to your preferred height.
 - b. Press the "M" button (or similar memory set button, if present, otherwise assume direct number press).
 - c. Press one of the numbered preset buttons (**1, 2, 3, or 4**) within 3 seconds to save the current height to that position.
 - d. To recall a saved height, simply press the corresponding numbered preset button. The desk will automatically move to the saved position.
- **Anti-Collision System:** The desk is equipped with an anti-collision feature. If the desk encounters an obstruction

during height adjustment, it will automatically stop and reverse slightly to prevent damage.

- **Dual Motor System:** The dual motor system ensures smooth, quiet (under 50 dB), and efficient height adjustment with a lifting speed of 25 mm/s.

MAINTENANCE

- **Cleaning:** Wipe the desk surface and frame with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Cable Management:** Periodically check and organize cables to prevent tangling or damage.
- **Inspection:** Regularly inspect all screws and connections to ensure they remain tight.
- **Motor Care:** The dual motors are designed for durability. Avoid excessive or continuous operation without short breaks.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected; Control panel error; Overload.	Check power connection; Reset by unplugging for 10 seconds and replugging; Reduce load on desk.
Desk moves unevenly or makes unusual noise.	Loose connections; Obstruction; Motor issue.	Check all assembly connections; Remove any obstructions; Contact support if issue persists.
Anti-collision system frequently triggers.	Obstruction in path; Sensitivity setting (if adjustable).	Ensure clear path for desk movement; Refer to assembly guide for sensitivity adjustment if applicable.
Memory presets not working.	Incorrect saving procedure.	Re-save presets following the operating instructions carefully.

If you encounter any issues not listed here, or if the suggested solutions do not resolve the problem, please contact FLEXISPOT customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model Number	EC5 LITE SET (EC5S+1208+White)
Color	Grey + White
Product Dimensions	120D x 80W x 125H cm (120 x 80 cm desktop)
Item Weight	25 kg
Height Adjustment Range	60 cm to 125 cm
Load Capacity	100 kg
Motor Type	Dual Motor

Feature	Detail
Lifting Speed	25 mm/s
Noise Level	Under 50 dB
Leg Sections	Three-section legs
Control Features	LED Display, 4 Memory Presets, Anti-collision System
Desktop Thickness	2.5 cm
Desktop Properties	Waterproof, Scratch-resistant, Smooth
Assembly Required	Yes



Image: An illustration detailing the dual motor system's capabilities, including a 100 kg load capacity, energy efficiency, 25 mm/s lifting speed, and quiet operation under 50 dB.

WARRANTY AND SUPPORT

FLEXISPOT stands behind the quality of its products. The EC5 Lite desk comes with the following warranty:

- **Frame:** 5-year warranty
- **Motor:** 3-year warranty
- **Technical Support:** Free lifetime technical support

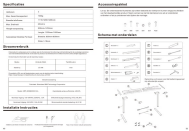
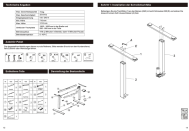

For warranty claims, technical assistance, or any inquiries, please contact FLEXISPOT customer service. Refer to the contact information provided on the product packaging or the official FLEXISPOT website.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found for this model.



Related Documents - EC5S+1208+White

	<p>Flexispot E5 Elektrisch Zit-Sta Bureau Installatiehandleiding en Gebruikersgids</p> <p>Gedetailleerde handleiding voor de installatie, bediening en probleemoplossing van het Flexispot E5 elektrisch zit-sta bureau. Inclusief specificaties, onderdelenlijst en veiligheidsinstructies.</p>
	<p>Flexispot Elektrisch Zit-Sta Bureau Handleiding en Specificaties</p> <p>Gedetailleerde handleiding voor het Flexispot elektrische zit-sta bureau, inclusief specificaties, installatie-instructies, bedieningspaneel functies, probleemoplossing en veiligheidsinformatie.</p>
	<p>Flexispot EF1 Höhenverstellbarer Schreibtisch Montageanleitung</p> <p>Umfassende Anleitung zur Montage und Bedienung des Flexispot EF1 elektrisch höhenverstellbaren Schreibtisches. Enthält technische Spezifikationen, Teilelisten, detaillierte Installationsschritte und Bedienfeldinformationen.</p>
	<p>FlexiSpot DT3B-EU User Manual and Warranty Information</p> <p>Comprehensive user manual for the FlexiSpot DT3B-EU height adjustable desk frame, including detailed assembly instructions, parts list, and warranty coverage information.</p>
	<p>Hollymatic Model 120 Precision Bulker Operator's Manual and Parts List</p> <p>This manual provides operating instructions, safety guidelines, and a parts list for the Hollymatic Model 120 Precision Bulker, designed for serial numbers beginning with 4600. It covers setup, operation, lubrication, disassembly, cleaning, and electrical schematics.</p>
	<p>FlexiSpot E7B/E7S/E7W-CA Standing Desk Assembly Guide FlexiSpot</p> <p>Comprehensive assembly guide for the FlexiSpot E7B, E7S, and E7W-CA electric standing desk frames. Learn how to install, operate, and troubleshoot your FlexiSpot desk.</p>