

Y4AW1495

Nordic Acrylic Geometric LED Ceiling Lamp

MODEL: Y4AW1495

Introduction

This manual provides instructions for the safe installation, operation, and maintenance of your Nordic Acrylic Geometric LED Ceiling Lamp. Please read this manual thoroughly before installation and retain it for future reference.

Safety Instructions

- Ensure power is disconnected at the circuit breaker before installation, maintenance, or bulb replacement.
- All electrical connections must be performed by a qualified electrician and comply with local codes and ordinances.
- Do not install on surfaces that are not structurally sound.
- Do not modify the lamp or its components.
- Keep packaging materials out of reach of children.
- This lamp is designed for indoor use only.

Package Contents

Verify that all components are present and undamaged before beginning installation.

- 1 x LED Ceiling Light Fixture
- 1 x Remote Control
- 1 x Set of Mounting Accessories (screws, anchors, wire connectors)

Specifications

Feature	Description
Model Number	Y4AW1495
Dimensions (42cm variant)	Diameter: 42 cm (16.5 inches), Height: 10 cm (3.9 inches)
Power (42cm variant)	24W
Lumen Output (42cm variant)	2380 Lumens
Material	Metal, Acrylic, Wood
Light Source	Integrated LED
Working Voltage	110V~240V
Life Expectancy	50,000 hours
Dimming	Stepless Dimming (10% to 100%)
Color Temperature	Adjustable (3000K-6500K)
Control Method	Remote Control

Note: Specifications may vary slightly for different size variants (e.g., 52cm diameter).

Setup (Installation)


This lamp requires hard-wired installation. Professional installation by a qualified electrician is recommended.

- Prepare for Installation:** Turn off power at the main circuit breaker. Ensure the power is completely off before proceeding.
- Mounting Bracket:** Secure the mounting bracket to the ceiling junction box using the provided screws. Ensure the bracket is firmly attached.
- Wire Connections:** Connect the lamp's wires to your household electrical wires according to standard wiring practices (e.g., live to live, neutral to neutral, ground to ground). Use appropriate wire connectors.
- Attach Lamp Body:** Carefully lift the lamp fixture and align it with the mounting bracket. Secure the lamp body to the bracket using the provided screws. Ensure no wires are pinched.
- Restore Power:** Once the lamp is securely installed, restore power at the circuit breaker.

power:24W



Image: Lamp dimensions (42cm diameter, 10cm height).

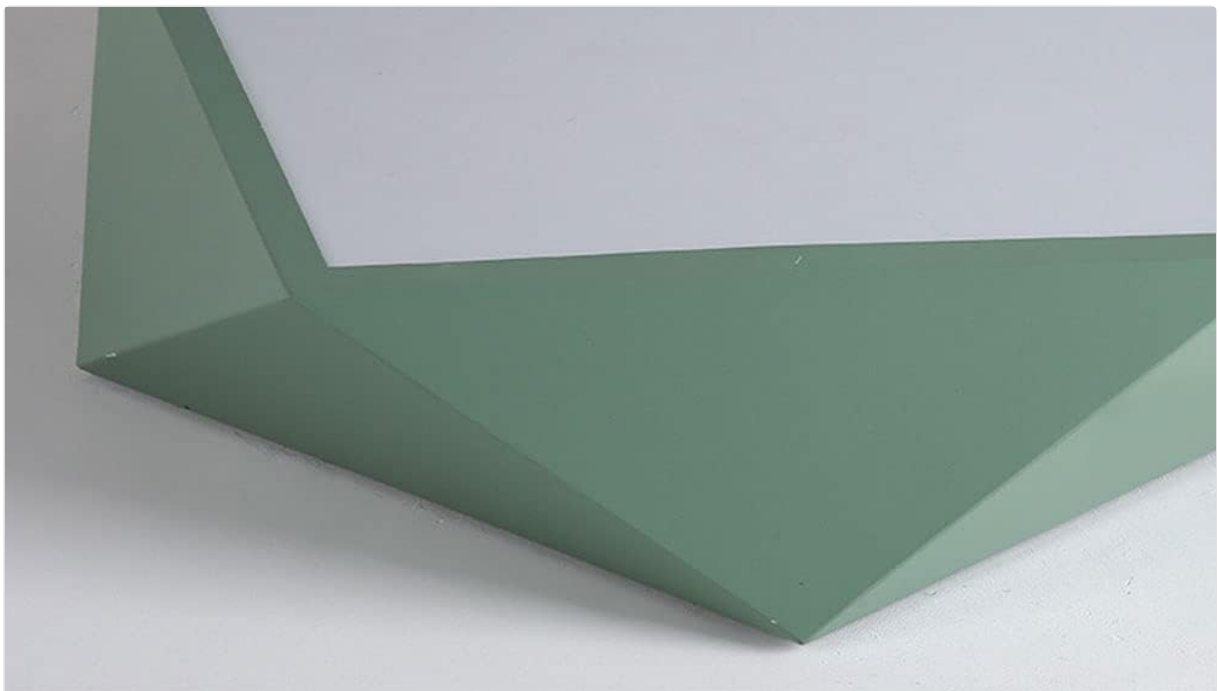

Painted wrought iron lamp body

Image: Painted wrought iron lamp body detail.



Energy-saving LED light source

Image: Energy-saving LED light source.



Acrylic lampshade, uniform light, strong light transmission

Image: Acrylic lampshade detail.

Operating Instructions

The lamp is controlled using the included remote control.

- **Power On/Off:** Press the power button on the remote control to turn the lamp on or off.
- **Brightness Adjustment (Dimming):** Use the brightness buttons (usually marked with '+' and '-') to adjust the light intensity from 10% to 100%.
- **Color Temperature Adjustment:** Use the color temperature buttons (often marked with 'K' or sun/moon icons) to change the light color from warm white (3000K) to cool white (6500K).

Stepless dimming design, one-button remote control,
Free control of color temperature and brightness

Stepless dimming

Can use remote control

Adjust brightness/color temperature



Warm 3000K-6000K Toning Cool Bright 100%-0% Freely adjustable

Adjust the color temperature as you like

Adjust light and shade as you like

Image: Remote control for stepless dimming and color temperature adjustment.

Maintenance

To ensure the longevity and appearance of your lamp:

- **Cleaning:** Disconnect power before cleaning. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or acrylic.
- **LEDs:** The integrated LED light source is designed for long life and is not user-replaceable.

Troubleshooting

Problem	Possible Cause	Solution
Lamp does not turn on.	No power, loose wiring, remote control battery dead.	Check circuit breaker. Verify wire connections. Replace remote control battery.
Remote control not working.	Remote control battery dead, remote out of range, interference.	Replace remote control battery. Ensure remote is within range of the lamp. Remove any obstructions.
Light flickers or dims unexpectedly.	Unstable power supply, loose connection.	Consult a qualified electrician to check power supply. Verify wire connections.

Warranty and Support

If you have any questions or require assistance with this product, please contact the seller or manufacturer directly. Please have your model number (Y4AW1495) and purchase information ready when contacting support.

Product Overview Images



Image: Overall view of the ceiling lamp.



Image: Lamp installed in a living space.



Image: Lamp installed in a bedroom setting.