

[manuals.plus](#) /

› [SKMEI](#) /

› [SKMEI 2402 Men's Dual Display Sports Watch Instruction Manual](#)

SKMEI SKMEI-2298

SKMEI 2402 Men's Dual Display Sports Watch Instruction Manual

Your guide to setting up, operating, and maintaining your SKMEI 2402 sports watch.

1. PRODUCT OVERVIEW

The SKMEI 2402 is a versatile men's sports watch designed for active individuals. It features a dual display combining analog and digital timekeeping, along with multiple functions including a chronograph, alarm, LED backlight, and 50M water resistance. Its robust construction and functional design make it suitable for various activities.

- **Dual Display:** Analog and digital time display for comprehensive timekeeping.
- **Multi-Functionality:** Includes 3 time zones, chronograph, week and date display, LED backlight, and alarm.
- **Waterproof:** 50M water resistance suitable for swimming and daily water exposure.
- **Durable Design:** Features an ABS + zinc alloy case and a comfortable TPU strap.



Image 1.1: Front view of the SKMEI 2402 Dual Display Sports Watch, showcasing its analog and digital elements.

2. COMPONENTS AND CONTROLS

Familiarize yourself with the watch's components and control buttons:



Watch Case



Watch Dial



Watch Band



Watch mirror



Watch Clasp



Back cover

Image 2.1: Diagram illustrating the various components of the SKMEI 2402 watch, including the watch case, dial, band, clasp, mirror, and back cover.

- **A Button (Top Left):** Used for activating the LED backlight.
- **B Button (Bottom Left):** Used to cycle through modes (Time, Alarm, Chronograph, Dual Time).
- **C Button (Top Right):** Used for Start/Stop in Chronograph mode, and for adjusting settings.
- **D Button (Bottom Right):** Used for Reset in Chronograph mode, and for adjusting settings.
- **Crown (Right Side):** Used for setting analog time.

3. SETUP AND BASIC OPERATION

3.1 Setting Analog Time

1. Pull out the crown on the right side of the watch.
2. Rotate the crown to adjust the analog hands to the desired time.
3. Push the crown back in to secure the analog time.

3.2 Setting Digital Time, Date, and Day

1. From the normal time display, press the **B button (MODE)** repeatedly until the digital time display starts

flashing, indicating it's in setting mode.

2. Press the **C button (START)** to select the item you wish to adjust (seconds, hour, minute, month, date, day of week).
3. Press the **D button (RESET)** to increase the selected value. Hold **D** to rapidly advance.
4. Once all settings are adjusted, press the **B button (MODE)** to exit the setting mode and return to the normal time display.

3.3 Setting Alarm

1. From the normal time display, press the **B button (MODE)** until 'AL' (Alarm) appears on the digital display.
2. Press the **C button (START)** to select the hour or minute setting. The selected value will flash.
3. Press the **D button (RESET)** to adjust the hour or minute.
4. Press **C** again to switch between hour and minute.
5. Press **B** to exit alarm setting mode.
6. To activate/deactivate the alarm, press **C** while in alarm mode. An alarm icon will appear/disappear.

3.4 Using the Chronograph (Stopwatch)

1. From the normal time display, press the **B button (MODE)** until 'CHRO' (Chronograph) appears. The display will show '00:00:00'.
2. Press the **C button (START)** to begin timing.
3. Press **C** again to pause timing.
4. Press the **D button (RESET)** to reset the chronograph to zero while paused.
5. To resume timing after pausing, press **C**.
6. Press **B** to exit chronograph mode.

3.5 Activating LED Backlight

Press the **A button (LIGHT)** on the top left of the watch to illuminate the digital display and analog hands for a few seconds. This feature enhances visibility in low-light conditions.



Image 3.1: The SKMEI 2402 watch with its green LED backlight activated, showing enhanced visibility of the digital display and analog markers in the dark.

3.6 Setting Dual Time Zone

The watch supports setting an additional time zone. This is useful for travelers or those who need to track time in different regions.

1. From the normal time display, press the **B button (MODE)** until 'DUAL TIME' appears.
2. Press the **C button (START)** to select the hour or minute setting for the second time zone. The selected value will flash.
3. Press the **D button (RESET)** to adjust the hour or minute.
4. Press **C** again to switch between hour and minute.
5. Press **B** to exit dual time setting mode.

3.7 12/24 Hour Format

To switch between 12-hour and 24-hour formats, press the **C button (START)** while in the normal digital time display mode. The display will toggle between 'AM/PM' indication (12-hour) and no indication (24-hour).

4. MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth to remove dirt and sweat. For stubborn grime, a slightly damp cloth can be used, followed by drying.
- **Water Resistance:** The watch is 50M water resistant. This means it is suitable for swimming, showering, and general water exposure. **Do not press any buttons while the watch is submerged in water** as this can compromise the water seal. Avoid exposure to hot water or steam, which can damage seals.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods, as this can affect battery life and accuracy.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and other chemicals, which can damage the strap, case, or seals.
- **Battery Replacement:** When the display dims or functions become erratic, it may be time to replace the battery. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and water resistance.

Your browser does not support the video tag.

Video 4.1: An official video demonstrating the features and water resistance of the SKMEI 2402 watch. This video shows the watch's design, backlight function, and its ability to withstand water exposure.

5. TROUBLESHOOTING

If you encounter any issues with your SKMEI 2402 watch, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery. Consult a professional watch technician.
Analog hands are not moving.	Crown is pulled out; low battery.	Push the crown back in. If still not moving, replace the battery.
Water inside the watch.	Buttons pressed underwater; damaged seal.	Immediately take the watch to a professional for inspection and repair. Avoid further water exposure.
Digital time is incorrect.	Time not set correctly.	Refer to Section 3.2 for setting digital time.

6. SPECIFICATIONS

Key technical specifications for the SKMEI 2402 watch:



Image 6.1: An overview of the SKMEI 2402 watch's functions, including 3 time zones, stopwatch, week, alarm, date, LED light, 50M water resistance, and 12/24 hour format.

- **Model Number:** SKMEI-2298
- **Display Type:** Analog and Digital
- **Water Resistance:** 5 ATM (50 meters)
- **Case Material:** ABS + Zinc Alloy
- **Strap Material:** TPU
- **Functions:** Dual Time, Chronograph, Alarm, Date, Week, LED Backlight, 12/24 Hour Format
- **Battery Code:** CR2016/SR626SW (as indicated on back cover)

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official SKMEI brand store or contact your

retailer. Keep your purchase receipt as proof of purchase.

Visit the official SKMEI Store for more products and support:[SKMEI Official Store](#)