

[Manuals.plus](#) /

› [XP-Pen](#) /

› XPPen Deco 01 V3 Drawing Tablet User Manual

XP-Pen Deco 01 V3

XPPen Deco 01 V3 Drawing Tablet User Manual

Model: Deco 01 V3

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, and maintaining your XPPen Deco 01 V3 Drawing Tablet. Please read this guide thoroughly to ensure proper use and to maximize your creative experience.

2. WHAT'S IN THE BOX

- 1 x Digital Pen
- 1 x Stylus
- 1 x USB Cable
- 1 x Quick Start Guide

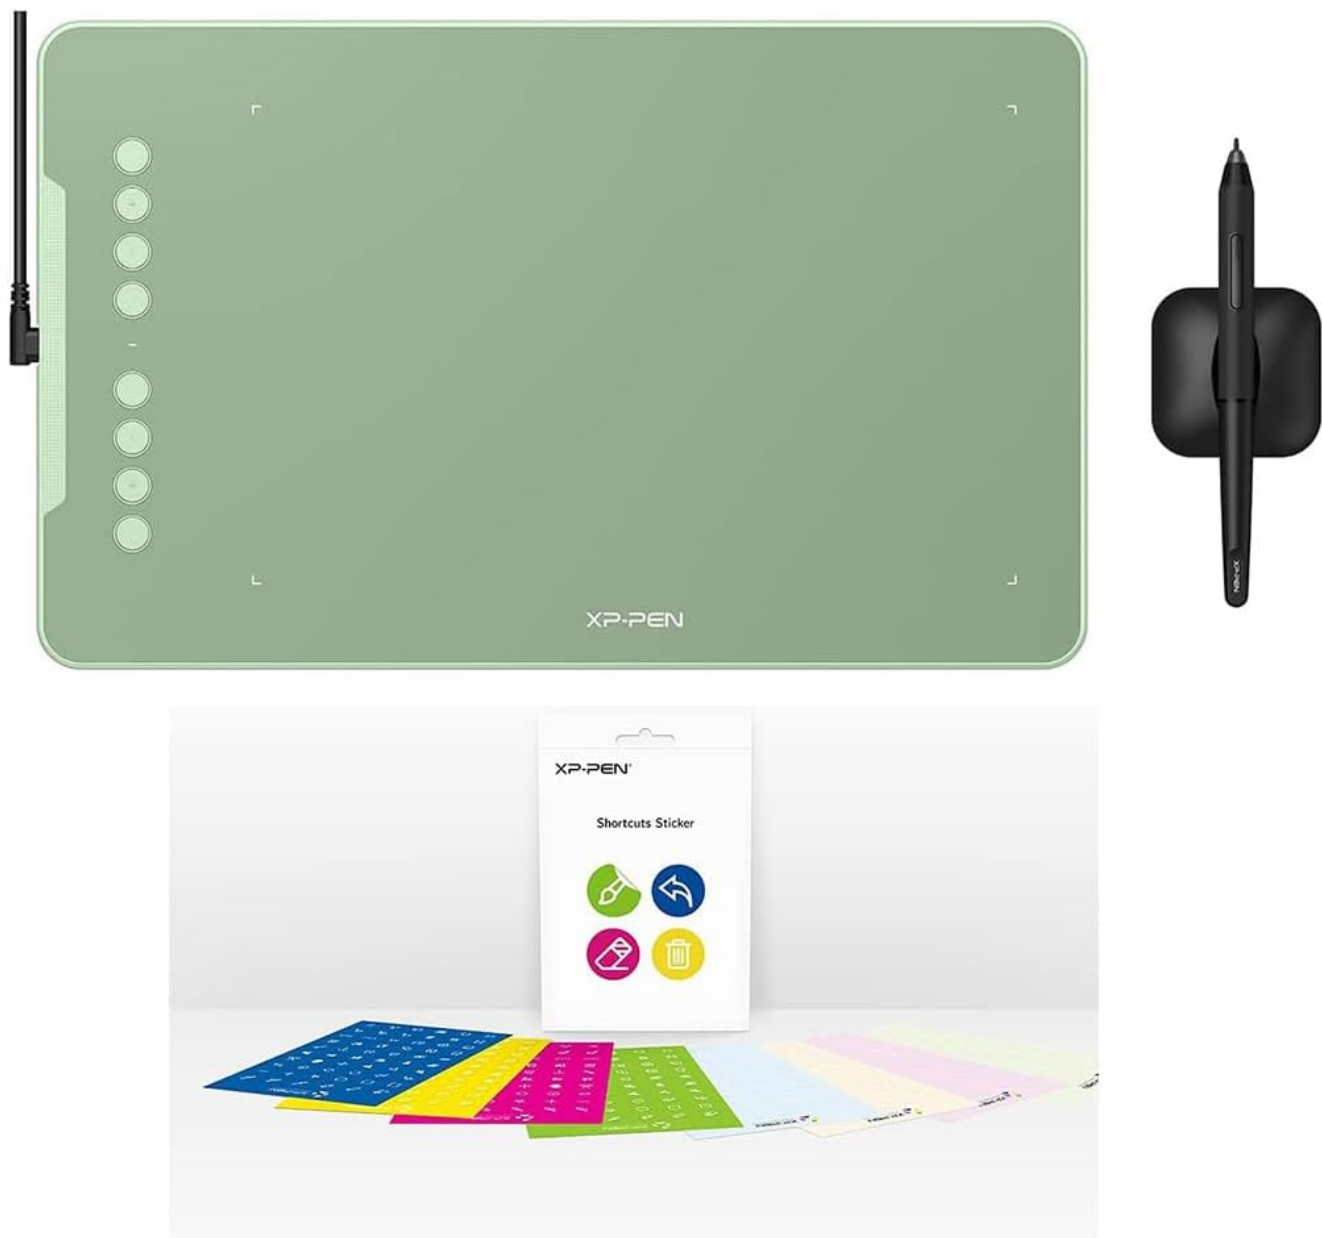 


Image: Contents of the XPPen Deco 01 V3 package, including the tablet, stylus, and shortcut stickers.

3. SETUP

3.1 Connecting the Tablet

1. Connect the USB cable to the Deco 01 V3 tablet.
2. Plug the other end of the USB cable into an available USB port on your computer or Android device.

3.2 Driver Installation

For optimal performance and access to all features, it is recommended to install the latest driver from the official XP-Pen website. Ensure any existing tablet drivers are uninstalled before proceeding.

- Visit the official XP-Pen website.
- Navigate to the 'Support' or 'Download' section.
- Select your product model (Deco 01 V3) and operating system (Windows, macOS, Android, ChromeOS).
- Download and run the installer. Follow the on-screen instructions to complete the installation.
- Restart your computer if prompted.

4. OPERATING THE DEVICE

4.1 Active Area and Dimensions

The Deco 01 V3 features a generous 10 x 6.25 inch active drawing area, providing ample space for creative work. The tablet has a slim profile of 8mm and weighs approximately 570g.

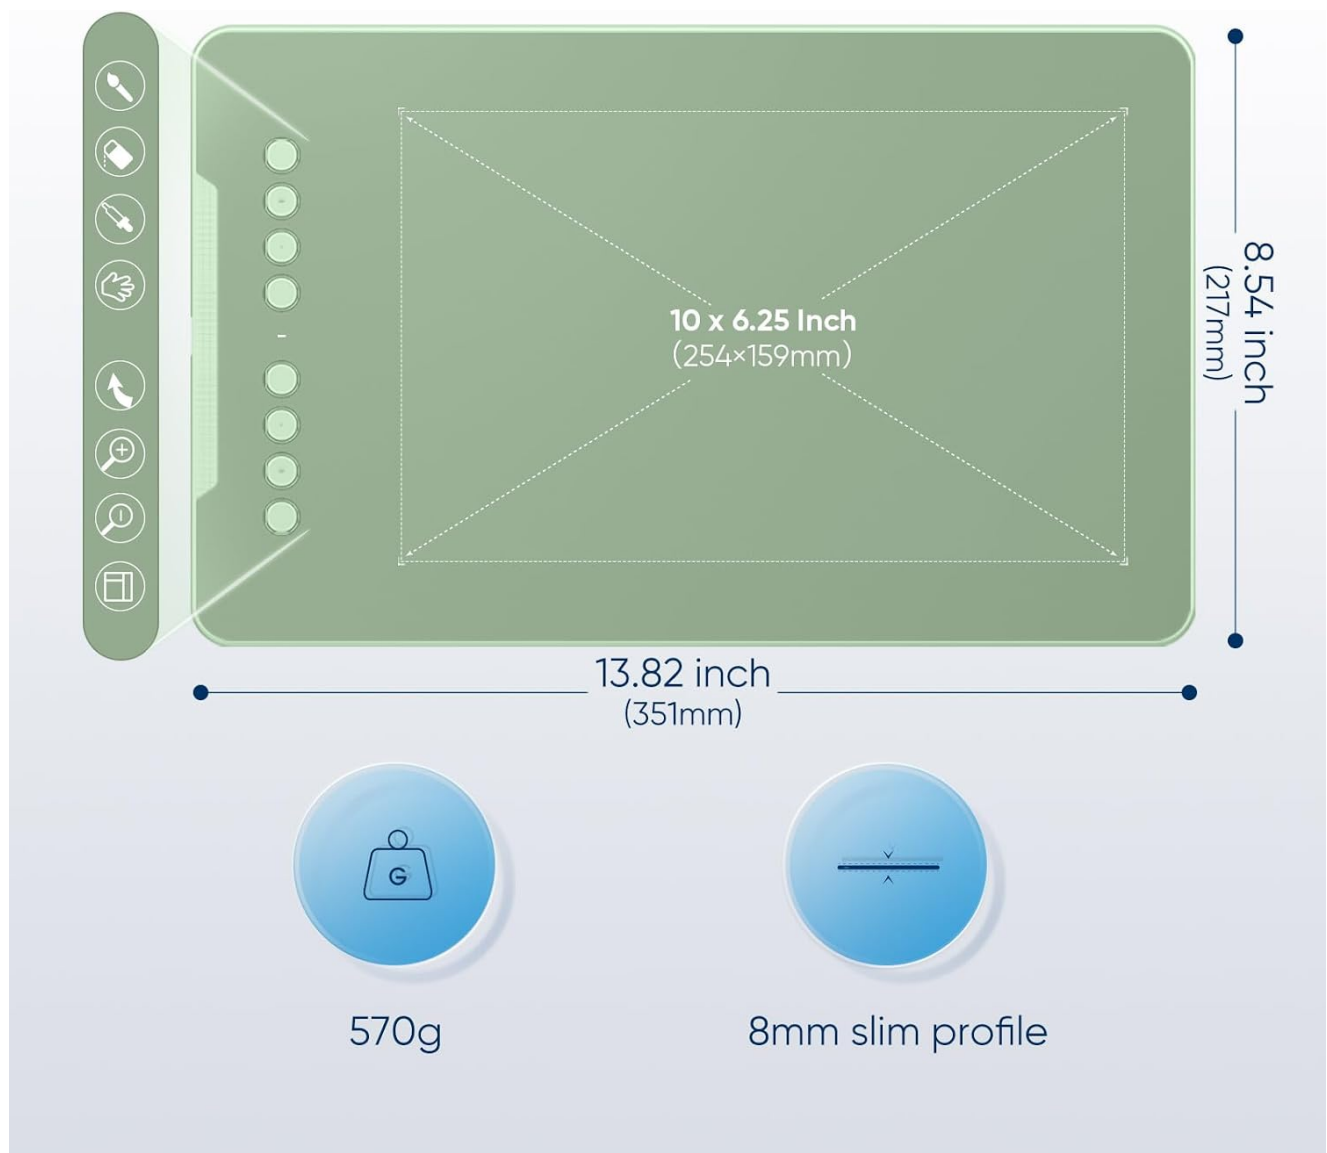 


Image: Diagram illustrating the 10 x 6.25 inch active area and overall dimensions of the XPPen Deco 01 V3 tablet.

4.2 Battery-Free Stylus

The included stylus is battery-free, eliminating the need for charging. It supports 16384 levels of pressure sensitivity and up to 60 degrees of tilt recognition, allowing for natural and precise strokes.



Image: Details of the battery-free stylus, highlighting 16384 pressure levels, tilt support, stylus stand, and replacement nibs.

4.3 Customizable Shortcut Keys

The Deco 01 V3 is equipped with 8 customizable shortcut keys on the side of the tablet. These keys can be programmed through the driver software to perform various functions, enhancing workflow efficiency.

8 HOT

8 Hot Keys

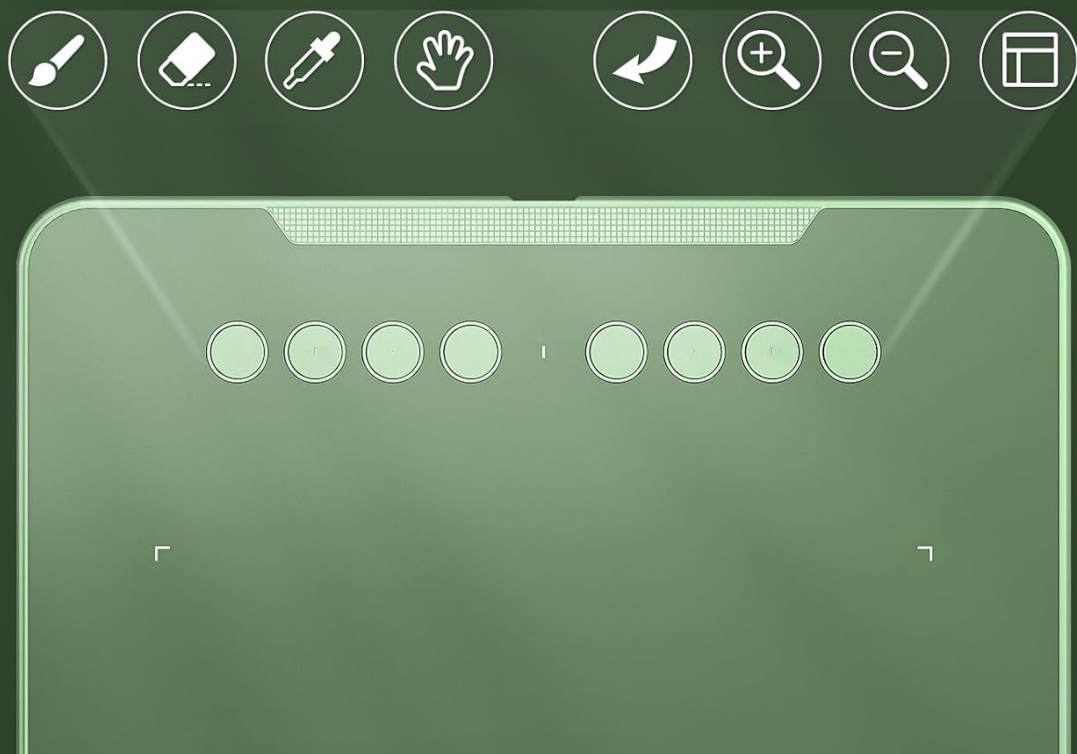 


Image: Illustration of the 8 customizable hot keys on the XPPen Deco 01 V3 tablet, with example icons for common functions.



Image: A hand demonstrating the use of the stylus on the XPPen Deco 01 V3 tablet, highlighting the shortcut keys.

4.4 Shortcut Stickers

The product includes smooth, rounded shortcut stickers with clearly printed icons for popular art programs. These stickers can be applied to the tablet's shortcut keys for quick visual reference and to personalize your creative space.



Image: A package of XPPen shortcut stickers, showing various colored sheets with icons for different software functions.

5. MAINTENANCE

5.1 Cleaning the Tablet

To clean the tablet surface, use a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the surface. Ensure the tablet is powered off and disconnected before cleaning.

5.2 Stylus Nib Replacement

The stylus nibs may wear down over time. To replace a nib:

1. Use the nib clip tool (usually found in the stylus stand) to gently pull out the old nib.
2. Insert a new nib firmly into the stylus until it is secure.

6. TROUBLESHOOTING

6.1 No Pen Pressure

- Ensure the driver is correctly installed and updated to the latest version.
- Check if the pen pressure settings are enabled in your drawing software and the XP-Pen driver settings.
- Test the stylus on a different application or computer to isolate the issue.

6.2 Cursor Not Moving

- Verify that the USB cable is securely connected to both the tablet and the computer.
- Try connecting the tablet to a different USB port.

- Reinstall the tablet driver.

6.3 Incompatible Software

If you experience issues with specific software, ensure your software is updated to the latest version. Some older software versions may not fully support advanced tablet features.

7. SPECIFICATIONS

Feature	Detail
Model Name	Deco 01 V3
Brand	XP-Pen
Active Area	10 x 6.25 inches
Pressure Levels	16384
Tilt Recognition	Up to 60 degrees
Stylus	Battery-Free
Shortcut Keys	8 Customizable
Operating System Compatibility	Windows 10/8/7, macOS 10.10 and above, Android 6.0 and above, Chrome OS 88.0.4324.109 or above
Specific Uses	Painting, Drawing

8. COMPATIBILITY

The XPPen Deco 01 V3 is compatible with a wide range of operating systems and creative software:

8.1 Operating Systems

- Windows 10/8/7
- macOS 10.10 (Yosemite) and above
- Android 6.0 (Marshmallow) and above
- Chrome OS 88.0.4324.109 or above

8.2 Software Compatibility

The tablet is compatible with major design software, including but not limited to:

- Adobe Photoshop
- Adobe Illustrator
- SAI
- Painter
- Clip Studio Paint
- GIMP
- Krita
- MediBang Paint
- FireAlpaca

- Blender 3D

Note: Please update your Windows to version 11 or Mac OS to version 12 for optimal performance with some software.

Also compatible with many major designer software such as Photoshop, SAI, Painter, Illustrator and Clip Studio, etc.



* Please update your Windows to version 11 or Mac OS to version 12 first.

Image: Visual representation of the XPPen Deco 01 V3's compatibility with Windows, macOS, Android, and various creative software applications.

9. WARRANTY AND SUPPORT

For warranty information, technical support, and frequently asked questions, please visit the official XP-Pen website or contact their customer service directly. Keep your purchase receipt for warranty claims.

© 2023 XP-Pen. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question