

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ULANZI](#) /

› [ULANZI TT53 Camera Tripod Instruction Manual](#)

ULANZI TT53

ULANZI TT53 Camera Tripod Instruction Manual

Model: TT53

1. PRODUCT OVERVIEW

The ULANZI TT53 Camera Tripod is a versatile and portable support system designed for various photography and videography needs. It features an adjustable height, a 360° rotatable ball head, and a quick-release plate for efficient camera mounting. Its multi-mode functionality allows for use as a standard tripod, monopod, or selfie stick, and it supports low-angle shooting.

Uka Quick Release System

The Uka quick release system allows for fast switching between devices, and the safety lock ensures a secure attachment and prevents accidental removal.



Image: The ULANZI TT53 Camera Tripod, showcasing its design and portability.

2. WHAT'S IN THE BOX

- Tripod * 1
- Storage Bag * 1
- Spanner * 1

3. SETUP INSTRUCTIONS

3.1 Unfolding the Tripod

1. Grasp the tripod legs and gently extend them outwards until they lock into position.
2. Adjust the leg angles by pressing the leg angle adjustment locks located at the top of each leg. The legs can be set to 23°, 53°, or 83°.

Details



Image: Detailed view of the tripod legs, illustrating the adjustable leg angles (23°, 53°, 83°), the foam comfort grip, and the secure hook attachment.

3.2 Adjusting Tripod Height

1. To extend the legs, unlock the leg section locks and pull each leg section to the desired length. Securely fasten the locks.
2. To adjust the central column, loosen the central column locking knob. Extend the central column to the desired height and tighten the knob to secure it. The tripod can extend from 20.47 inches to 70.86 inches.



Image: Visual representation of the tripod's height adjustment capabilities, showing its folded size and various extended heights.

4. OPERATING INSTRUCTIONS

4.1 Attaching Your Camera (UKA Quick Release System)

1. Ensure the quick-release plate is detached from the ball head. If attached, slide the safety lock to 'unlock' and remove the plate.
2. Screw the quick-release plate onto the bottom of your camera or device using the 1/4" screw. Ensure it is tightened securely.
3. Align the quick-release plate with the receiver on the ball head and press down until it clicks into place.
4. Slide the safety lock to 'lock' to prevent accidental release.



Traveler-Uka Tripod

The Tripod That Travels as Far as You Do

71inch

Extended Height

17inch

Folded Size

2.65Lbs

Weight

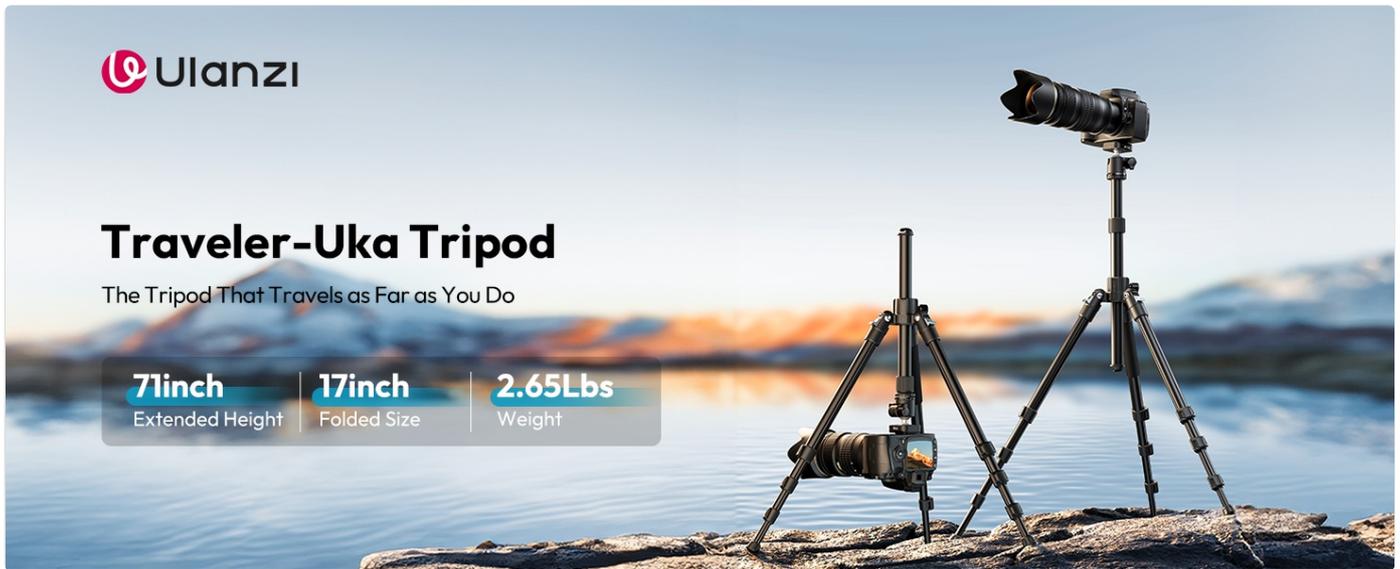


Image: Instructions for using the Uka Quick Release System, demonstrating how to lock and unlock the plate and its compatibility with cameras on tripods and stabilizers.

4.2 Using the 360° Ball Head

1. Loosen the main locking knob on the ball head to adjust the camera's angle freely.
2. For panoramic shots, use the base panning knob to rotate the camera 360 degrees horizontally.
3. For portrait orientation, tilt the camera 90 degrees into the designated notch on the ball head.
4. Once the desired angle is achieved, tighten the respective locking knobs to secure the camera.

360° Panorama Shooting

The ball head with smooth 360° rotation allows for portrait to landscape



vertical to horizontal: 90°



removable ball head

Image: The ball head demonstrating its 360° rotation and 90° tilt for versatile shooting angles, including its 3/8" mounting thread.

4.3 Multi-Mode Flexibility

The TT53 tripod offers several configurations to suit different shooting scenarios:

- **Tripod Mode:** Standard three-leg setup for stable shots.
- **Monopod Mode:** The central column can be detached and used as a monopod for increased mobility and support.
- **Selfie Stick Mode:** The detached central column can also function as a selfie stick when combined with a phone clamp (not included).
- **Low-Angle Shooting:** Invert the central column to achieve extremely low-angle or macro shots.

Shoot In Your Favorite Modes

easily switch modes for low-angle shots, remove the center column or transform the tripod into a selfie stick.



tripod



stabilizer



low angle shot



selfie stick

Image: The tripod configured for various shooting modes: standard tripod, with a stabilizer, low-angle photography, and as a selfie stick.

Low Angle Shooting

Inverting the tripod's central axes, get macro shots or low-angle shots



Remove the center hook



Leg angles 23°, 53°, 83°



Image: Demonstrating low-angle shooting by inverting the central column, ideal for macro photography or unique perspectives.

4.4 Accessory Mounting

The tripod includes 1/4" and ARRI locating holes on the side, allowing for the attachment of additional accessories such as lights, microphones, or monitors using compatible magic arms (accessories sold separately).

Expand Your Potential Effortlessly.

With side-mounted 1/4" and Arri locating holes, you can expand your setup with magic arms to attach accessories like phone clamps, video lights, and microphones.

1/4" and Arri locating holes



*Only the tripod included, accessories are sold separately.



Image: The tripod's integrated 1/4" and ARRI locating holes, designed for expanding your setup with various photographic accessories.

4.5 Official Product Video

Your browser does not support the video tag.

Video: An official ULANZI video demonstrating the features and usage of the TT53 Traveler Uka Tripod, including its portability, adjustable height, quick-release system, and multi-mode functionality.

5. MAINTENANCE

- Regularly clean the tripod legs and joints with a soft, dry cloth to remove dust and debris.
- Avoid exposing the tripod to extreme temperatures or harsh chemicals.
- Ensure all locking mechanisms are free of obstructions and operate smoothly.
- Store the tripod in its provided storage bag when not in use to protect it from scratches and dust.

6. TROUBLESHOOTING

6.1 Tripod Instability

- **Issue:** Tripod feels wobbly or unstable.
- **Solution:** Ensure all leg section locks and the central column locking knob are securely tightened. Verify that the leg angles are evenly set.

6.2 Quick Release Plate Not Securing

- **Issue:** Camera does not securely attach to the ball head.
- **Solution:** Check that the quick-release plate is correctly aligned and fully inserted into the receiver. Ensure the safety lock is slid to the 'lock' position. Inspect the plate and receiver for any damage or obstructions.

6.3 Ball Head Movement Issues

- **Issue:** Ball head is too stiff or too loose.
- **Solution:** Adjust the main locking knob on the ball head. If it remains stiff, check for any debris. If it's too loose, ensure the knob is fully tightened.

7. SPECIFICATIONS

Feature	Specification
Brand	ULANZI
Model	TT53
Material	Aluminum Alloy, ABS Plastic
Item Weight	2.65 lbs (1.2 kg)
Folded Dimensions	16.92 inches (43 cm)
Minimum Height	20.47 inches (52 cm)
Maximum Height	70.87 inches (180 cm)
Leg Sections	4
Center Column Sections	2
Ball Head Load Capacity	6.62 lbs (3 kg)
Tripod Load Capacity	17.63 lbs (8 kg)
Tripod Head Type	Ball Head
Compatible Devices	1/4" Thread Devices, 1/4" Thread Phone Clamp, 3/8" Thread Devices, Camera, Stabilizer

Note: Manually measured weight and size may not be exact.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official ULANZI website or contact your retailer. Keep your purchase receipt for warranty claims.