

[Manuals.plus](#) /

› [VOWNER](#) /

› VOWNER Shoe Cabinet User Manual

VOWNER VOWNER-537

VOWNER Shoe Cabinet User Manual

Model: VOWNER-537

PRODUCT OVERVIEW

The VOWNER Shoe Cabinet is a modern, freestanding storage solution designed to organize your footwear efficiently. Featuring two convenient flip-top drawers and adjustable internal shelves, it provides ample space while maintaining a narrow profile, making it ideal for entryways, hallways, and living rooms. Its simple line design and durable construction ensure both functionality and aesthetic appeal.



Image: The VOWNER Shoe Cabinet, showcasing its two flip-down compartments filled with various shoes, and an open top shelf for additional items.

SETUP AND ASSEMBLY

Your VOWNER Shoe Cabinet is designed for straightforward assembly. All necessary hardware and detailed instructions are included in the package. Each part is clearly labeled to facilitate a quick and easy setup process.

Before You Begin:

- Unpack all components and verify against the parts list in the instruction manual.
- Ensure you have adequate space for assembly.
- Keep children and pets away from the assembly area.

Key Assembly Steps:

1. Assemble the main frame of the cabinet according to the provided diagrams.

2. Install the flip-top drawer mechanisms.
3. Insert the adjustable partitions into the drawers as desired.
4. Attach the anti-tipping device to the back of the cabinet and secure it to a wall for enhanced stability and safety. This is a crucial step to prevent accidental tipping.

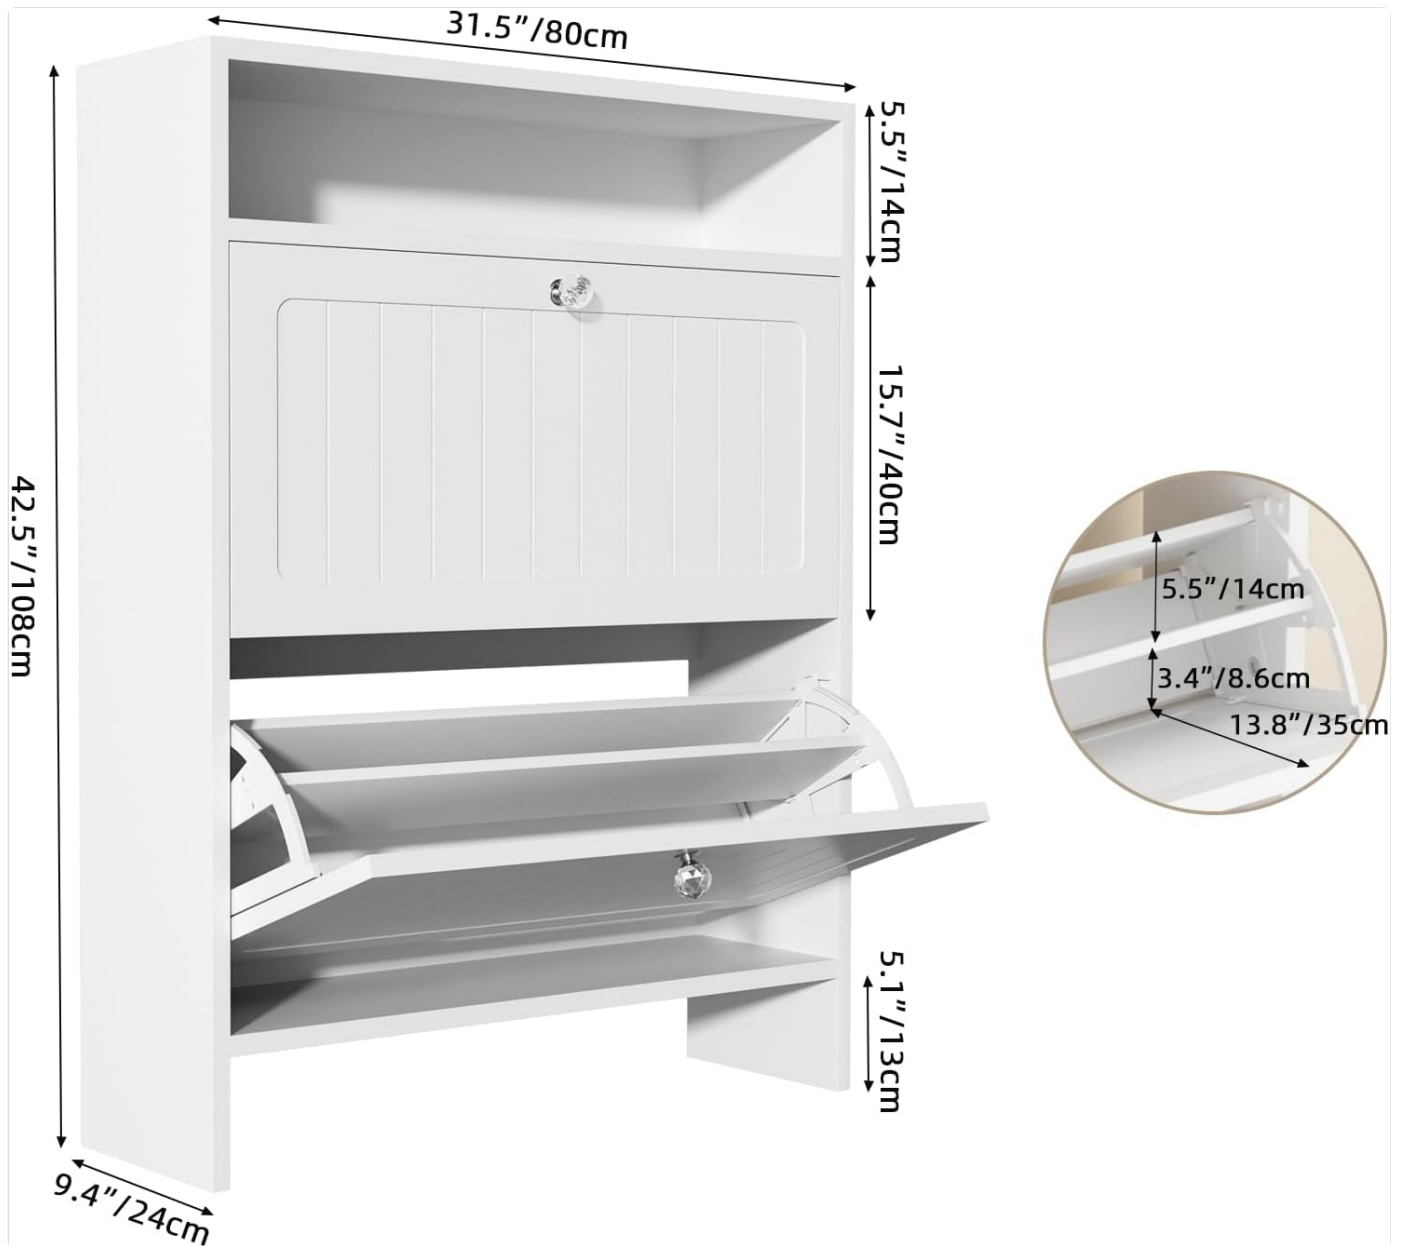


Image: Dimensional diagram of the shoe cabinet, illustrating its overall size and the internal measurements of the flip drawers.



Image: Detailed view of key features, including the anti-tipping device for secure wall mounting.

OPERATING INSTRUCTIONS

The VOWNER Shoe Cabinet is designed for convenient and flexible shoe storage.

Using the Flip-Top Drawers:

- Gently pull the crystal handle to open each flip-top drawer. The drawers pivot outwards, providing easy access to your shoes.
- Each drawer contains adjustable partitions. You can move or remove these partitions to accommodate different shoe sizes and types, such as boots or high heels.
- To close, simply push the drawer back into the cabinet until it is flush with the front.

Utilizing Storage Space:

- The spacious top surface of the cabinet is ideal for placing decorative items, keys, wallets, or small potted plants.
- The open shelf located beneath the flip drawers provides additional storage or display space for frequently used items or larger shoes.



Image: Illustration of the adjustable and removable shelves within the flip drawers, demonstrating how to customize storage space.

MAINTENANCE

Proper care will ensure the longevity and appearance of your VOWNER Shoe Cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as they can damage the engineered wood finish.
- **Spills:** Immediately wipe up any spills to prevent moisture absorption and staining.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Stability:** Periodically check all screws and fasteners to ensure they remain tight. Re-tighten if necessary. Ensure the anti-tipping device remains securely attached to the wall.

Troubleshooting

If you encounter any issues with your VOWNER Shoe Cabinet, please refer to the following common solutions:

Problem	Possible Cause	Solution
Cabinet feels wobbly or unstable.	Loose fasteners; anti-tipping device not installed or improperly secured.	Ensure all assembly screws are tightened. Verify the anti-tipping device is correctly installed and anchored to a sturdy wall.
Flip drawers do not open or close smoothly.	Obstruction; misaligned mechanism; excessive weight.	Check for any items blocking the drawer's path. Ensure the drawer mechanism was assembled correctly. Do not overload the drawers beyond their capacity.
Adjustable partitions are difficult to move.	Partitions are not aligned correctly in their slots.	Ensure the partitions are inserted straight into the designated grooves. Remove and re-insert if necessary.

Specifications

Feature	Detail
Brand	VOWNER
Model Name	VOWNER Shoe Cabinet
Item Model Number	VOWNER-537
Color	White
Product Dimensions	9.4"D x 31.5"W x 42.5"H (24cm D x 80cm W x 108cm H)
Item Weight	52 Pounds (approx. 23.6 kg)
Mounting Type	Freestanding
Door Style	Flip Drawer
Material Type	Engineered Wood
Assembly Required	Yes
Recommended Uses	Shoes, Entryway, Hallway, Living Room
Special Feature	Space saving, Adjustable Shelves, Anti-tipping Device

Warranty and Support

VOWNER is committed to providing quality products and customer satisfaction. While specific warranty details are not provided in this manual, we offer dedicated customer support for any questions or concerns you may have regarding your shoe cabinet.

If you encounter any issues, require assistance with assembly, or have questions about product functionality, please do not hesitate to contact us. Our customer service team aims to respond and provide solutions within 24 hours. For support, please refer to the contact information provided with your purchase or visit the official VOWNER brand store on Amazon: [VOWNER Store](#).

© 2025 VOWNER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question