

[Manuals.plus](#) /

› [FEIYUE](#) /

› FEIYUE FYe392 Sewing Machine Instruction Manual

FEIYUE FYe392

FEIYUE FYe392 Sewing Machine Instruction Manual

 
Model: FYe392

INTRODUCTION


This manual provides essential information for the safe and efficient operation of your FEIYUE FYe392 Sewing Machine. Please read all instructions carefully before using the machine to ensure proper function and to prevent damage.

100W Servo Motor

Adopt 100W servo motor, powerful stitch, sensitive response, strong threading ability, can sew a variety of fabrics

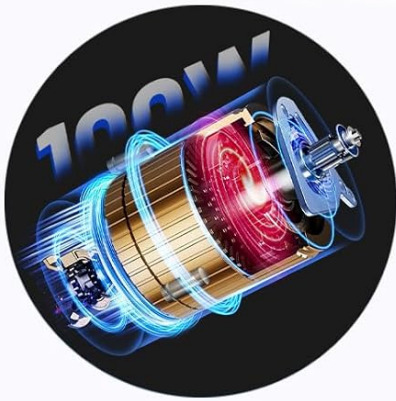

Ultra-thin fabric

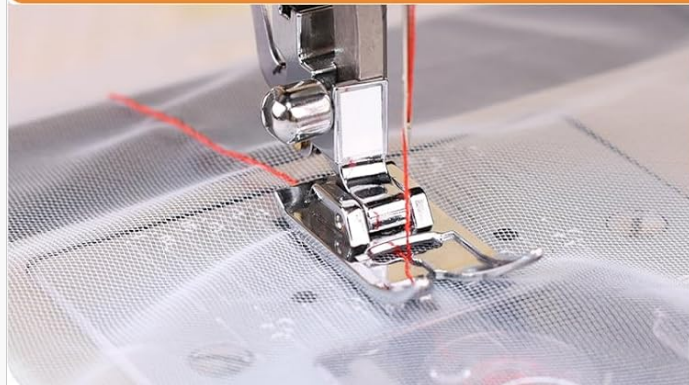 

8-12 layers of fabric



Image: Overview of the FEIYUE FYe392 Sewing Machine, showcasing its compact design and controls.

SETUP

1. Unpacking and Placement

- Carefully remove the sewing machine and all accessories from the packaging.
- Place the machine on a stable, flat surface with adequate lighting.
- Ensure the power switch is in the OFF position before plugging the machine into a power outlet.

2. Included Accessories

Your FEIYUE FYe392 comes with a complete sewing kit to get you started:

- 6 Bobbins
- 3 Needles

- 5 Sewing Feet (Buttonhole Foot, Guide Presser Foot, Zipper Foot, Button Fitting Foot, Anti-Skipping Foot)
- Foot Pedal
- Embroiderer Plate
- Multi-function Screwdriver
- Seam Ripper/Brush
- Spool Pin

REMOVABLE FREE ARM

Open the inner cover of the auxiliary board, it can be used as a parts box to store accessories.



PS: This accessory box does not include the instruction manual, foot speed control and dust cover.



 
Bobbins(3x)



Button Foot



Anti-Skipping



Presser Foot



Zipper Foot



L-Screwdriver



Pack of Needles



Seam Ripper/Brush



Spool Pin



Buttonhole Foot

Image: The removable free arm compartment, which can store accessories, and a display of the various included sewing feet, bobbins, needles, and tools.

3. Bobbin Winding and Insertion

The machine features automatic winding and a top drop-in bobbin system for ease of use.

- Follow the threading guides for automatic bobbin winding.
- Insert the wound bobbin into the top drop-in compartment, ensuring the thread feeds correctly.



Image: Close-up view of the machine's threading guides, automatic bobbin winding mechanism, stitch length and width adjustment dials, and the transparent cover for the top drop-in bobbin.

4. Automatic Needle Threader

To use the automatic needle threader:

1. Ensure the needle is in its highest position.
2. Lower the threader lever and align the hook with the needle eye.
3. Pass the thread through the hook and release the lever to thread the needle.

AUTOMATIC NEEDLE THREADER

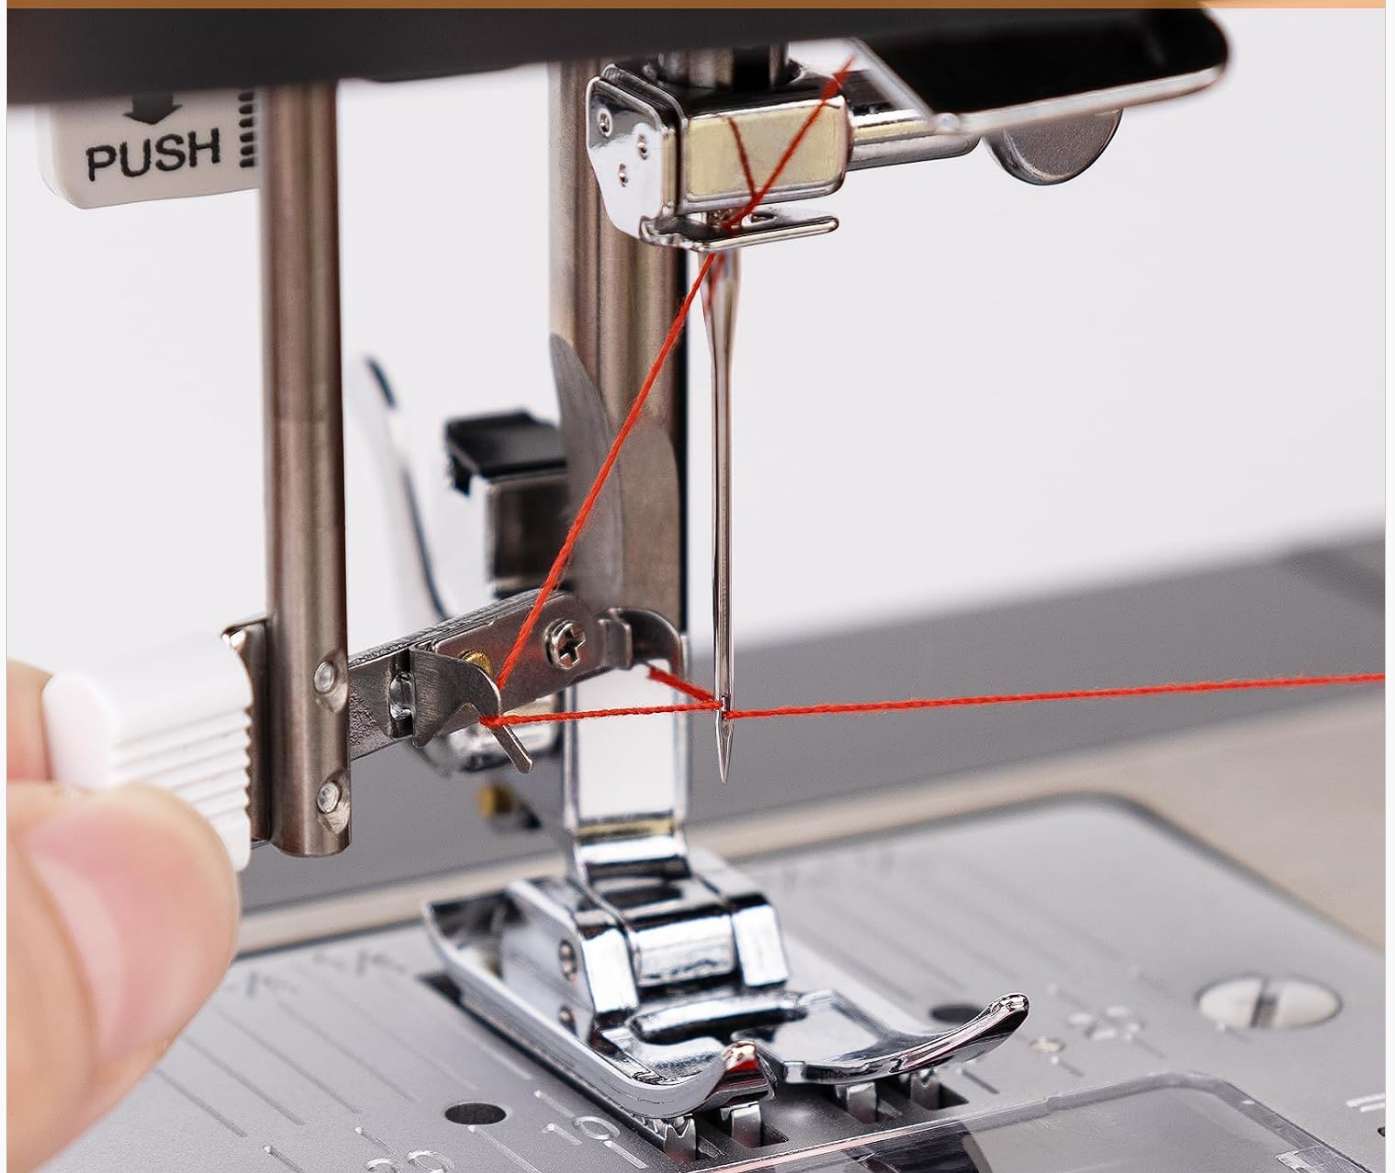 


Image: A hand demonstrating the use of the automatic needle threader, showing the thread passing through the small hook and the needle eye.

OPERATING INSTRUCTIONS

1. Power and Speed Control

- The machine features a 100W servo motor for powerful stitching, capable of handling various fabrics from ultra-thin to 8-12 layers of thick material like denim.
- Adjust the sewing speed using the dedicated speed adjustment button or the foot pedal for precise control.
- Use the Start/Stop button to begin or pause sewing without the foot pedal.

FEIYUE | FYe392

MULTIFUNCTIONAL DOMESTIC SEWING MACHINE

Adjustable Sewing Speed >>

One-touch Start Sewing >>

23 Built-in Stitches >>

1-Step Buttonhole >>

7-Point Feed Dog >>

Stitch length & Width Adjustable >>



Image: Illustration of the 100W Servo Motor and examples of the machine sewing ultra-thin fabric and multiple layers of thick fabric.

2. Needle Position Adjustment


The needle position can be adjusted to left, center, or right. You can also set the needle to stop in the up or down position for specific sewing tasks like pivoting or zipper installation.

3. Stitch Selection and Adjustment

The FEIYUE FYe392 offers 23 built-in stitches, including utility, decorative, stretch, and a 1-step buttonhole. Each stitch is pre-set for optimal balance.

- Select your desired stitch using the stitch selector dial.
- Adjust stitch length and width as needed using the corresponding dials.

23 STITCHES

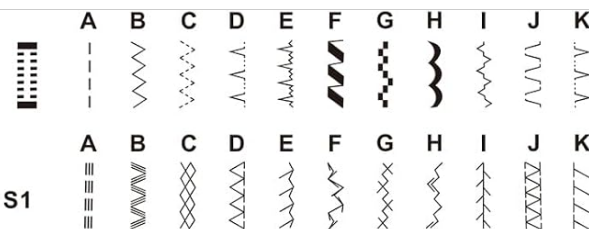

It includes commonly used stitches such as overcasting, straight seams, Zigzag stitch, decorative seams and buttonhole, and can freely realize various sewing techniques

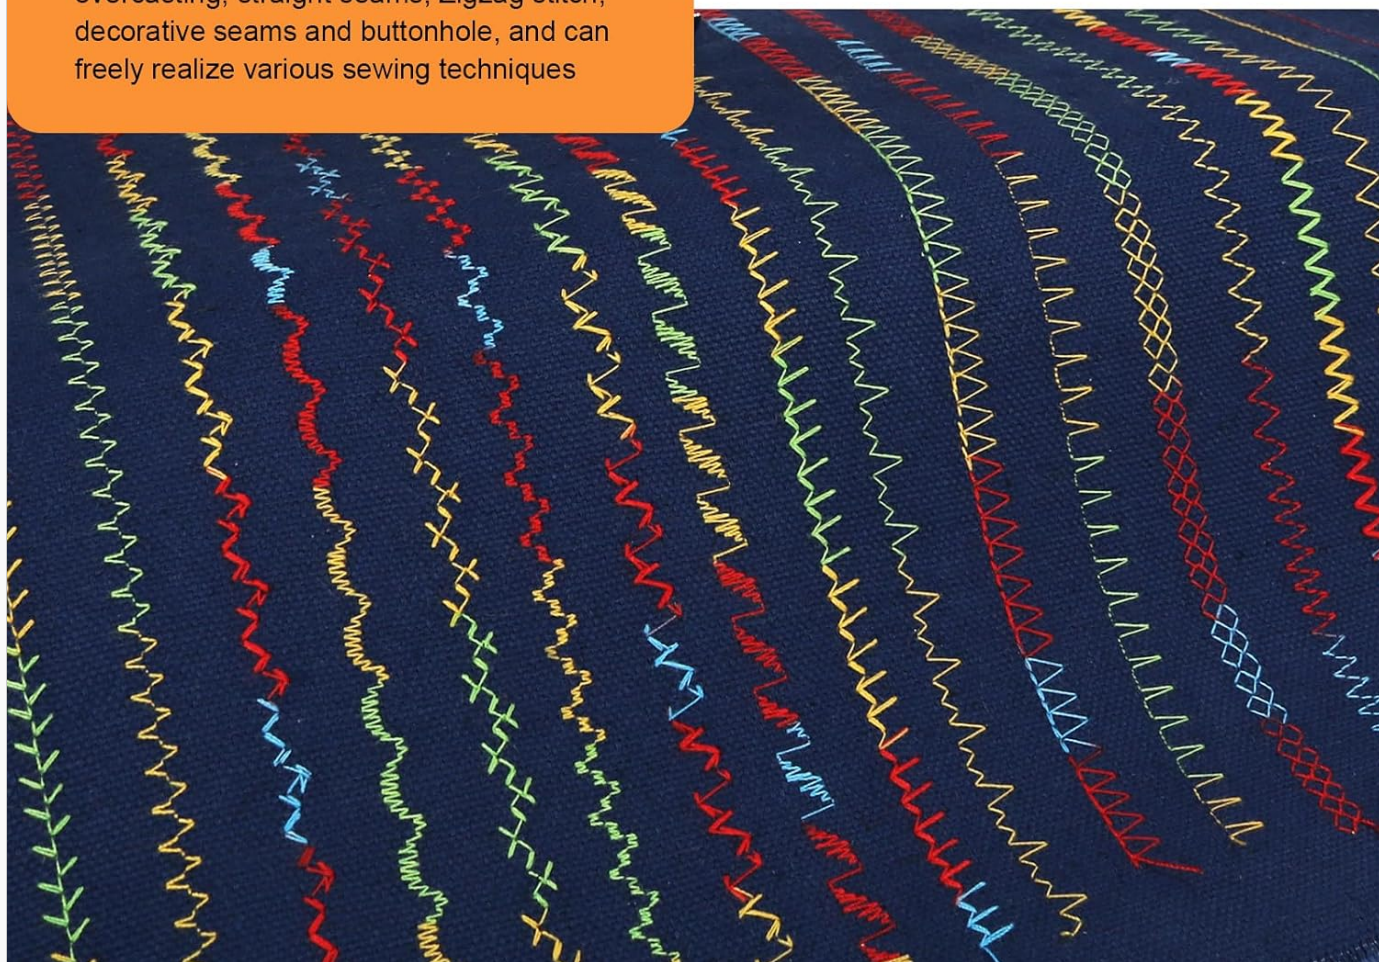


Image: A fabric swatch displaying the 23 different stitch patterns available on the FEIYUE FYe392 sewing machine.

4. Thread Jam Protection

If the thread becomes tangled or the machine is overloaded, sewing will stop automatically, and a blinking light will alert you. Clear the jam before resuming operation.

5. Official Product Video: Features Overview

Your browser does not support the video tag.

Video: An official product video from Feiyue NetFirst demonstrating the heavy-duty capabilities and key features of the FEIYUE FYe392 Sewing Machine.

MAINTENANCE

1. Cleaning

- Regularly clean lint and dust from the bobbin area and feed dogs using a soft brush.

- Wipe the exterior of the machine with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

2. Needle Replacement

Replace needles frequently, especially when sewing different fabric types or if the needle becomes bent or dull. Always use the correct needle type and size for your fabric.

TROUBLESHOOTING

Common Issues and Solutions:

- **Thread Jam:** If the machine stops and the light blinks, check for tangled thread in the bobbin case or around the needle. Remove any obstructions and re-thread the machine.
- **Skipped Stitches:** Ensure the needle is inserted correctly and is not bent or dull. Verify that the correct needle type is being used for the fabric. Check upper and lower threading.
- **Uneven Stitches:** Adjust the tension dials for both upper and bobbin threads. Ensure the bobbin is wound evenly.
- **Machine Not Starting:** Check that the power cord is securely plugged in and the power switch is on. Ensure the foot pedal is connected if not using the Start/Stop button.

SPECIFICATIONS

Feature	Detail
Brand	FEIYUE
Model Number	FYe392
Color	Black
Material	Metal, Plastic
Product Dimensions (D x W x H)	6.3"D x 14.37"W x 10.63"H
Item Weight	13.56 Pounds
Power Source	Corded Electric
Motor Type	100W Servo Motor
Built-in Stitches	23
Buttonhole Type	1-Step

DIMENSION



PS: The size is measured manually, there may be a slight deviations, please be aware that



Image: Diagram illustrating the dimensions of the FEIYUE FYe392 Sewing Machine.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the manufacturer's official website or contact your retailer. Keep your purchase receipt as proof of purchase.

© 2026 FEIYUE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question