



Manuals.plus /

› NINJA /

› Ninja CRISPi Portable 4-in-1 Air Fryer with Glass Containers, 3.8L, 1700W, Stone (Model FN101EUST)

NINJA FN101EUST

Ninja CRISPi Portable 4-in-1 Air Fryer User Manual

Model: FN101EUST

[Introduction](#)

[Components](#)

[Safety Information](#)

[Setup & Assembly](#)

[Operating
Instructions](#)

[Care & Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

1. INTRODUCTION

Thank you for choosing the Ninja CRISPi Portable 4-in-1 Air Fryer. This appliance is designed to provide versatile cooking options including air frying, roasting, keeping warm, and recrisping, all within a compact and efficient unit. Its unique glass containers allow for healthy cooking and easy monitoring of your food. Please read this manual thoroughly before first use to ensure safe operation and optimal performance.



The Ninja CRISPi Portable 4-in-1 Air Fryer with its large and small glass containers.

2. PRODUCT COMPONENTS

The Ninja CRISPi system includes the following components:

- 1700W Power Pod (main heating and control unit)
- Large Glass Cooking Container (3.8L capacity)
- Small Glass Cooking Container (1.4L capacity)
- 2 Non-stick Crisper Plates (one for each container)
- 2 Storage Lids (for glass containers)
- Container Adapter (for using the large container with the power pod)



Cuisinez en grand en un seul geste

Clipsez simplement l'adaptateur pour rendre votre CRISPi compatible avec le grand récipient de 3.8L.

All included components of the Ninja CRISPi system.

3. SAFETY INFORMATION

Please observe the following safety precautions:

- Always ensure the power pod is securely attached to the container before operation.
- Do not immerse the power pod in water or other liquids.
- Use oven mitts when handling hot containers or crisper plates.
- Keep the appliance away from children and pets.
- Ensure adequate ventilation around the appliance during use.
- Do not block air vents on the power pod.
- Unplug the appliance when not in use and before cleaning.

4. SETUP AND ASSEMBLY

4.1 Unpacking

Carefully remove all components from the packaging. Remove any protective films or stickers. Retain packaging for future storage or transport.

4.2 Assembly

1. Place the desired glass cooking container (1.4L or 3.8L) on a stable, heat-resistant surface.
2. Insert the appropriate crisper plate into the bottom of the glass container.
3. If using the 3.8L container, place the container adapter onto the container.
4. Align the power pod with the container (or adapter for 3.8L) and gently lower it until it clicks securely into place.
5. Ensure the power cord is free from obstructions and plug the appliance into a suitable power outlet.



Découvrez Ninja CRISPi

La performance des air fryers Ninja,
dans un format compact et ingénieux. Puissance: 1700W

The power pod securely attached to the large 3.8L glass container.



**Capacité:
1.4L**

Pour cuisiner de petites portions

Idéal pour un repas individuel, en moins de 15 mins.

The power pod attached to the small 1.4L glass container for individual meals.

4.3 Using Accessories

The Ninja CRISPi can be used with various accessories to enhance your cooking experience. Below are demonstrations of how to use some common accessories:

Your browser does not support the video tag.

Demonstration of placing a silicone mat accessory into the Ninja CRISPi glass container for easier cleaning and food handling.

Your browser does not support the video tag.

Demonstration of installing a silicone splatter screen accessory into the Ninja CRISPi to prevent splashes during cooking.

5. OPERATING INSTRUCTIONS

5.1 Powering On and Mode Selection

After assembly, plug in the appliance. The control panel will illuminate. Press the 'MODE' button to cycle through the available cooking functions: Air Fry, Roast, Keep Warm, and Re crisp.



The control panel allows selection of cooking modes and adjustment of settings.

5.2 Adjusting Temperature and Time

Once a mode is selected, use the '+' and '-' buttons to adjust the cooking temperature and time. Refer to the recipe guide for recommended settings for various foods.

5.3 Cooking Process

Place your food in the glass container on the crisper plate. Secure the power pod. Select your desired mode, temperature, and time, then press 'START'. The transparent glass containers allow you to monitor your food's progress without opening the unit.



Préparez



Cuisinez



Dégustez



Conservez

The complete cooking process: Prepare, Cook, Enjoy, and Store.

5.4 Using Different Container Sizes

The Ninja CRISPi comes with two glass containers to suit different meal sizes:

- **3.8L Container:** Ideal for family meals, such as roasting a whole chicken or larger portions.
- **1.4L Container:** Perfect for individual servings, snacks, or smaller side dishes.



3.8L

**POUR DES PLATS
À PARTAGER**
(permet de cuire un poulet entier)

1.4L

POUR SOI
(repas individuel,
snacks sains et rapides)

Bien plus qu'un simple air fryer

1 appareil, 2 capacités
pour des repas adaptés à votre quotidien.

Choose between the 3.8L container for larger meals or the 1.4L for individual portions.



Capacité:
3.8L

Pour des plats à partager

Permet de cuire un poulet de 1.2kg avec ses légumes.

Example of cooking a whole chicken in the 3.8L container.

6. CARE AND MAINTENANCE

6.1 Cleaning

All removable parts, including the glass containers, crisper plates, and storage lids, are dishwasher safe. For the power pod, wipe the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads.



Nettoyage facile

L'adaptateur, les récipients et couvercles
passent au lave-vaisselle.

Removable components are dishwasher safe for easy cleaning.

6.2 Storage

The Ninja CRISPi is designed for compact storage. The power pod can be inverted and placed inside the large glass container, with the smaller container nesting inside, to save space in your kitchen cabinets or drawers.



CONTENU DE LA BOÎTE

Compact storage design for easy organization.

7. TROUBLESHOOTING

If you encounter any issues with your Ninja CRISPi, please refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|----------------------------|---|---|
| Appliance does not turn on | Not plugged in; Power pod not securely attached | Ensure power cord is plugged in; Re-attach power pod until it clicks |
| Food not cooking evenly | Overcrowding; Incorrect temperature/time | Do not overcrowd the container; Adjust temperature/time as per recipe; Shake or flip food halfway through cooking |
| White smoke from unit | Grease/food residue on heating element; High fat content food | Clean heating element; Use less oil or trim fat from food; Ensure crisper plate is clean |

If the issue persists, please contact customer support.

8. SPECIFICATIONS

| Feature | Detail |
|--------------------------------|--|
| Brand | NINJA |
| Model Number | FN101EUST |
| Color | Stone |
| Product Dimensions (L x W x H) | 34 x 34 x 30 cm |
| Weight | 7.1 Kilograms |
| Capacity | 3.8 Litres (large container), 1.4 Litres (small container) |
| Power | 1700 Watts |
| Voltage | 230 Volts (AC) |
| Control Method | Push Button |
| Special Features | Portable, 4 cooking modes (Air Fry, Roast, Keep Warm, Recrisp), 2 glass cooking containers, 2 non-stick crisper plates, 2 storage lids, Dishwasher-safe components |

9. WARRANTY AND SUPPORT

Your Ninja CRISPi Portable 4-in-1 Air Fryer is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, replacement parts, or any other inquiries, please visit the official Ninja website or contact their customer service department.

Online Support: www.ninjakitchen.com