Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > OUKITEL /
- > OUKITEL C61 Pro Unlocked Cell Phone User Manual

OUKITEL C61 Pro

OUKITEL C61 Pro Unlocked Cell Phone User Manual

1. Introduction

This manual provides essential information for the safe and efficient use of your OUKITEL C61 Pro Unlocked Cell Phone. Please read this manual thoroughly before operating your device to ensure optimal performance and longevity.

2. PACKAGE CONTENTS

Upon opening your OUKITEL C61 Pro package, verify that all items listed below are present and in good condition:

- OUKITEL C61 Pro Smartphone
- USB Charging Cable
- Power Adapter
- SIM Eject Tool
- Protective Case
- Screen Protector (pre-applied or separate)
- Quick Start Guide
- · Warranty Card

Your browser does not support the video tag.

Video Description: This video demonstrates the unboxing process of the OUKITEL C61 Pro smartphone, showcasing the phone itself, the included protective case, charging cable, power adapter, SIM eject tool, and documentation.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your OUKITEL C61 Pro.



Image Description: A clear view of the OUKITEL C61 Pro smartphone, showing both its front display and the rear panel with its camera module. The phone is purple.



Image Description: A side profile of the OUKITEL C61 Pro, highlighting the power button, volume rocker, and SIM card tray location.



Image Description: A close-up shot of the OUKITEL C61 Pro's rear camera module, showing the arrangement of its multiple lenses.

4. SETUP

4.1. SIM Card Installation

- 1. Locate the SIM card tray on the side of the device.
- 2. Insert the SIM eject tool into the small hole next to the tray and press gently until the tray pops out.
- 3. Place your Nano-SIM card(s) and/or microSD card into the designated slots on the tray. Ensure the gold contacts face downwards.
- 4. Carefully push the tray back into the device until it is flush with the side.

4.2. Initial Power On

- 1. Press and hold the Power button (located on the side) until the OUKITEL logo appears on the screen.
- 2. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

5. OPERATING INSTRUCTIONS

5.1. Display and Navigation

The OUKITEL C61 Pro features a 6.88-inch In-cell HD+ display with a 90Hz refresh rate for smooth visuals. Navigate the interface using touch gestures: tap to select, swipe to scroll, pinch to zoom.

5.2. Camera Usage

Your device is equipped with a 13MP rear camera and a 5MP front camera. Open the Camera application to capture photos and videos. Available modes include HDR, Portrait, and Night Mode to enhance your photography.

Your browser does not support the video tag.

Video Description: This video highlights various features of the OUKITEL C61 Pro, including its camera capabilities, display quality, and overall design.

5.3. Battery Management

The 5150mAh battery provides extended usage. To optimize battery life, adjust screen brightness, close unused applications, and enable power-saving modes when necessary. The device supports OTG reverse charging, allowing it to act as a power bank for other compatible devices.

5.4. Security Features

Enhance your device security using:

- **Fingerprint Recognition:** Register your fingerprints in the Security settings for quick and secure unlocking.
- Face ID: Set up facial recognition for convenient unlocking by looking at your device.

5.5. Connectivity

The OUKITEL C61 Pro supports 4G Dual SIM for flexible network usage. It also includes NFC for contactless payments and data transfer, and quad-positioning (GPS+GLONASS+Beidou+Galileo) for accurate navigation.

6. SOFTWARE FEATURES

Your OUKITEL C61 Pro runs on the Android 15 operating system, offering a smooth and intuitive user experience. It features 24GB of RAM (8GB physical + 16GB virtual expansion) and 256GB of internal storage, expandable up to 1TB via microSD card. This configuration supports efficient multitasking and ample storage for applications, photos, and videos.

7. MAINTENANCE

To keep your OUKITEL C61 Pro in optimal condition:

- Cleaning: Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals.
- **Software Updates:** Regularly check for and install system updates to ensure your device has the latest features and security patches. Go to **Settings > System > System update**
- Storage Management: Periodically clear unnecessary files and applications to maintain performance.

8. TROUBLESHOOTING

If you encounter issues with your device, try the following common solutions:

- Device Unresponsive: Press and hold the Power button for about 10-15 seconds to force a restart.
- Battery Draining Quickly: Check background app usage in Settings > Battery. Reduce screen brightness and disable unused features like GPS or Bluetooth.
- **Network Connectivity Issues:** Ensure your SIM card is correctly inserted. Try restarting the device or toggling Airplane Mode on and off.
- App Crashes: Clear the cache of the problematic app inSettings > Apps > [App Name] > Storage > Clear cache. If the issue persists, try reinstalling the app.
- Slow Performance: Close unused apps, clear cache, and ensure sufficient free storage space.

For persistent issues, contact OUKITEL customer support or refer to the official OUKITEL website for further assistance.

9. SPECIFICATIONS

Feature	Specification
Model Name	C61 Pro
Operating System	Android 15
Screen Size	6.88 Inches
Resolution	720x1640
Refresh Rate	90 Hz
RAM Memory Installed Size	24 GB (8GB + 16GB virtual)
Memory Storage Capacity	256 GB (expandable up to 1TB)
Battery Capacity	5150 Milliamp Hours
Phone Talk Time	35 Hours
Phone Standby Time (with data)	700 hours
Charging Time	3.5 Hours
CPU Model	Tegra
CPU Speed	1.6 GHz
Connectivity Technologies	Bluetooth, NFC, Wi-Fi
GPS	True (GPS+GLONASS+Beidou+Galileo)
Special Features	Bluetooth Enabled, Built-In GPS, Dual SIM, Expandable Memory, Octa Core Processor
Other Camera Features	Front, Under Screen Camera

Feature	Specification
Audio Jack	No headphone jack
Item Weight	1.06 pounds
Manufacturer	OUKITEL

10. WARRANTY AND SUPPORT

Your OUKITEL C61 Pro comes with a manufacturer's warranty. Please refer to the warranty card included in your package for detailed terms and conditions. For technical support, product inquiries, or service requests, visit the official OUKITEL website or contact their customer service department.

Related Documents - C61 Pro

	OUKITEL C61 Series Smartphone User Manual Specs & Features Detailed user manual for the OUKITEL C61 Series smartphone, including specifications, features, safety information, and package contents. Learn about the 6.88-inch HD+ display, Android OS, Unisoc T606 processor, and 5150mAh battery.
C61 C Bases Mand Affords to Cultury Edge Phone	OUKITEL C61 Smartphone User Manual User manual for the OUKITEL C61 smartphone, detailing its features, specifications, and safety information. Includes overview, basic parameters, camera details, connectivity, dimensions, package contents, and warnings.
	OUKITEL WP18 Pro Rugged Smartphone: Technical Specifications and Features Detailed technical specifications, features, and package contents for the OUKITEL WP18 Pro rugged smartphone by OUKITEL. Includes display, camera, battery, connectivity, dimensions, and regulatory information.
	OUKITEL WP5 Smartphone: Specifications, Features, and Overview Detailed overview of the OUKITEL WP5 rugged smartphone, including technical specifications, camera details, battery information, connectivity, package contents, and FCC compliance.
COLUMN TOTAL	OUKITEL WP28 Rugged Smartphone FAQ - Features, Durability, and Specifications Comprehensive FAQ for the OUKITEL WP28 rugged smartphone. Learn about its IP68/IP69K durability, 10600mAh battery, Android 13, 256GB storage, and more.



OUKITEL C23 Pro Smartphone: Specifications, Features, and Overview

Detailed specifications, features, and overview of the OUKITEL C23 Pro smartphone, including display, camera, performance, connectivity, and regulatory information.