

manuals.plus /

› [wewear](#) /

› [wewear Wireless Keyboard and Mouse Combo ET-8418 Instruction Manual](#)

## wewear ET-8418

# wewear Wireless Keyboard and Mouse Combo (Model ET-8418) - Instruction Manual

## INTRODUCTION

Thank you for choosing the wegear Wireless Keyboard and Mouse Combo. This manual provides comprehensive instructions for setting up, operating, and maintaining your new wireless peripherals. Please read this manual carefully before use to ensure optimal performance and longevity of your product.

## PACKAGE CONTENTS

- 1 x wegear 104-Key Full-Size Wireless Keyboard
- 1 x wegear 6-Button Wireless Mouse
- 1 x USB 2.4G Receiver (stored inside the mouse)
- 1 x User Manual
- *Note: 2x AAA batteries for the keyboard and 1x AA battery for the mouse are not included.*

## SETUP GUIDE

### 1. Install Batteries:

- For the keyboard: Open the battery compartment on the underside and insert 2 AAA batteries (not included), ensuring correct polarity.
- For the mouse: Open the battery compartment on the underside and insert 1 AA battery (not included), ensuring correct polarity. The USB receiver is typically stored here.

2. **Retrieve USB Receiver:** Carefully remove the 2.4G USB receiver from its storage slot within the mouse's battery compartment.

3. **Connect Receiver:** Insert the USB 2.4G receiver into an available USB-A port on your computer (desktop, laptop, or Surface device).

### 4. Power On:

- For the keyboard: Locate the ON/OFF switch on the top right side of the keyboard and slide it to

the "ON" position.

- For the mouse: Locate the ON/OFF switch on the underside of the mouse and slide it to the "ON" position.

5. **Automatic Connection:** The keyboard and mouse should automatically connect to your computer. No additional drivers or pairing steps are typically required for the 2.4G connection.

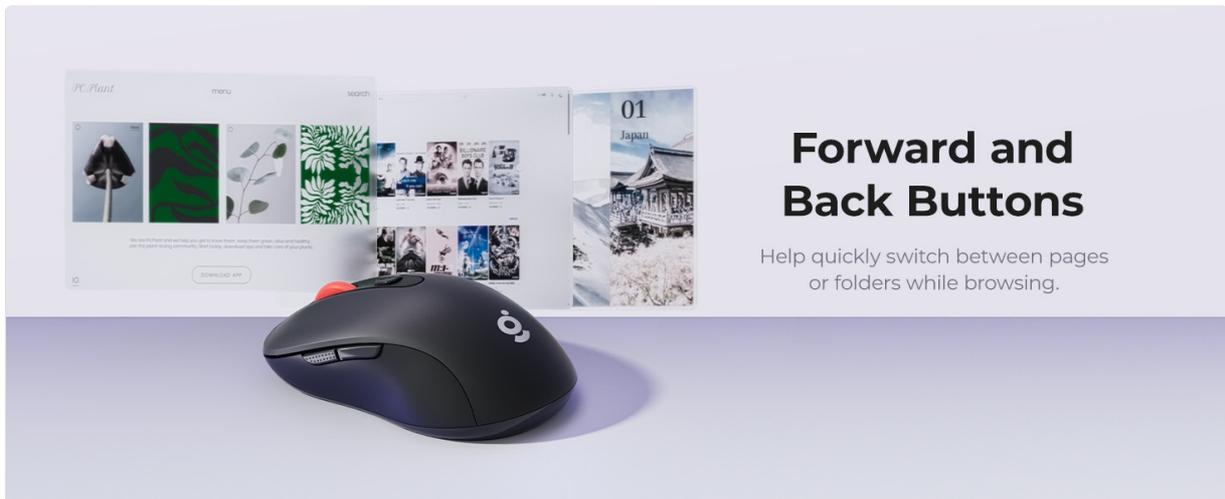


Figure 1: Step-by-step guide on how to correctly install batteries and connect the USB receiver for the wegear Wireless Keyboard and Mouse Combo.

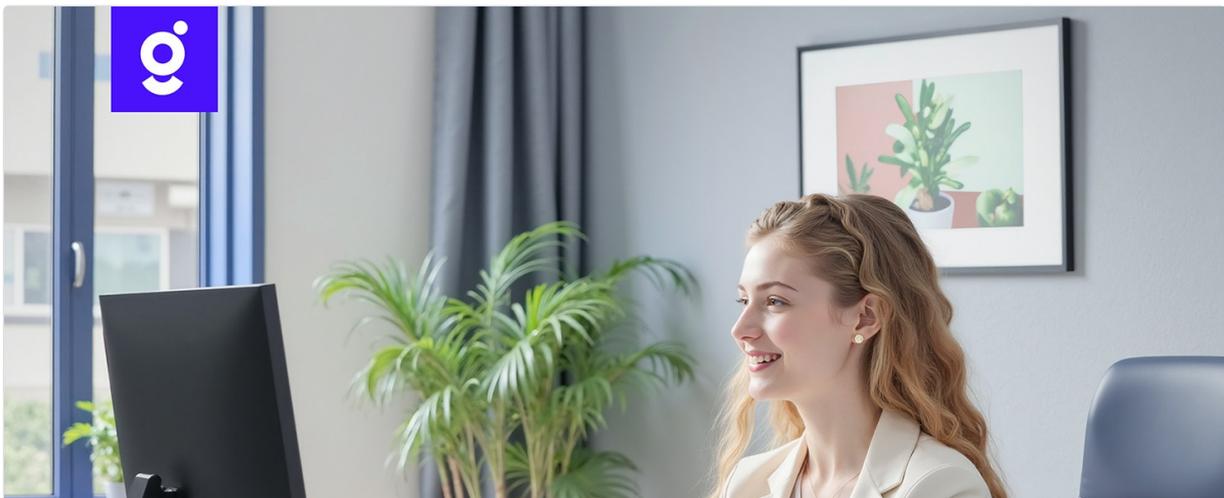


Figure 2: The 2.4G USB receiver enables a stable wireless connection up to 10 meters for both the keyboard and mouse, offering plug-and-play convenience.

## OPERATING INSTRUCTIONS

### Keyboard Features

- **Full-Size Layout:** The keyboard features a standard 104-key layout, including a numeric keypad and function keys for comprehensive input.
- **Multimedia Shortcuts:** 8 dedicated multimedia shortcut keys are available for quick access to functions like Home, Search, Refresh, Back, Forward, Email, Calculator, and Computer.
- **Silent Keys:** Low-profile keycaps reduce typing noise by up to 90%, providing a quiet working environment.
- **Foldable Kickstands:** Adjustable kickstands on the underside allow you to set a comfortable typing angle, reducing wrist fatigue.
- **Compatibility:** Compatible with Windows 7+ and macOS 10+ operating systems.



Figure 3: The 104-key full-size keyboard includes 8 dedicated shortcut keys for enhanced productivity, such as Home, Search, and Calculator.



Figure 4: Experience silent typing with the wegear keyboard, designed to reduce noise by 90% for a more focused work environment.

### Mouse Features

- **6-Button Design:** The ergonomic mouse features 6 buttons, including left/right click, scroll wheel, DPI adjustment, and side forward/back buttons for efficient navigation.
- **Adjustable DPI:** Cycle through 5 adjustable DPI levels (800-1200-1600-2400-4000) to customize cursor sensitivity for precise control.
- **Ergonomic Design:** The contoured shape and skin-friendly frosted surface provide a comfortable and secure grip, minimizing hand fatigue during prolonged use.
- **Standard Click Sound:** Please note that the mouse features a standard click sound and is not silent.

**Long Battery Life**

**24**  
Month  
Battery Life

**8**  
Minute  
Auto-Sleep

Note: After sleep mode, move the mouse to wake it.

Figure 5: The wegear mouse offers 5 adjustable DPI settings (800-4000) to fine-tune cursor sensitivity for various tasks and preferences.

## How to Connect Device Correctly

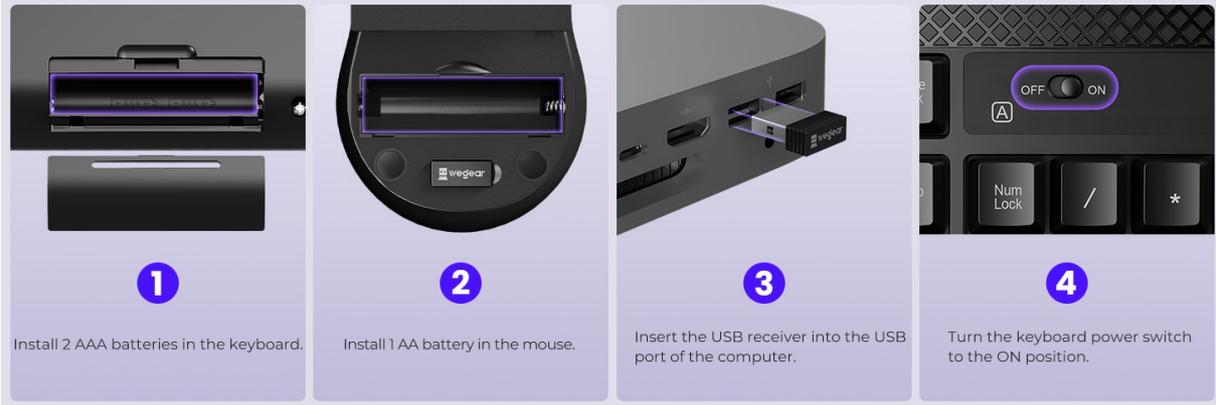


Figure 6: Utilize the convenient forward and back buttons on the side of the mouse to quickly navigate between pages or folders while browsing.

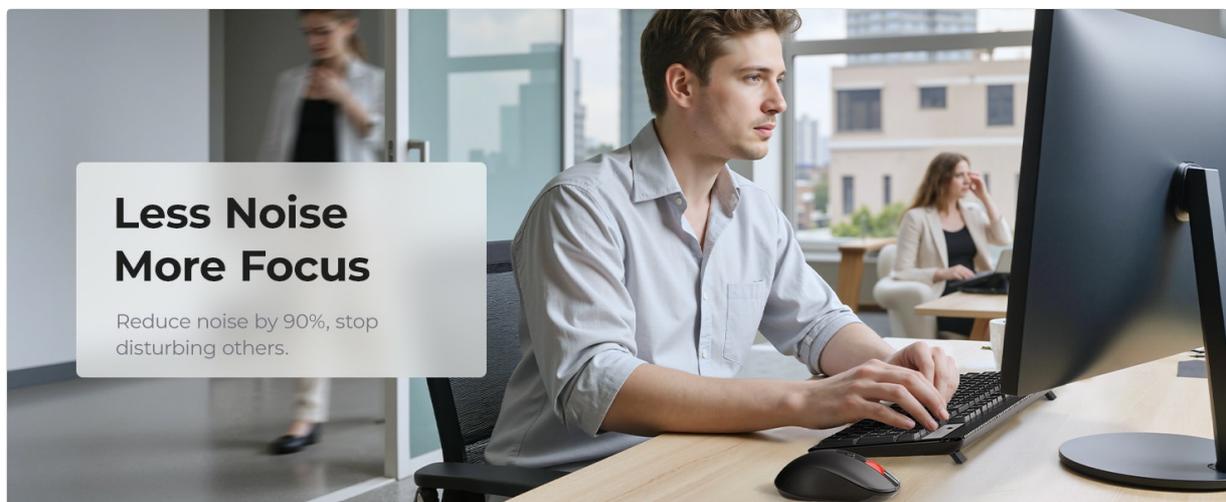


Figure 7: The ergonomic design, featuring foldable keyboard kickstands and a contoured mouse, minimizes hand fatigue during extended use.

## BATTERY INSTALLATION & MANAGEMENT

- The keyboard requires 2 AAA batteries.
- The mouse requires 1 AA battery.
- **Auto-Sleep Function:** To conserve battery life, the keyboard enters auto-sleep mode after 10 minutes of inactivity, and the mouse after 8 minutes.
- **Waking Devices:** To wake the keyboard, press any key (except the Windows key). To wake the mouse, simply move it.
- **Battery Life:** With typical usage, the batteries can last up to 1 year.



Figure 8: Both the keyboard and mouse feature auto-sleep modes (10 min for keyboard, 8 min for mouse) to extend battery life up to 24 months. Batteries are not included.

## CARE AND MAINTENANCE

- Keep the devices away from liquids and excessive moisture.
- Clean the keyboard and mouse with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- When not in use for extended periods, turn off both the keyboard and mouse to further conserve battery life.
- Store the USB receiver inside the mouse when traveling to prevent loss.

## TROUBLESHOOTING

Problem	Solution
Keyboard/Mouse not responding	<ul style="list-style-type: none"> <li>◦ Ensure batteries are correctly installed and not depleted. Replace if necessary.</li> <li>◦ Check if the ON/OFF switch on both devices is in the "ON" position.</li> <li>◦ Verify the USB receiver is securely plugged into a working USB-A port on your computer. Try a different USB port.</li> <li>◦ Move the devices closer to the USB receiver to ensure they are within the 33-foot (10-meter) operating range.</li> <li>◦ Restart your computer.</li> </ul>
Lag or intermittent connection	<ul style="list-style-type: none"> <li>◦ Reduce the distance between the devices and the USB receiver.</li> <li>◦ Avoid placing the receiver near other wireless devices (e.g., Wi-Fi routers, cordless phones) that may cause interference.</li> <li>◦ Ensure there are no large metal objects between the devices and the receiver.</li> </ul>

Problem	Solution
Mouse cursor erratic or not moving smoothly	<ul style="list-style-type: none"> <li>◦ Clean the optical sensor on the underside of the mouse.</li> <li>◦ Try adjusting the DPI settings using the DPI button on the mouse.</li> <li>◦ Ensure you are using the mouse on a suitable surface (non-reflective, non-transparent).</li> </ul>

## SPECIFICATIONS

<b>Brand</b>	wegear
<b>Model Number</b>	ET-8418
<b>Connectivity Technology</b>	2.4G Wireless (USB Receiver)
<b>Keyboard Layout</b>	104-Key Full-Size with 8 Multimedia Shortcuts
<b>Mouse Buttons</b>	6 Buttons (Left/Right, Scroll, DPI, Forward/Back)
<b>Mouse DPI Levels</b>	800/1200/1600/2400/4000 Adjustable
<b>Operating Range</b>	Up to 33 feet (10 meters)
<b>Keyboard Battery</b>	2 x AAA (not included)
<b>Mouse Battery</b>	1 x AA (not included)
<b>Compatible Devices</b>	Laptop, Personal Computer (Windows 7+, macOS 10+)
<b>Product Dimensions</b>	17.32 x 5.91 x 0.71 inches
<b>Item Weight</b>	1.96 pounds

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact wegear customer service directly. Keep your purchase receipt for warranty claims.