

PRETZI PB-70TVS-23FP-BLK

PRETZI 70-inch Fireplace TV Stand with 23-inch Electric Fireplace Instruction Manual

Model: PB-70TVS-23FP-BLK

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your PRETZI 70-inch Fireplace TV Stand with 23-inch Electric Fireplace. This unit combines a modern entertainment center with a functional electric fireplace, offering both media storage and supplemental heating. Please read all instructions carefully before assembly and use to ensure safe and proper operation.

Important Note: Your order will arrive in two separate packages (one for the TV stand, one for the fireplace unit). These packages may be delivered on different days.

2. SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before installing or using this fireplace TV stand.
- Do not operate the fireplace if the power cord is damaged or if the unit malfunctions. Contact customer support immediately.
- Ensure the unit is placed on a firm, level surface.
- Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The fireplace is equipped with an overheat protection feature. If the heater overheats, it will automatically shut off. Unplug the unit and allow it to cool for 15 minutes before restarting.
- Do not overload the TV stand. The maximum recommended weight for the top surface is 150 lbs.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.


3.1. Package 1: TV Stand Components

- TV Stand panels (top, bottom, sides, shelves, back panels)
- Cabinet doors
- Assembly hardware (screws, dowels, cam locks, hinges, handles)
- LED lighting kit with remote control

3.2. Package 2: Electric Fireplace Unit

- 23-inch Electric Fireplace insert
- Fireplace remote control
- Power cord

PACKAGE 1

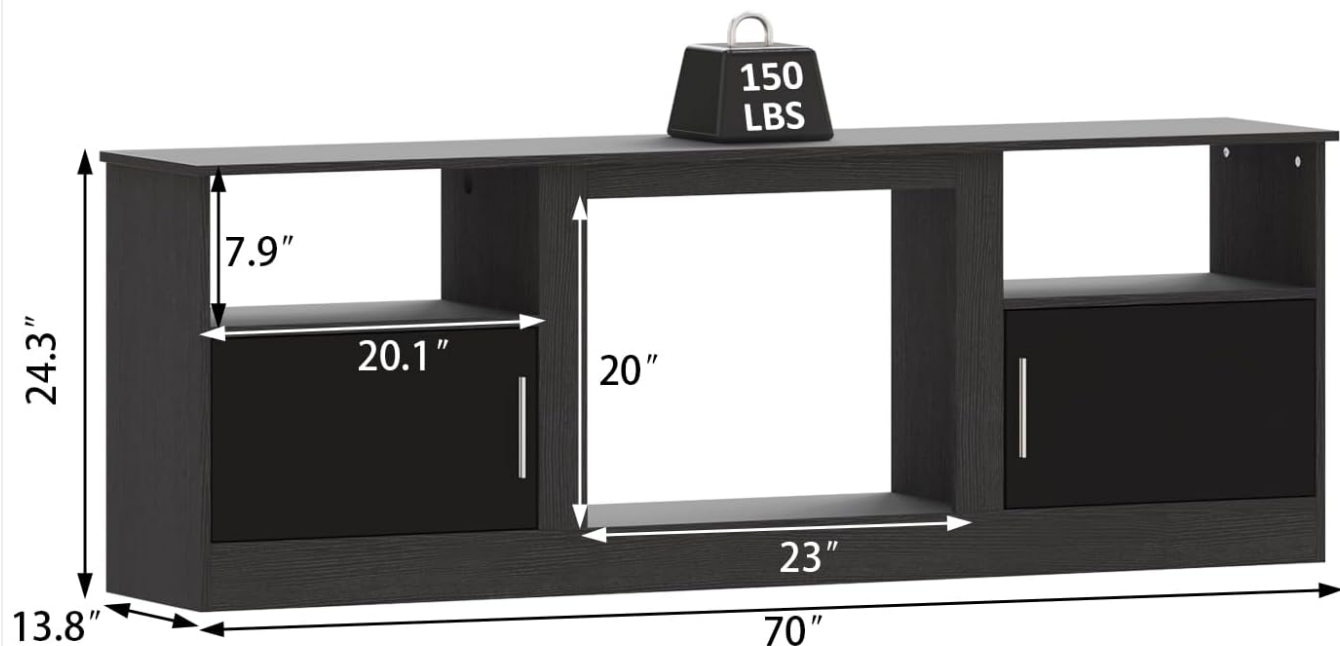

PACKAGE 2



DELIVERY IN
2 BOXES



TV STAND



FIREPLACE

***SHIPPED BY 2 BOXES SAME TIME,
DELIVERY TIME MAY BE DIFFERENT DAY**

Image: Dimensions of the 70-inch TV Stand (Package 1) and 23-inch Electric Fireplace (Package 2). The TV stand measures approximately 70 inches wide, 13.8 inches deep, and 24.3 inches high. The fireplace insert measures approximately 23 inches wide, 5.3 inches deep, and 17.7 inches high. Both components are shipped in separate boxes.

HIGHLIGHT DOORS

Functional & Decorative



Image: Visual representation of the two-package delivery process for the TV stand and fireplace, highlighting that they may arrive on separate days.

4. SETUP AND ASSEMBLY

Assembly typically requires two people for quicker and safer installation. All parts are labeled, and pre-drilled holes are provided for ease of assembly. Follow the detailed instructions included in the TV stand packaging.

4.1. TV Stand Assembly

1. Unpack all components from Package 1 and verify against the parts list.
2. Assemble the main frame of the TV stand according to the provided diagrams, securing panels with the designated hardware.
3. Install the internal shelves and back panels.
4. Attach the cabinet doors using the hinges, ensuring they open and close smoothly.
5. Install the handles on the cabinet doors.

4.2. Electric Fireplace Installation

1. Once the TV stand frame is assembled, carefully slide the 23-inch electric fireplace insert (from Package 2) into the central opening of the TV stand.
2. Ensure the fireplace unit is securely seated and flush with the TV stand's front surface.
3. Route the power cord of the fireplace unit to a suitable electrical outlet, ensuring it is not pinched or damaged.

4.3. LED Lighting Installation

1. Attach the LED light strips to the designated areas within the open storage shelves of the TV stand, following the instructions provided with the LED kit.
2. Connect the LED light strips to the power adapter and controller.



Image: The assembled PRETZI 70-inch Fireplace TV Stand with the 23-inch Electric Fireplace integrated. This image provides an overview of the final product after successful assembly.

5. OPERATING INSTRUCTIONS

5.1. Electric Fireplace Operation

The electric fireplace can be operated using the control panel on the unit or the included remote control.

- **Power On/Off:** Press the power button to turn the fireplace on or off.
- **Heater Settings:** Adjust the heat output between 750W (low) and 1500W (high) using the heater button. The heater warms rooms up to 400 sq. ft.
- **Flame Effects:** Cycle through 7 realistic flame colors using the flame button. The brightness of the flames can also be adjusted.
- **Timer Function:** Set the operational timer for 0-8 hours. The fireplace will automatically shut off after the set duration.



Image: The 23-inch electric fireplace unit and its remote control, illustrating key functions such as timer, heater settings, and flame color adjustments.

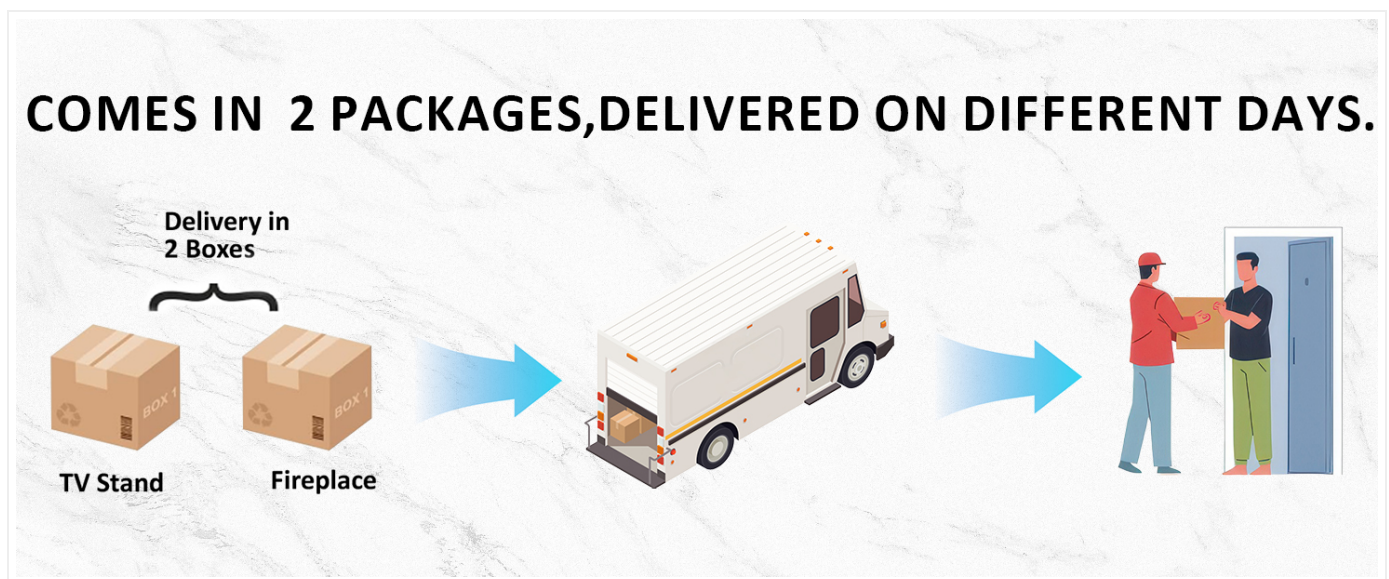


Image: Examples of the 7 adjustable flame colors and brightness levels available on the electric fireplace, demonstrating the visual variety.

5.2. LED Lighting Operation

The integrated LED lighting kit offers customizable ambiance for your entertainment center.

- Use the dedicated remote control for the LED lights to select from 15 changeable static colors.
- Explore various adjustable control options to customize the lighting effects and atmosphere.

15 COLOR LED LIGHTS



Image: The TV stand illuminated with 15 different LED colors, showcasing the customizable lighting options.

6. MAINTENANCE

Regular maintenance helps ensure the longevity and proper functioning of your fireplace TV stand.

- **Cleaning the TV Stand:** Dust the surfaces regularly with a soft, dry cloth. For deeper cleaning, use a slightly damp cloth with a mild, non-abrasive cleaner. Avoid harsh chemicals that may damage the finish.
- **Cleaning the Fireplace:** Ensure the fireplace is turned off and unplugged before cleaning. Use a soft, damp cloth to wipe the exterior. Do not spray water directly onto the unit. Keep the air intake and exhaust vents clear of dust and debris.
- **Hardware Check:** Periodically check all assembly hardware (screws, bolts) to ensure they are tight. Retighten if necessary to maintain structural integrity.
- **Cord Care:** Inspect the power cord for any signs of damage (fraying, cuts). If damage is found, discontinue use and contact customer support.

7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord not plugged in, circuit breaker tripped, overheat protection activated.	Ensure power cord is securely plugged into a working outlet. Check household circuit breaker. If overheat protection activated, unplug and let cool for 15 minutes.
Heater not producing heat.	Heater setting is off, thermostat set too low, air vents blocked.	Verify heater setting is on (750W or 1500W). Ensure air intake/exhaust vents are clear.
Flame effect not working.	Flame effect is turned off, internal light bulb issue.	Ensure flame effect is activated via control panel or remote. If issue persists, contact customer support.

Problem	Possible Cause	Solution
LED lights not working.	LED power adapter unplugged, remote control battery dead, LED strip connection loose.	Check LED power adapter connection. Replace remote battery. Ensure LED strips are securely connected.
Remote control not responding.	Batteries dead or incorrectly inserted, obstruction between remote and unit.	Replace batteries with new ones, ensuring correct polarity. Remove any obstructions. Point remote directly at the unit.

If you encounter any issues not listed here or if the problem persists after attempting the suggested solutions, please contact PRETZI customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	PRETZI
Model Name	PB-70TVS-23FP-BLK
Material	Wood
Color	Black
Installation Type	Freestanding
TV Stand Dimensions (Approx.)	70" W x 13.8" D x 24.3" H
Electric Fireplace Dimensions (Approx.)	23" W x 5.3" D x 17.7" H
Item Weight	76.7 Pounds
Maximum Compatible TV Size	Up to 80 Inches
Heating Coverage	400 sq ft
Heater Power	750W / 1500W
Fireplace Features	Adjustable Flame, Dimmer, LED Flame, Timer (0-8 hours), 7 Flame Colors
LED Lighting Features	15 Changeable Static Colors, Multi-kind Adjustable Control
Included Components	TV Stand, Electric Fireplace, Remote Controls

9. WARRANTY AND SUPPORT

9.1. Limited Warranty

This PRETZI product comes with a limited warranty. Please refer to the warranty documentation included with your purchase for specific terms and conditions. The warranty typically covers manufacturing defects under normal use.

9.2. Customer Support

For any questions, assistance with assembly, troubleshooting, or warranty claims, please contact PRETZI customer support. Our team is available to provide support and ensure your satisfaction.

Contact Information: Please refer to your purchase documentation or the official PRETZI website for the most current customer support contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question