

Sinbo SVC-8620

Sinbo SVC-8620 Cordless Stick Vacuum Cleaner User Manual

Model: SVC-8620

[Introduction](#) [Safety Instructions](#) [Package Contents](#) [Setup & Charging](#) [Operation](#) [Maintenance](#)
[Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Sinbo SVC-8620 Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before first use and keep it for future reference. The SVC-8620 features a powerful BLDC motor, LED illumination, and a versatile design for various cleaning tasks.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.

3. PACKAGE CONTENTS

Please check the contents of your package to ensure all items are present and undamaged:

- Main Unit (Motor & Dustbin)
- Extension Wand
- Motorized Floor Brush with LED Illumination
- Crevice Tool
- 2-in-1 Brush Tool
- Charging Dock
- Power Adapter
- User Manual



Image: All included components of the Sinbo SVC-8620 vacuum cleaner.

4. ASSEMBLY AND CHARGING

4.1 Assembly

1. **Attach the Extension Wand:** Align the extension wand with the main unit's connection port and push until it clicks securely into place.
2. **Attach the Floor Brush:** Connect the motorized floor brush to the other end of the extension wand, ensuring it locks firmly.
3. **Handheld Configuration:** For handheld use, you can attach the crevice tool or 2-in-1 brush tool directly to the main unit.



Image: Fully assembled Sinbo SVC-8620 vacuum cleaner.

4.2 Charging the Battery

Before first use, fully charge the vacuum cleaner for optimal performance.

1. Place the main unit onto the charging dock.
2. Connect the power adapter to the charging dock and then plug it into a wall outlet.
3. The battery indicator on the main unit will show the charging status. Ensure the battery is fully charged before disconnecting.

NORMAL MOD

- 9 kpa emiř gc ile yksek performans
 - 39 dakika kullanım sresi
- *(Tavsiye Edilen Mod)*

TURBO MOD

- 24 kpa emiř gc ile turbo performans
- 18 dakika kullanım sresi



Image: Main unit display showing battery status and power modes.

5. OPERATION

5.1 Powering On/Off

Press the power button located on the handle to turn the vacuum cleaner on or off.

5.2 Selecting Power Modes

The SVC-8620 offers two power modes:

- **Normal Mode:** Provides 9 kPa suction power for high performance and offers approximately 39 minutes of runtime. This is the recommended mode for general cleaning.
- **Turbo Mode:** Delivers 24 kPa suction power for intensive cleaning and offers approximately 18 minutes of runtime.

Press the mode selection button on the main unit to switch between Normal and Turbo modes. The current mode will be indicated on the display.

5.3 Using Attachments

- **Motorized Floor Brush:** Ideal for cleaning carpets and hard floors. The integrated LED illumination helps to reveal hidden dust and debris in dark areas.



Image: Motorized floor brush with LED illumination in use on a carpet.

- **Crevice Tool:** Perfect for reaching tight spaces, corners, and gaps in furniture or car interiors.

Çıkarılabilir Batarya ile Pratik Kullanım



Image: Handheld vacuum with crevice tool cleaning a drawer.

- **2-in-1 Brush Tool:** Use the brush for delicate surfaces like keyboards or upholstery, and retract the bristles for a wider nozzle.



Image: Handheld vacuum with brush tool cleaning a keyboard.



Image: Handheld vacuum cleaning a sofa.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

6.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the MAX fill line is reached, to maintain strong suction power.

1. Ensure the vacuum is turned off.
2. Press the dustbin release button to detach the dustbin from the main unit.
3. Open the dustbin lid and empty the contents into a waste bin.
4. Close the dustbin lid and reattach the dustbin to the main unit until it clicks.



Image: Handheld unit showing the dustbin section.

6.2 Cleaning Filters

The filters should be cleaned regularly to prevent clogging and maintain suction. Refer to the dustbin section for filter access.

1. Remove the dustbin as described above.
2. Carefully remove the filters from the dustbin.
3. Tap the filters gently over a waste bin to remove loose dust. If washable, rinse them under cold running water until the water runs clear.
4. Allow filters to air dry completely for at least 24 hours before reinserting them. Do not use the vacuum with wet filters.

6.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris and remove it to ensure effective cleaning.

1. Turn off the vacuum and detach the floor brush.
2. Locate the brush roll access cover on the bottom of the floor brush.

3. Open the cover and remove the brush roll.
4. Use scissors or a cleaning tool to cut and remove any tangled hair or fibers.
5. Reinsert the brush roll and close the access cover securely.

7. TROUBLESHOOTING

If you encounter any issues with your Sinbo SVC-8620, please refer to the following table before contacting customer support.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted. Battery not properly inserted. Power button not pressed.	Charge the battery fully. Ensure battery is securely clicked into place. Press the power button firmly.
Low suction power.	Dustbin is full. Filters are clogged. Brush roll is tangled. Nozzle or hose is blocked.	Empty the dustbin. Clean or replace the filters. Clean the brush roll. Check for and remove any blockages.
Battery not charging.	Power adapter not connected. Charging dock not properly connected. Faulty power outlet. Battery issue.	Ensure power adapter is securely plugged into the dock and wall outlet. Verify the charging dock is correctly connected to the main unit. Test the outlet with another appliance. If the issue persists, contact customer support.
LED lights on floor brush not working.	Connection issue. LED malfunction.	Ensure the floor brush is securely attached to the extension wand. If the problem continues, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	Sinbo
Model Name	SVC-8620
Power Source	Battery Powered
Motor Type	BLDC Motor
Special Feature	LED Illumination
Surface Recommendation	Carpet, Hardwood

Feature	Detail
Included Components	Charging Dock, Extension Tool (Wand)
Power Levels	2 (Normal, Turbo)
Normal Mode Suction Power	9 kPa
Normal Mode Runtime	Up to 39 minutes
Turbo Mode Suction Power	24 kPa
Turbo Mode Runtime	Up to 18 minutes
Portability	Yes
Indoor/Outdoor Use	Indoor, Outdoor
Form Factor	Stick

9. WARRANTY AND SUPPORT

Your Sinbo SVC-8620 Cordless Stick Vacuum Cleaner is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or to inquire about replacement parts, please contact Sinbo Customer Service. Contact information can typically be found on the Sinbo official website or on your product packaging.