

VINEGO R36s

VINEGO R36s Handheld Retro Game Console User Manual

Model: R36s

1. INTRODUCTION

The VINEGO R36s is a portable retro gaming console designed to provide an immersive experience with classic games. Featuring a 3.5-inch IPS display and a powerful processor, it supports a wide range of vintage console emulators. This manual provides essential information for setting up, operating, and maintaining your device.

2. SAFETY INFORMATION

Please read and understand the following safety guidelines before using the console:

- All packaging materials (tape, labels, plastic sheets, binding wires) and small internal machine accessories are choking hazards.
- Keep the device and its components away from children under 3 years of age.
- Use the console only with adult supervision, especially when children are present.
- Avoid exposing the device to extreme temperatures, direct sunlight, or moisture.
- Do not attempt to disassemble or modify the console, as this may void the warranty and cause damage.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x VINEGO R36s Retro Handheld Console
- 1 x USB Charging Cable
- 1 x User Manual (this document)
- 1 x TF Card (pre-installed with games and operating system)

4. PRODUCT FEATURES

The VINEGO R36s console offers the following key features:

- **Display:** 3.5-inch HD IPS color screen with 640x480 pixel resolution.
- **Processor:** Professional gaming chip RK3326, 1.5GHz, 64-bit, capable of running 2D and some 3D games.
- **Storage:** 128GB TF card included, pre-loaded with over 12,000 classic games.
- **Battery:** 3000mAh Lithium-Ion battery, providing approximately 5-8 hours of playtime.
- **Controls:** Dual 3D joysticks, D-pad, L/R bumpers, and standard gaming buttons (A, B, X, Y, Select, Start, FN).
- **Emulation:** Supports 20 vintage console emulators, including NES, PS1, GBA, NDS, PSP, and more.
- **Portability:** Compact and lightweight design (15.5 ounces, 4.41 x 1.77 x 5.98 inches) for on-the-go gaming.



Image: The R36s console highlighting its support for over 15,000 classic games across multiple emulators like NES, GBA, PSP, and PS1.

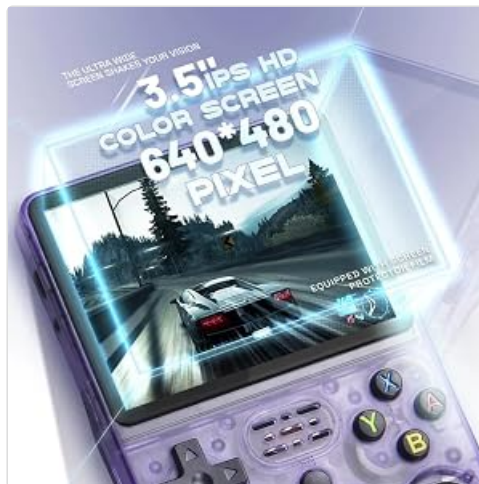


Image: Detail of the R36s 3.5-inch IPS HD color screen with 640x480 pixel resolution, displaying a vibrant racing game.



Image: The R36s console showcasing its professional RK3326 1.5GHz 64-bit chip, designed for smooth game performance.



Image: A side view of the R36s console emphasizing its 3200mAh battery, providing 7-8 hours of playtime.

5. DEVICE LAYOUT AND KEY FUNCTIONS

Familiarize yourself with the console's buttons and ports:



Image: A detailed diagram illustrating the key functions and layout of the R36s handheld console.

- **Power ON/OFF:** Located on the side, press and hold to power on or off.
- **Reset:** Small button on the side for system reset.
- **TF1 (OS):** MicroSD card slot for the operating system. Do not remove during operation.
- **TF2 (Game):** MicroSD card slot for game ROMs.

- **Audio Hole:** 3.5mm headphone jack.
- **Volume Keys:** Buttons on the side to adjust audio output.
- **D-Pad:** Directional pad for navigation and control.
- **Left Stick / Right Rocker:** Analog joysticks for precise movement.
- **A/B/X/Y Buttons:** Standard action buttons.
- **Select:** Game function button.
- **Start/Pause Button:** Game function button, also used for pausing.
- **FN (Function) Button:** Used in combination with other buttons for special functions (e.g., menu access, save states).
- **L1/L2/R1/R2:** Shoulder buttons for additional game controls.

6. SETUP

Follow these steps for initial setup:

1. **Charging the Console:** Before first use, fully charge the console using the provided USB charging cable. Connect the cable to the console's charging port and a compatible USB power adapter (not included). The charging indicator light will typically show charging status and turn off when fully charged.
2. **Inserting TF Cards:** The console comes with two TF card slots. TF1 is for the operating system and should remain inserted. TF2 is for game ROMs. Ensure both cards are securely inserted before powering on.
3. **Powering On:** Press and hold the 'Power ON/OFF' button on the side of the console until the screen illuminates. The system will boot up, displaying the main menu.

7. OPERATING INSTRUCTIONS

Navigate and play games on your R36s console:

1. **Navigating the Menu:** Use the D-pad or Left Stick to move through menu options. Press the 'A' button to select an option or enter a submenu. Press the 'B' button to go back.
2. **Selecting a Game:** From the main menu, select an emulator (e.g., 'NES', 'PS1'). Browse the list of available games using the D-pad or Left Stick.
3. **Launching a Game:** Once you have highlighted a game, press the 'A' button to launch it. The game will load, and you can begin playing.
4. **In-Game Menu / Save States:** During gameplay, pressing the 'FN' button (or a combination like 'FN' + 'Start') typically brings up an in-game menu. From this menu, you can save your game progress (save state), load a previously saved state, adjust emulator settings, or exit the game.
5. **Adjusting Volume:** Use the 'Volume Keys' on the side of the console to increase or decrease the sound.
6. **Powering Off:** To properly shut down the console, press and hold the 'Power ON/OFF' button until a power-off option appears on the screen, then select it. Alternatively, a long press will force a shutdown.

8. MAINTENANCE

Proper care will extend the life of your console:

- **Cleaning:** Use a soft, dry cloth to clean the console's exterior. For the screen, use a microfiber cloth specifically

designed for electronics. Avoid using harsh chemicals or abrasive materials.

- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. If storing the console for an extended period, charge it to about 50-70% and store it in a cool, dry place. Recharge every few months to prevent deep discharge.
- **Storage:** Store the console in a protective case or a safe place to prevent scratches or damage from drops. Keep it away from dust and extreme temperatures.
- **TF Card Handling:** Always power off the console before inserting or removing TF cards to prevent data corruption.

9. TROUBLESHOOTING

Common issues and their solutions:

Problem	Possible Cause	Solution
Console does not power on.	Low battery; faulty power button; system crash.	Charge the console for at least 30 minutes. Press the 'Reset' button. If issue persists, contact support.
Games do not load or crash.	Corrupted game file; incorrect emulator settings; TF card issue.	Ensure TF2 (Game) card is properly inserted. Try a different game. If many games fail, the TF card may be corrupted.
Console overheats during use.	Prolonged heavy use; poor ventilation.	Take breaks during extended gameplay. Ensure the console is not covered. If overheating is severe or constant, discontinue use and contact support.
Screen is unresponsive or frozen.	System crash.	Press the 'Reset' button. If the issue recurs frequently, ensure the OS TF card (TF1) is not corrupted.

10. SPECIFICATIONS

Detailed technical specifications for the VINEGO R36s console:

Feature	Detail
Model	R36s
Brand	VINEGO
Screen Size	3.5 Inches
Display Type	IPS LCD
Resolution	640 x 480 pixels
Processor	RK3326 (1.5GHz, 64-bit)

Feature	Detail
Memory Storage Capacity	128 GB (via TF card)
Battery Type	Lithium-Ion
Battery Capacity	3000mAh
Battery Life	Approximately 5-8 Hours
Controller Type	Joystick, D-Pad, Buttons
Material	Plastic
Product Dimensions	4.41 x 1.77 x 5.98 inches
Item Weight	15.5 ounces (0.44 Kilograms)
Recommended Age	3 months and up (with adult supervision)

11. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the retailer's return policy or contact VINEGO customer service directly through their official channels. Specific warranty details may vary by region and purchase location.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question