

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Kitchen HQ](#) /

› [Kitchen HQ 2-Pack 1-Pint Ice Cream Maker Instruction Manual \(Model 867-498\)](#)

Kitchen HQ 867-498

Kitchen HQ 2-Pack 1-Pint Ice Cream Maker Instruction Manual

Model: 867-498

INTRODUCTION

This instruction manual provides detailed guidance for the safe and efficient use of your Kitchen HQ 2-Pack Ice Cream Maker. Designed for ease of use, this appliance allows you to create delicious soft ice cream, sorbet, and yogurt right in your home. Each maker has a one-pint capacity, and the set includes two units, each in its own gift box. Please read all instructions carefully before operating the appliance.

PRODUCT COMPONENTS

Your Kitchen HQ Ice Cream Maker set includes the following components:

- Two (2) Ice Cream Maker units (each with a freezer bowl, paddle, and motor lid)
- Six (6) recipes for ice cream, yogurt, and sorbet
- Cups and spoons (as pictured)



Image: The main Kitchen HQ 1-Pint Ice Cream Maker unit in red.



Image: Assorted colorful ice cream cups and matching spoons included with the set.



Image: Close-up view of the ice cream maker's interior, showing the paddle mechanism.

SETUP INSTRUCTIONS

1. **Freeze the Bowl:** Place the freezer bowl(s) in your freezer for at least 8 hours, or preferably overnight, to ensure it is completely frozen. The bowl must be thoroughly frozen for the ice cream to churn properly.
2. **Prepare Ingredients:** While the bowl is freezing, prepare your desired ice cream, sorbet, or yogurt mixture. Ensure all ingredients are well-mixed and chilled.
3. **Assemble the Unit:** Once the freezer bowl is frozen, remove it from the freezer. Place the paddle inside the frozen bowl. Secure the motor lid onto the bowl, ensuring it is properly locked in place.

OPERATING INSTRUCTIONS

1. **Start the Motor:** Plug in the ice cream maker and turn on the motor. The paddle should begin to rotate.
2. **Pour Mixture:** Slowly pour your chilled ice cream, sorbet, or yogurt mixture through the opening in the motor lid into the rotating freezer bowl.
3. **Churn:** Allow the mixture to churn for approximately 20-25 minutes. The churning time may vary depending on the recipe and desired consistency.
4. **Add Mix-ins:** If adding solid mix-ins like chocolate chips, nuts, or fruit, do so during the last 5 minutes of churning through the lid opening.
5. **Check Consistency:** The ice cream will have a soft, creamy consistency similar to soft-serve when finished. For a

firmer consistency, transfer the ice cream to an airtight container and freeze for an additional 2-4 hours.

6. **Serve:** Serve immediately for soft-serve, or after additional freezing for a firmer texture.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity of your ice cream maker:

- **Disassembly:** Unplug the unit before disassembling. Remove the motor lid and paddle.
- **Cleaning Bowls and Spoons:** The freezer bowls and spoons are dishwasher safe (top rack recommended). Hand wash with warm, soapy water if preferred.
- **Cleaning Motor Lid:** Wipe the motor lid with a damp cloth. Do not immerse the motor lid in water or any other liquid.
- **Drying and Storage:** Ensure all parts are completely dry before reassembling or storing. Store the freezer bowls in the freezer so they are ready for your next use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Ice cream is too soft/not freezing.	Freezer bowl not sufficiently frozen.	Ensure freezer bowl is frozen for at least 8-24 hours. Ingredients may not have been chilled enough.
Motor stops during churning.	Mixture is too thick or frozen solid.	Ensure mixture is liquid before churning. Do not overfill the bowl. Unplug, clear obstruction, and restart.
Paddle not rotating.	Lid not properly secured or paddle not correctly inserted.	Check that the motor lid is securely locked and the paddle is correctly seated in the bowl.

SPECIFICATIONS

- **Brand:** Kitchen HQ
- **Model Name:** 867-498
- **Capacity:** 1 Pint per maker
- **Material:** Plastic, Stainless Steel
- **Operation Mode:** Automatic
- **Item Weight:** 3 Pounds (total for 2-pack)
- **Package Dimensions:** 6.25 x 5.75 x 5.75 inches
- **UPC:** 601570662218

WARRANTY AND SUPPORT

This Kitchen HQ Ice Cream Maker comes with a **1-Year Refurbished Warranty**. For any product inquiries, technical support, or warranty claims, please refer to the contact information provided with your purchase documentation or visit the official Kitchen HQ support website.

Note: As this is a renewed product, specific support channels may vary. Please retain your proof of purchase.

