

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FOCHEW](#) /

› [FOCHEW 6-in-1 Portable Charger 10800mAh User Manual](#)

FOCHEW HX100M9

FOCHEW 6-in-1 Portable Charger 10800mAh User Manual

Model: HX100M9

INTRODUCTION

Thank you for choosing the FOCHEW 6-in-1 Portable Charger 10800mAh. This versatile power bank is designed to provide convenient and efficient charging for a wide range of devices, including iPhones, Android phones, tablets, and smartwatches. With its built-in cables, AC wall plug, and multiple output ports, it offers a comprehensive charging solution for your daily needs and travels.



Image: Front and back view of the FOCHEW 6-in-1 Portable Charger, highlighting its compact design and integrated features.

PRODUCT FEATURES

- **6-in-1 Design:** Integrates built-in Type-C and iOS cables, an AC wall plug, USB-A output, USB-C output, and iWatch wireless charging.
- **High Capacity:** 10800mAh battery provides multiple charges for smartphones and other devices.
- **Fast Charging:** Supports QC4.0 and 25W PD fast charging for rapid power delivery.
- **LCD Digital Display:** Clearly shows the remaining battery percentage.
- **Wide Compatibility:** Compatible with iPhone 16/15/14/13/12 series, Samsung S22/S23 series, Google Pixel, LG, Moto, tablets, iWatch, and other smart devices.
- **Simultaneous Charging:** Capable of charging up to 5 devices concurrently.



Image: Visual representation of the charger's 6-in-1 functionality, detailing its integrated cables and charging options.

PACKAGE CONTENTS

- FOCHEW 10800mAh Portable Charger x1
- User Manual x1

SETUP

1. **Initial Charge:** Before first use, fully charge the power bank. Extend the integrated AC wall plug and connect it to a standard wall outlet. The LCD display will show the charging progress.
2. **Check Battery Level:** Press the power button once to view the current battery percentage on the LCD display.

Two Ways To Charger Power Bank

 **3Hrs**
By AC Plug



 **5Hrs**
By USB C Cable



Image: The portable charger being recharged via its built-in AC wall plug, showing the convenience of direct wall charging.

OPERATING INSTRUCTIONS

Charging Devices with Built-in Cables:

1. Identify the appropriate built-in cable (Type-C or iOS) for your device.
2. Gently pull out the desired cable from its storage slot on the power bank.
3. Connect the cable to your device's charging port. The power bank will automatically begin charging.

Charging Devices with USB Ports:

1. For USB-A compatible devices, use your device's USB-A charging cable and plug it into the USB-A output port on the power bank.
2. For USB-C compatible devices, use your device's USB-C charging cable and plug it into the USB-C output port on the power bank.
3. The power bank will detect the connected device and initiate charging.

Wireless Charging for iWatch:

1. Place your iWatch directly onto the designated wireless charging pad on the power bank.
2. Ensure the iWatch is properly aligned for optimal charging. The iWatch display will indicate charging status.



Image: The FOCHWE portable charger actively charging multiple devices, including an iPhone, Android phone, and Apple Watch, demonstrating its multi-device charging capability.

RECHARGING THE POWER BANK

The power bank can be recharged using two methods:

- **Via AC Wall Plug:** Extend the integrated AC wall plug and insert it directly into a standard wall outlet. The LCD display will show the charging percentage increasing.
- **Via USB-C Input:** Connect a USB-C cable to the power bank's USB-C input port and plug the other end into a compatible USB wall adapter or power source.

It is recommended to fully charge the power bank before extended use or travel.

MAINTENANCE

- Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- Clean the surface with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- For optimal battery life, fully charge and discharge the power bank at least once every three months if not in regular use.

TROUBLESHOOTING

- **Device not charging:**
 - Ensure the power bank has sufficient charge.
 - Verify that the charging cable is securely connected to both the power bank and your device.
 - Try a different cable or port on the power bank.
 - For iWatch wireless charging, ensure proper alignment on the charging pad.
- **Power bank not recharging:**
 - Check if the AC wall plug is fully inserted into a working outlet.
 - If using USB-C input, ensure the cable and wall adapter are functional.
- **Slow charging:**
 - Ensure your device supports fast charging and that you are using a compatible cable.
 - Charging multiple devices simultaneously may reduce individual charging speeds.

SPECIFICATIONS

Feature	Detail
Model Number	HX100M9
Battery Capacity	10800mAh
Product Dimensions	5 x 2 x 0.7 inches
Item Weight	10.5 ounces
Input (USB-C)	Max 18W
Output (USB-A)	Max 25W QC4.0
Output (USB-C)	Max 25W PD
Output (iWatch Wireless)	Max 3W
Built-in Cables	Type-C, iOS
Special Features	Built-in AC Wall Plug, LCD Display

WARRANTY AND SUPPORT

This FOCHEW Portable Charger comes with a worry-free 24-month warranty and lifetime technical

support. For any inquiries or assistance, please refer to the contact information provided with your purchase or visit the official FOCHEW support website.