



[Manuals.plus](#) /

› [HOOBRO](#) /

› HOOBRO Farmhouse Shoe Storage Cabinet WH110SC01 User Manual

HOOBRO WH110SC01

HOOBRO Farmhouse Shoe Storage Cabinet WH110SC01 User Manual

Model: WH110SC01

1. PRODUCT OVERVIEW

The HOOBRO Farmhouse Shoe Storage Cabinet (Model WH110SC01) is designed to provide efficient and stylish shoe organization for your home. It features a spacious top surface, an open compartment, and two flip drawers with adjustable shelves, offering versatile storage solutions for various items and shoe sizes.



Image 1.1: The HOOBRO Farmhouse Shoe Storage Cabinet in a home entryway, showcasing its design and functionality.

Key Features:

- **Functional Design:** Features a roomy top and an open compartment for organizing daily essentials like wallets, keys, and decorative items.
- **Large Capacity:** Two flip drawers can accommodate 12-16 pairs of shoes, keeping them dust-free.
- **Adjustable Shelves:** Each flip drawer includes 2 adjustable and removable shelves with 3 height levels for customized storage.
- **Durable Construction:** Made from premium particleboard, supporting up to 20 kg on the top surface and 5 kg per drawer shelf.
- **Versatile Aesthetic:** Warm white body with a walnut top complements various interior styles. Reversible doors offer two distinct patterns.
- **Safety Features:** Includes anti-tip hardware for secure wall attachment.

2. SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembly and use to prevent injury or damage.

- Always follow the assembly instructions provided in the package.
- Secure the cabinet to the wall using the supplied anti-tip kit before use. This is crucial to prevent tipping accidents, especially in households with children or pets.
- Do not exceed the maximum weight capacity: 20 kg (44 lbs) for the top surface and 5 kg (11 lbs) for each drawer shelf.
- Avoid placing the cabinet in damp or excessively humid environments for prolonged periods to prevent material damage.
- Keep small parts and packaging materials away from children during assembly.



Image 2.1: Illustration of the anti-tipping device and its importance for stability and safety.

3. SETUP AND ASSEMBLY

This shoe storage cabinet requires assembly. Detailed instructions and all necessary components are included in the packaging. Please ensure you have sufficient space and the appropriate tools (usually a screwdriver) before beginning assembly.

Assembly Steps:

1. **Unpack Components:** Carefully unpack all parts and hardware. Verify that all components listed in

the instruction manual are present and undamaged.

2. **Follow Instructions:** Refer to the step-by-step assembly guide provided in the box. Each component is typically marked for easy identification.
3. **Assemble Frame:** Begin by assembling the main frame of the cabinet according to the diagrams.
4. **Install Drawers:** Assemble and install the two flip drawers. Ensure they operate smoothly.
5. **Adjust Shelves:** Position the adjustable shelves within the flip drawers to suit your shoe sizes. There are 3 levels of adjustment.
6. **Attach Anti-Tip Kit:** Securely attach the anti-tip hardware to the back of the cabinet and to a wall stud using appropriate fasteners. This step is critical for safety.
7. **Final Check:** Once assembled, ensure all connections are tight and the cabinet is stable.



Image 3.1: Detail view of the cabinet's top, open compartment, and drawer handles, highlighting the quality of components.

4. OPERATING INSTRUCTIONS

Using the Flip Drawers:

The cabinet features two flip drawers designed for easy access and dust protection for your shoes.

- To open a drawer, gently pull the handle outwards. The drawer will tilt forward, revealing the shoe compartments.
- Place shoes into the compartments. The adjustable shelves allow for different shoe heights.
- To close, push the drawer back until it is flush with the cabinet front.



Image 4.1: The shoe cabinet with one flip drawer open, demonstrating how shoes are stored.

Adjusting Shelves:

Each flip drawer contains two adjustable shelves. To change their height:

1. Empty the drawer of all shoes.
2. Carefully remove the shelf from its current position.
3. Reinsert the shelf into the desired slot. There are three available height levels.
4. Ensure the shelf is securely seated before placing shoes back into the drawer.



Image 4.2: A detailed view of the adjustable shelves within a flip drawer, illustrating the three possible height settings.

Reversible Doors:

The cabinet doors can be reversed to display two different aesthetic patterns, allowing you to customize its appearance.

- To reverse the doors, carefully remove them according to the assembly instructions.
- Flip the door vertically and reattach it to the cabinet.
- Ensure the door is securely re-installed and operates correctly.

Reversible Doors

Flip vertically to pick between two designs.

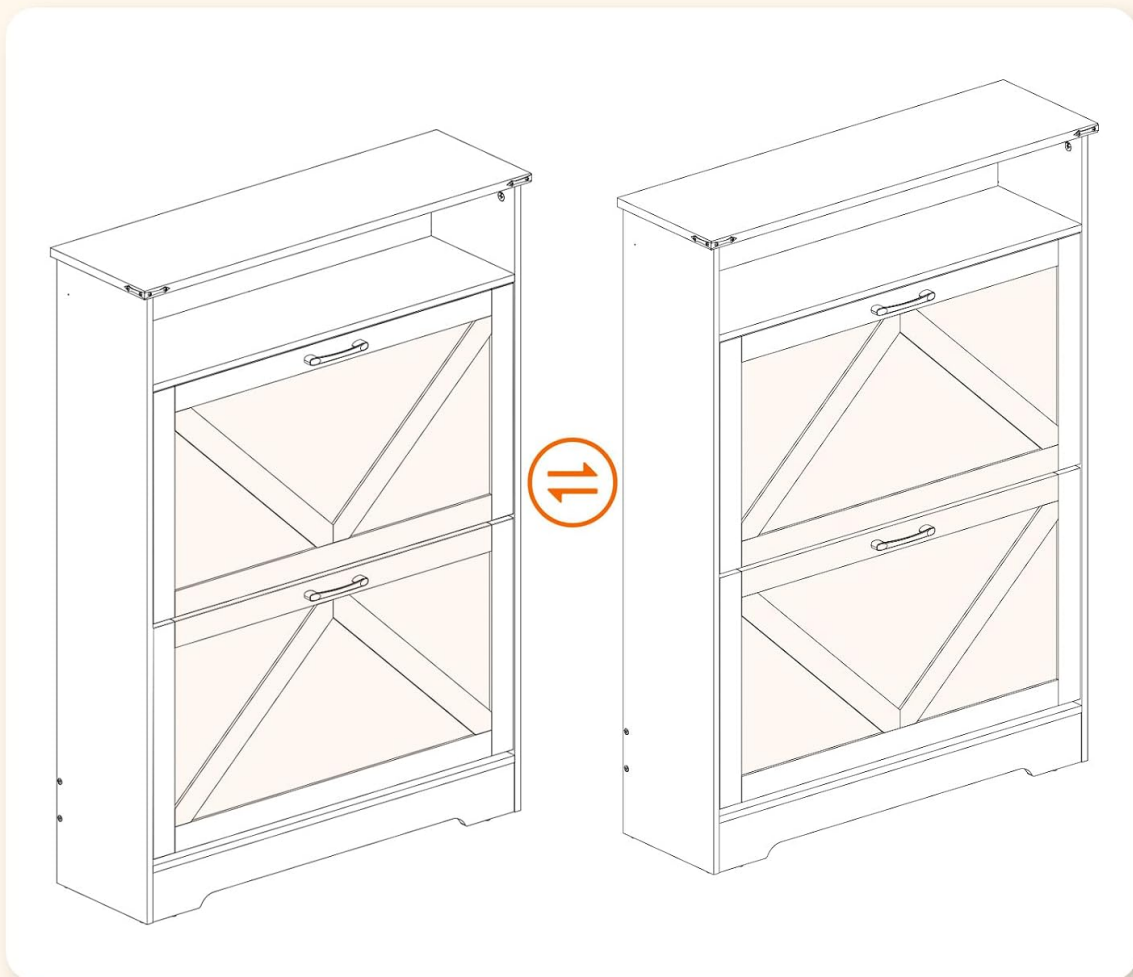


Image 4.3: Diagram illustrating how the cabinet doors can be reversed to change their visual pattern.

5. MAINTENANCE

Proper care and maintenance will ensure the longevity and appearance of your HOOBRO shoe storage cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dusting:** Regularly dust the cabinet with a dry, soft cloth to prevent buildup.
- **Spills:** Immediately wipe up any spills to prevent staining or moisture damage.
- **Environmental Conditions:** Keep the cabinet away from direct sunlight and extreme temperature changes to prevent warping or fading. Avoid high humidity.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they are tight. Retighten if necessary.

6. TROUBLESHOOTING

Common Issues and Solutions:

- **Cabinet is wobbly:**
 - Ensure all assembly screws are tightened.
 - Verify the cabinet is placed on a level surface.
 - Confirm the anti-tip kit is properly installed and secured to the wall.
- **Flip drawers do not open/close smoothly:**
 - Check for any obstructions inside the drawer or along the mechanism.
 - Ensure the drawer components were assembled correctly according to the instructions.
 - Verify that the adjustable shelves are properly seated and not interfering with the drawer's movement.
- **Missing parts during assembly:**
 - Double-check all packaging materials.
 - Contact HOOBRO customer support with your model number and a description of the missing part.

7. SPECIFICATIONS

Feature	Detail
Brand	HOOBRO
Model Number	WH110SC01
Color	Warm White + Walnut
Material	Engineered Wood, Metal
Product Dimensions (D x W x H)	24D x 80W x 110.5H Centimetres (9.4"D x 31.5"W x 43.5"H)

Feature	Detail
Item Weight	18.9 Kilograms (41.6 lbs)
Top Surface Weight Capacity	20 kg (44 lbs)
Drawer Shelf Weight Capacity	5 kg (11 lbs) per shelf
Number of Flip Drawers	2
Adjustable Shelf Levels	3 per drawer
Mounting Type	Floor Mount (with anti-tip kit for wall attachment)
Assembly Required	Yes



8. WARRANTY AND SUPPORT

For warranty information, missing parts, or any product-related inquiries, please contact HOOBRO customer support directly. Refer to the contact information provided in your product packaging or visit the official HOOBRO website.

When contacting support, please have your model number (WH110SC01) and purchase details readily available.

HOOBRO Official Store: [Visit the HOOBRO Store on Amazon](#)