

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KODAK](#) /

› [KODAK WF270 27-inch Digital Photo Frame User Manual](#)

## KODAK WF270

# KODAK WF270 27-inch Digital Photo Frame User Manual

Model: WF270 | Brand: KODAK

## INTRODUCTION


The KODAK WF270 Digital Photo Frame offers a large 27-inch Full HD IPS display with a resolution of 1920x1080, providing vivid reproduction of photos and videos. Its 16:9 aspect ratio and 178° viewing angle ensure clear visibility from various positions. This device is equipped with 32GB of internal memory, expandable via SD card or USB memory, allowing storage for tens of thousands of photos. Beyond displaying media, it includes practical features such as a calendar, clock, alarm, weather forecast, and background music playback.

The frame supports smart operation via an included remote control for adjusting slideshow speed and brightness. A dedicated app for iOS and Android devices enables easy uploading and real-time sharing of photos and videos with family and friends, regardless of distance.

## PACKAGE CONTENTS

Before setup, please ensure all items are present in the package:


- KODAK WF270 Digital Photo Frame
- PSE Certified Power Cord
- Remote Control
- Mounting Bracket and Screws
- Instruction Manual

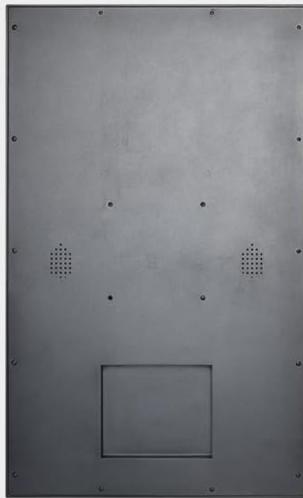

WIFIデジタルフォト  
フレーム本体



PSE認証済み  
電源コード

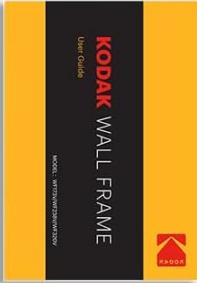

日本語取扱  
説明書



リモコン



固定ブラケット

Image: Components of the KODAK WF270 Digital Photo Frame package.

## SETUP

### 1. Power Connection

- Connect the PSE certified power cord to the digital photo frame.
- Plug the power adapter into a standard electrical outlet.
- The frame will automatically power on or enter standby mode.

### 2. Initial Configuration

- Follow the on-screen prompts to select your preferred language (Japanese system is supported).
- Connect the frame to your Wi-Fi network by selecting your network and entering the password.

### 3. Wall Mounting (Optional)

The frame can be wall-mounted using the provided bracket. Please note that this method requires drilling holes in the wall, which may cause damage. If you prefer not to drill, consider alternative placement methods.

- Identify a suitable location on the wall.

- Securely attach the mounting bracket to the wall using appropriate screws and tools.
- Carefully attach the digital photo frame to the mounted bracket.

ご注意: 本品は壁へのネジ止め取り付けが必要です。壁に穴を開けたくない場合、別方法での設置をご検討ください



Image: Example of the digital photo frame mounted on a wall, highlighting the mounting bracket.

## OPERATING INSTRUCTIONS

### 1. Remote Control Operation

Use the included remote control to navigate menus, adjust settings, and control media playback. Functions include:

- Power On/Off
- Volume Control
- Brightness Adjustment
- Slideshow Speed Control
- Menu Navigation

### 2. App Control and Sharing

Download the free dedicated app on your iOS or Android smartphone or tablet to manage and share content.

1. Install the KODAK photo frame app from your device's app store.
2. Pair your device with the digital photo frame via the app.
3. Upload photos and videos directly from your smartphone or tablet to the frame.
4. Share memories in real-time with connected family and friends.



Image: A smartphone displaying the app interface for transferring photos to the frame.

### 3. Media Playback

The frame supports various media types and display modes:

- **Photo Slideshows:** Display photos from internal memory, SD card, or USB drive.
- **Video Playback:** Play videos stored on the device or external memory.
- **Music Playback:** Play background music (BGM) during slideshows.

### 4. Multi-functional Features

The frame includes several utility functions:

- **Calendar Mode:** View the current date and schedule.

- **Clock Mode:** Display the time.
- **Alarm Function:** Set alarms.
- **Weather Forecast:** Display local weather information.



ビッグサイズで高精細、大切な写真を見るのが楽しめる  
豊富な機能が、暮らしのひとときをそっと彩ります

Image: The digital photo frame showcasing its various display modes: photo, calendar, clock, and weather.

## MAINTENANCE

To ensure the longevity and optimal performance of your KODAK WF270 Digital Photo Frame, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the screen and frame with a soft, dry, lint-free cloth. Do not use liquid cleaners, aerosols, or abrasive materials, as they may damage the surface.
- **Placement:** Avoid placing the frame in direct sunlight, near heat sources, or in areas with high humidity. Ensure adequate ventilation around the device.
- **Power Off:** When not in use for extended periods, disconnect the power cord from the electrical outlet.
- **Software Updates:** Periodically check for and install any available software updates to improve performance and add new features.

## TROUBLESHOOTING

If you encounter issues with your digital photo frame, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frame does not power on	Power cord not connected properly; Power outlet issue	Ensure power cord is securely connected to both the frame and the outlet. Test the outlet with another device.
No Wi-Fi connection	Incorrect password; Router too far; Network issue	Verify Wi-Fi password. Move frame closer to router. Restart router.
Photos not displaying	Unsupported file format; Corrupted files; SD card/USB not inserted correctly	Ensure photos are in supported formats (e.g., JPEG). Reinsert SD card/USB. Try different media.
Remote control not working	Dead batteries; Obstruction between remote and frame	Replace remote control batteries. Ensure clear line of sight to the frame's sensor.

## SPECIFICATIONS

Detailed specifications for the KODAK WF270 Digital Photo Frame:

- **Brand:** KODAK
- **Model Number:** WF270
- **Screen Size:** 27 inches
- **Resolution:** 1920x1080 (Full HD)
- **Display Type:** IPS LCD
- **Processor:** 1.6GHz
- **Internal Memory:** 32GB
- **External Memory Support:** SD Card, USB Memory
- **Connectivity:** Wi-Fi
- **Compatible Devices:** Smartphones (iOS/Android)
- **Product Dimensions:** 64.7 x 39.1 x 2.51 cm
- **Product Weight:** 9.62 kg

## WARRANTY AND SUPPORT

KODAK is committed to providing quality products. In case of receiving a product different from your order, initial defects (damage, missing parts), or quality issues under normal use, please contact us immediately.

- **Warranty Period:** A 1-year warranty period is provided for malfunctions due to product issues.
- **Warranty Service:** During the warranty period, eligible malfunctions will result in an unconditional new product exchange or refund.
- **Shipping Costs:** All shipping costs related to warranty service will be covered by the seller.
- **Contact:** For support, please contact the seller directly. We aim to respond within 24 hours.

