

[Manuals.plus](#) /

› [SICOTAS](#) /

› SICOTAS Fluted Sideboard Buffet Cabinet (Model SC123-1) Instruction Manual

SICOTAS SC123-1

SICOTAS Fluted Sideboard Buffet Cabinet Instruction Manual

Model: SC123-1

1. INTRODUCTION

Thank you for choosing the SICOTAS Fluted Sideboard Buffet Cabinet. This versatile storage solution is designed to complement various room styles, from contemporary to farmhouse, with its minimalist aesthetic and subtle fluted accents. This manual provides essential information for safe assembly, operation, and maintenance of your new cabinet.



Image 1.1: The SICOTAS Fluted Sideboard Buffet Cabinet, showcasing its design in a home environment.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembling or using this product. Failure to follow these instructions may result in injury or damage to the product.

- Always assemble according to the instructions provided.
- Do not overload shelves. Refer to the specifications for maximum weight capacity.
- Keep away from heat sources and excessive moisture to prevent material damage.
- Use caution when moving the cabinet to avoid injury. It is recommended to empty the cabinet before moving.
- Ensure the cabinet is placed on a stable, level surface to prevent tipping.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer service.

- Cabinet Doors (2)
- Adjustable Shelves (2)
- All necessary assembly tools
- Detailed assembly instructions
- Various panels and hardware for cabinet construction

4. SETUP AND ASSEMBLY

Assembly of the SICOTAS Fluted Sideboard Buffet Cabinet is designed to be straightforward with the included step-by-step instructions and labeled hardware. It is recommended to assemble the cabinet in the room where it will be used.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Match each part to the corresponding labels in the assembly guide.
3. **Follow Instructions:** Refer to the detailed assembly instructions provided in the package for step-by-step guidance. Ensure all screws and fasteners are tightened securely.
4. **Adjustable Shelves:** The cabinet features two adjustable shelves with three height options. Install them according to your storage needs.
5. **Adjustable Feet:** The cabinet includes adjustable feet for added stability on uneven surfaces. Adjust as needed to ensure the cabinet is level.



Image 4.1: Exploded view illustrating key features such as the water-resistant surface, handle-less design, adjustable shelves, durable wood frame, and adjustable foot pads.

Adjustable Inner Shelf

3-Level flexible storage that maximizes space



Image 4.2: Interior view demonstrating the adjustable shelves and ample storage space for various items.

5. OPERATING INSTRUCTIONS (USAGE)

The SICOTAS Fluted Sideboard Buffet Cabinet is designed for versatile use across various rooms and functions.

- **Dining Room Credenza:** Use to store dinnerware, serving dishes, and other dining essentials. The spacious top can display decorative items or serve as a buffet surface.
- **Living Room Accent Cabinet:** Ideal for organizing books, media accessories, or displaying decorative accents. Can also function as a TV console for media equipment.
- **Entryway Console Table:** Provides convenient storage for keys, bags, and other entryway items. The top surface is suitable for decor or a lamp.
- **Coffee Bar Storage:** Organize coffee machines, mugs, and related accessories for a dedicated coffee station.



Image 5.1: Cabinet functioning as a credenza in a dining area, holding decorative items and beverages.



Image 5.2: Cabinet placed in an entryway, serving as a console table with decorative elements.



Image 5.3: Multiple units combined to form a longer TV console, demonstrating versatility.

6. MAINTENANCE

Proper care and maintenance will ensure the longevity and appearance of your SICOTAS cabinet.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean spills immediately with a dry cloth to prevent staining or water damage.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the wood finish.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.
- **Hardware:** Periodically check and tighten all hardware to ensure structural integrity.

7. TROUBLESHOOTING

If you encounter any issues with your cabinet, refer to the following common solutions:

- **Wobbly Cabinet:** Ensure the cabinet is on a level surface. Adjust the foot pads at the bottom of the legs until stability is achieved. Check that all assembly screws are securely tightened.
- **Doors Not Aligning:** Check the hinge adjustments. Most hinges allow for minor adjustments to align doors properly. Refer to the assembly instructions for specific hinge adjustment details.
- **Scratches/Dents:** For minor imperfections, wood repair kits or markers matching the finish color can be used.
- **Color Variation:** Please note that product color may vary slightly due to different lighting conditions and display settings. This is a natural characteristic and not a defect.

Thickened Wood Top

Built to last with strong, reliable support



Image 7.1: Visual representation of how the cabinet's color may appear under various lighting conditions (bright, warm, natural, dim, cool light).

8. SPECIFICATIONS

Feature	Detail
Brand	SICOTAS
Model Number	SC123-1-Light Oak
Color	Reclaimed Light Oak
Material	Engineered Wood
Product Dimensions (D x W x H)	35.5D x 74.1W x 85.1H centimetres (13.98D x 29.2W x 33.5H inches)
Item Weight	22 kg (48.5 lbs)
Top Panel Load Capacity	30.3 kg (66.8 lbs)
Number of Shelves	2 (Adjustable)
Number of Doors	2
Mounting Type	Floor Mount
Style	Farmhouse, Mid-Century Modern, Boho

Product Dimensions



Product Dimensions	Top Panel Load Capacity	Drawer Dimension
14"D x 29.2"W x 33.5"H	77 lbs	33 lbs

Image 8.1: Detailed product dimensions for planning placement.

9. WARRANTY AND SUPPORT

SICOTAS is committed to providing high-quality products and customer satisfaction. Your purchase is eligible for return or refund within 30 days of receipt, subject to the retailer's policy.

For any questions, concerns, or assistance with assembly, please contact our dedicated customer service team. Our team is available seven days a week to provide support.

- **Manufacturer:** SICOTAS
- **Manufacturer Contact Information:** 1428 Lowen Dr, Gloucester, Ontario K1V 1H3 CA
- **Customer Service:** Available seven days a week (contact details typically found on packaging or retailer's website).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F9F29HR2>

More documents and user manuals: <https://manuals.plus/>