



Manuals.plus /

› RUOYINKE /

› RUOYINKE T800 Mini Projector Remote Control Instruction Manual

## RUOYINKE T800 Projector Remote Control

# RUOYINKE T800 Mini Projector Remote Control Instruction Manual

Model: T800 Projector Remote Control

## INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your RUOYINKE Remote Control for the ClokoWe T800 Mini Projector. Please read this manual carefully before use.

**Important Compatibility Note:** This remote control is specifically designed for and compatible only with the ClokoWe T800 Mini Projector. It is not compatible with other brands or models of projectors.

## SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA 1.5V batteries (not included) for operation. No special pairing or programming is required; simply install the batteries, and the remote will be ready for use with your compatible projector.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA 1.5V batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



*Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for inserting two AAA 1.5V batteries. The battery cover is shown detached next to the remote.*

## OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at the ClokoWe T800 Mini Projector's infrared receiver. The remote provides standard functions for projector control.

- **Power Button:** Press to turn the projector on or off.
- **Navigation Buttons (Arrow Keys):** Use to move through menus and select options.
- **OK/Enter Button:** Confirms selections within menus.
- **Volume Up/Down:** Adjusts the audio output level of the projector.
- **Source/Input Button:** Cycles through available input sources (e.g., HDMI, USB).
- **Menu Button:** Accesses the projector's main settings menu.
- **Back/Exit Button:** Returns to the previous menu or exits the current menu.

Refer to your ClokoWe T800 Mini Projector's own manual for specific functions and menu navigation details.

## MAINTENANCE AND CARE

- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new ones.
- **Long-Term Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the controller.
- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Avoid Damage:** Do not drop the remote control or expose it to extreme temperatures, humidity, or direct sunlight.

## TROUBLESHOOTING

---

- **Remote not responding:**
  - Ensure new AAA 1.5V batteries are correctly installed with proper polarity.
  - Check if the batteries are depleted and replace them if necessary.
  - Ensure there are no obstructions between the remote and the projector's IR receiver.
  - Confirm you are within the effective operating range and pointing the remote directly at the projector.
- **Remote only performs limited functions (e.g., only volume works):**
  - This remote is specifically for the ClokoWe T800 Mini Projector. If you are using it with a different projector model, full functionality is not guaranteed.
  - Verify that your projector is indeed the ClokoWe T800 model.
  - If using with the correct projector and experiencing limited function, contact customer support for assistance.
- **Remote appears damaged upon arrival:**
  - If the remote control is damaged during transportation, please contact the seller immediately for a replacement or refund.

## SPECIFICATIONS

---

<b>Brand</b>	RUOYINKE
<b>Model Name</b>	T800 Projector Remote Control
<b>Compatible Devices</b>	ClokoWe T800 Mini Projector (Only)
<b>Connectivity Technology</b>	Infrared (IR)
<b>Batteries Required</b>	2 x AAA 1.5V Alkaline Batteries (Not Included)
<b>Product Dimensions</b>	12.7 x 5.08 x 2.54 cm
<b>Item Weight</b>	50 g

## WARRANTY AND SUPPORT

---

For any questions, concerns, or issues regarding your RUOYINKE T800 Mini Projector Remote Control, please contact the seller directly through your purchase platform. They can provide assistance with troubleshooting, replacements, or refunds as per their policy.

Please retain your proof of purchase for any warranty claims or support requests.

