

[Manuals.plus](#) /

› [REVASRI](#) /

› REVASRI Rf1200 Golf Rangefinder Instruction Manual

REVASRI Rf1200

REVASRI Rf1200 Golf Rangefinder Instruction Manual

Model: Rf1200

 
1. INTRODUCTION

Thank you for choosing the REVASRI Rf1200 Golf Rangefinder. This device is designed to provide accurate distance measurements on the golf course, enhancing your game with features like slope compensation, flag lock with vibration, and 6X magnification. Please read this manual carefully to understand the proper operation and maintenance of your rangefinder.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x REVASRI Rf1200 Golf Rangefinder
- 1 x Protective Storage Case
- 1 x User Instruction Manual
- 1 x Type-C Charging Cable
- 1 x Lens Cleaning Cloth

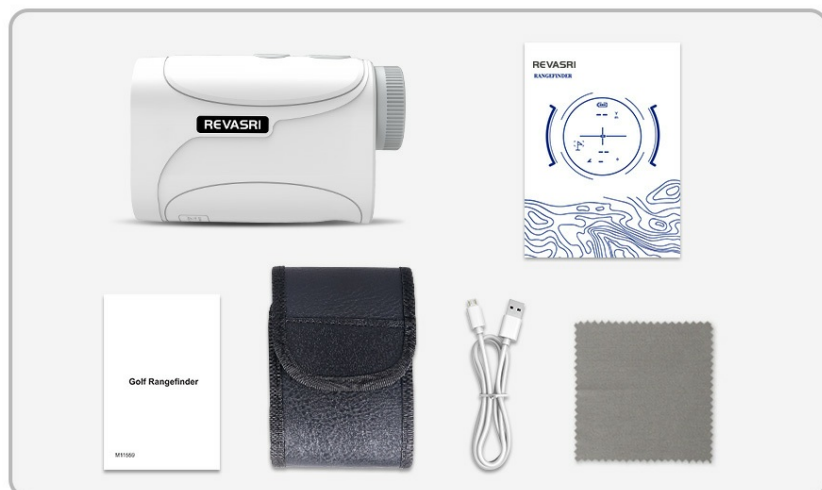

1*Rangefinder
1*Storage Case
1*Instructions
1*Type-C Cable
1*Lens Cloth

The package includes the REVASRI Rf1200 Golf Rangefinder, a protective storage case, a user instruction manual, a Type-C charging cable, and a lens cleaning cloth.

3. PRODUCT OVERVIEW

The REVASRI Rf1200 Golf Rangefinder is a compact and ergonomic device. It features an eyepiece for viewing, an objective lens for laser emission and reception, and control buttons for various functions.

ゴルフ距離計



1200ヤード



6X拡大レンズ



1Y 精度



フラグロック



スロープスイッチ



 
The REVASRI Rf1200 Golf Rangefinder, a compact and ergonomic device designed for accurate distance measurement on the golf course.

4. SETUP

4.1 Charging the Battery

Before first use, fully charge the rangefinder's built-in lithium-ion polymer battery. Connect the provided Type-C charging cable to the charging port on the device and to a standard USB power source.

- A red light indicates charging.
- A green light indicates a full charge.



Golf Rangefinder Details



Appropriate size:



IP54 waterproof rating:



Charging prompt:

The rangefinder features an IP54 waterproof rating and includes a clear charging indicator for its Type-C port. The device is designed for portability with an appropriate size.

30000 uses
after fully charged

Continuous battery life, 750mAh battery capacity enough to help you complete a golf tournament



Package Content

The integrated 750mAh battery provides approximately 30,000 measurements on a full charge, ensuring long-lasting performance during golf rounds.

4.2 Power On/Off


To power on the device, press the power button briefly. To power off, press and hold the power button for a few seconds, or the device will automatically shut down after a period of inactivity to conserve battery.

5. OPERATING MODES

The REVASRI Rf1200 offers multiple modes to assist with your golf game.

5.1 Standard Measurement

Point the rangefinder at your target and press the measurement button. The distance will be displayed in the eyepiece. The device offers a range of 5 to 1200 yards with an accuracy of ± 1 yard.

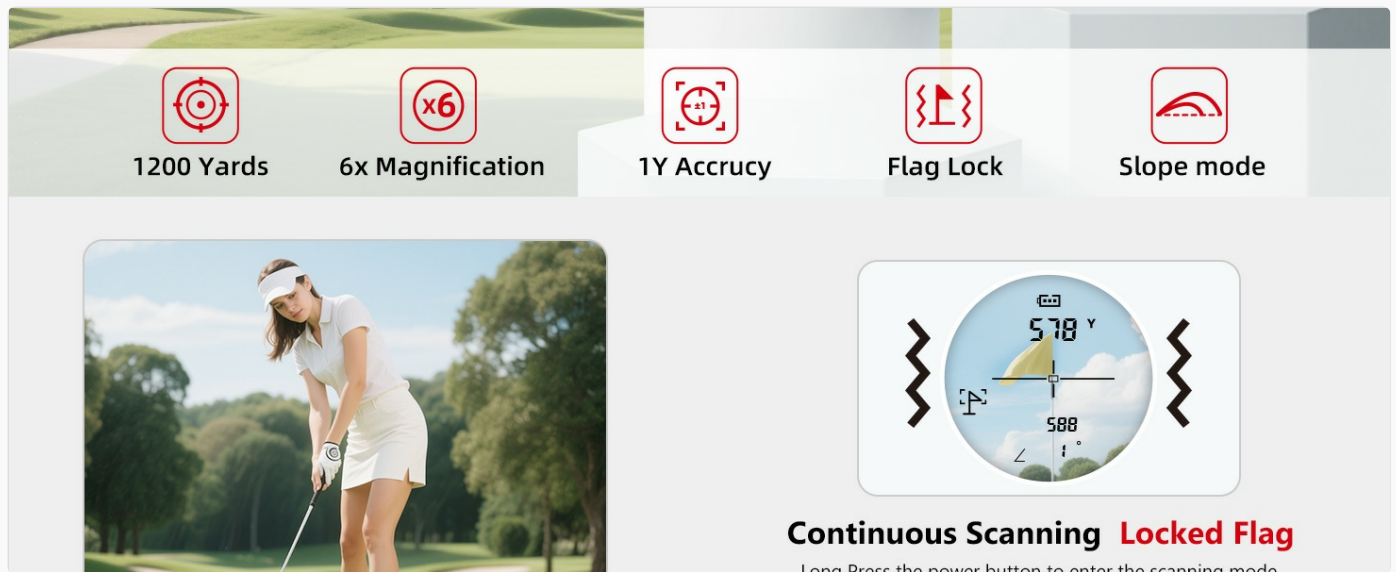

This image highlights key features such as 1200-yard range, 6X magnification, 1-yard accuracy, flag lock, slope mode, and continuous scanning for efficient target acquisition.

5.2 Flag Lock with Vibration

This mode helps to lock onto the flagstick, ignoring background objects. When the flag is successfully locked, the device will vibrate to confirm the measurement.

- Aim at the flagstick.
- Press and hold the measurement button to activate continuous scanning.
- Once the flag is detected and locked, the device will vibrate, and the distance will be displayed.

フラッグ高速ロック

シヨーン式ポールバイブレーション通知勾配補正



The flag lock feature with vibration feedback confirms that the device has accurately targeted the flagstick, ensuring precise measurements.

5.3 Slope Mode

The slope mode calculates and displays the slope-adjusted distance, taking into account elevation changes between you and the target. This provides a more accurate 'play as' distance for uphill and downhill shots.

- Press the 'M' button to cycle through modes until Slope Mode is selected.
- Aim at the target.
- Press the measurement button. Both the actual distance and the slope-adjusted distance will be displayed.



Long Press the power button to enter the scanning mode,
lock flag and vibration



FLAG LOCK

Pulse vibration

 
 
Golf Rangefinder with **Slope Mode**

- ① Press "M" to Slope Mode
- ② Select & Aim The Target
- ③ Press "⏻" to Measure



This graphic illustrates the steps to activate and use the slope mode: press 'M' to select, aim at the target, and press the measurement button.

ゴルフ距離計の傾き補償

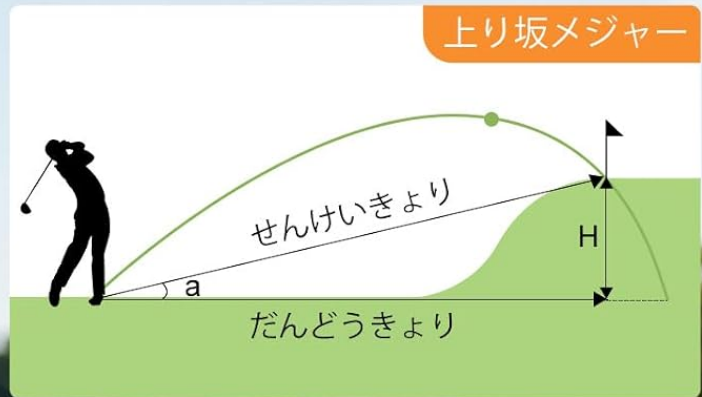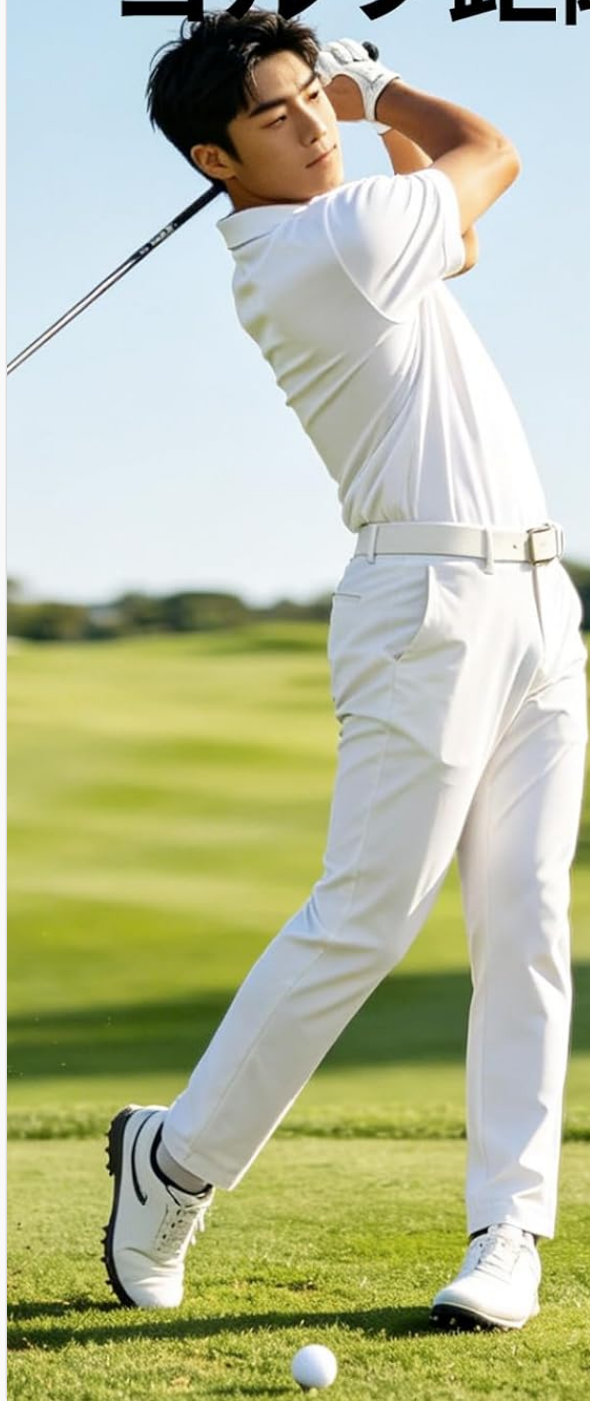

This diagram shows how the rangefinder calculates slope-adjusted distances for both uphill and downhill golf shots, providing a more accurate 'play as' distance.

5.4 6X Magnification

The rangefinder features 6X magnification, allowing for a clear and detailed view of distant targets. Rotate the eyepiece to adjust the focus for optimal clarity.

ゴルフ部品

6X 拡大

より明確で詳細なターゲットビューを楽しむ



Equipped with 6X magnification, the rangefinder allows for a clear and detailed view of distant targets, enhancing targeting precision.

6. MAINTENANCE

6.1 Cleaning

- Use the provided lens cleaning cloth to gently wipe the lenses. Do not use abrasive materials or harsh chemicals.
- Wipe the body of the rangefinder with a soft, damp cloth.

6.2 Storage

- Store the rangefinder in its protective case when not in use.

- Keep the device in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on	Low or depleted battery	Charge the battery fully using the provided Type-C cable.
Inaccurate distance readings	Unstable aiming, dirty lens, or environmental factors (fog, rain)	Ensure a steady aim. Clean the lenses with the provided cloth. Avoid use in heavy fog or rain.
Cannot lock onto flag	Background interference, flag too small/far, or not in flag lock mode	Ensure you are in flag lock mode. Aim carefully, sweeping across the flag if necessary. Try again from a closer distance.
Display is blurry	Eyepiece not focused	Rotate the eyepiece to adjust the focus until the display is clear.

8. SPECIFICATIONS

Feature	Specification
Model Number	Rf1200
Measurement Range	5 - 1200 yards
Measurement Accuracy	±1 yard
Magnification	6X
Battery Type	Rechargeable Lithium-ion Polymer
Battery Capacity	750 mAh
Charging Port	Type-C
Waterproof Rating	IP54
Weight	117 Grams
Material	Plastic
Color	White

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official REVASRI website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F9F6K8VX>

More documents and user manuals: <https://manuals.plus/>