

ABBIDOT AB-T60

ABBIDOT Dog Training Collar with Remote User Manual

Model: AB-T60
Brand: ABBIDOT

INTRODUCTION

This user manual provides comprehensive instructions for the safe and effective operation of your ABBIDOT Dog Training Collar with Remote. Designed for precise and humane correction, this collar offers various training modes to improve your dog's behavior. Please read this manual thoroughly before use to ensure proper setup and training.

WHAT'S INCLUDED

- 1 x Remote Transmitter
- 1 x Receiver Collar
- 1 x Adjustable Nylon Strap
- 2 x Pairs of Contact Points (short and long)
- 2 x Pairs of Silicone Caps for Contact Points
- 1 x Metal Extension Contact
- 1 x Dual USB Type-C Charging Cable
- 1 x Test Light Tool
- 1 x User Manual

PRODUCT OVERVIEW AND FEATURES



Image: The ABPIDOT Dog Training Collar system, showing the remote transmitter, receiver collar, and packaging.

WHY ABBIDOT

Feature	T60 	Others
Positive Training	E-Clicker 	
Range	Verified (4100ft) 	Unverified
Waterproof	Remote  Collar 	Remote  Collar 
Vibration	Powerful (36 levels) 	Standard (16 levels)
Stimulation	AB-TES System (118 levels) 	16-99 levels
Channels	6 Dogs 	2-3 Dogs
Guarantee	R&D & Production (18+ yrs) 	Outsourced

Image: A visual comparison highlighting the T60's features such as E-Clicker, 4100ft verified range, waterproof remote and collar, 36 vibration levels, 118 stimulation levels, and support for up to 6 dogs.

- **Professional-Grade Training:** 9 tones, 36 vibrations, and 118 stimulation levels for precise, humane correction.
- **Positive Reinforcement Training with E-clicker:** Features a built-in e-clicker for reward-based training, promoting faster learning and lasting behavior changes.
- **Safety Features:** Includes a 3-mode LED night light for visibility in low-light conditions and a safety lock feature to prevent accidental stimulation.

- **Extended Range:** Provides reliable control up to 4100 feet, suitable for large outdoor spaces.
- **Multi-Dog Support:** Capable of training up to 6 dogs simultaneously with additional collars (sold separately).
- **Waterproof Design:** Both the collar and remote are waterproof (IP67 rated), ensuring performance in various weather conditions.
- **Long-Lasting Battery:** Offers a standby battery life of 25 to 45 days for uninterrupted training sessions.
- **Adjustable Fit:** The collar is adjustable to fit dogs weighing 10 to 130 lbs, accommodating small, medium, and large breeds.
- **User-Friendly Display:** The remote display shows the dog channel, mode, level, safety lock status, and battery status for both the remote and collar.

SETUP GUIDE

1. Charging the Devices

Before initial use, fully charge both the remote transmitter and the receiver collar. Use the provided dual USB Type-C charging cable. Charging typically takes approximately two hours.

- Connect the charging cable to the charging ports on both the remote and the collar.
- Plug the USB end into a compatible USB power adapter (not included).
- The battery indicator on the remote and collar will show charging status.

2. Attaching the Collar and Contact Points

Select the appropriate length of contact points based on your dog's coat thickness. For dogs with shorter coats, use the shorter contact points. For dogs with thicker coats, use the longer contact points to ensure proper skin contact. Attach the silicone caps to the contact points to prevent skin irritation.



Image: The adjustable strap and different contact point options for fitting various dog sizes and coat types.

3. Fitting the Receiver Collar

Proper fit of the receiver collar is crucial for effective operation and your dog's comfort. The collar should be snug enough to allow the contact points to touch the dog's skin, but not so tight as to restrict breathing or cause discomfort. You should

be able to fit one finger snugly under the collar strap.

- Position the receiver on the underside of your dog's neck, centered.
- Ensure the contact points make direct contact with the skin.
- Regularly check the fit to prevent pressure sores.

4. Pairing the Remote and Collar

The set you ordered is typically pre-paired. If you purchase new collars or need to re-pair, follow these steps:

1. Select the desired channel/dog on the remote.
2. Hold the collar's ON/OFF button for 3 seconds until the red and green lights flash alternately.
3. On the remote, press both the "Tone" and "Vibration" buttons simultaneously to pair the collar.
4. To pair additional collars (up to 6 dogs), press the "1/2" button on the remote to switch channels and repeat the pairing process for each new collar.

Your browser does not support the video tag.

Video: Instructions on how to pair the remote with new collars or re-pair existing ones. This video demonstrates the step-by-step process of selecting channels, activating pairing mode on the collar, and confirming pairing with the remote.

OPERATING MODES

The ABBIDOT Dog Training Collar offers five distinct training modes:




Image: The remote control interface, illustrating the buttons for Tone, Vibration, Stimulation, and the LED Safety Light, along with their respective levels.

- **Tone Mode (9 Tones):** Emits an audible sound. Useful for attracting attention or as a warning signal.
- **Vibration Mode (36 Levels):** Delivers a non-harmful vibration. Can be used for gentle corrections or as a cue.
- **Stimulation Mode (118 Levels):** Provides a static stimulation. Levels are adjustable to match your dog's temperament and response. Always start at the lowest effective level.
- **E-Clicker Mode (12 Sound Modes):** A built-in electronic clicker for positive reinforcement training. Use it to mark desired behaviors immediately, followed by a reward.

- **LED Night Light (3 Modes):** The collar features an LED light with flashlight, slow flash, and explosive flash modes to enhance visibility of your dog in low-light conditions.

CUTTING-EDGE E-CLICKER

12 Sound Modes for Good Behavior

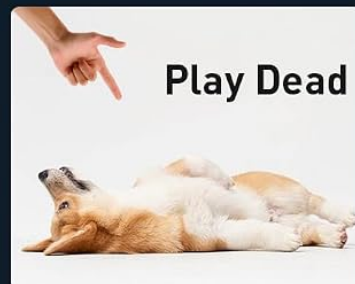

Close-range positive collar-free dog training

Image: Demonstrates the use of the e-clicker for positive reinforcement training, showing examples like "Shake," "Play Dead," "Lay Down," and retrieving a ball.

PROTECTED & USER-FRIENDLY

Single-handed use, easy and convenient



 **118** Levels
Stimulation

 **6** Collars
Multiple dogs



Battery Indicator
Remote & Collar



Image: Close-up of the remote control, highlighting the safety lock feature, battery indicators for both remote and collar, and the ability to manage multiple collars.

TRAINING TIPS

- **Start with Positive Reinforcement:** Begin training with the tone and vibration modes, using the e-clicker to mark good behavior.
- **Consistency is Key:** Use the collar consistently for specific commands or unwanted behaviors.

- **Short Training Sessions:** Keep training sessions brief and positive to maintain your dog's engagement.
- **Observe Your Dog:** Pay close attention to your dog's reaction to different levels and modes. Adjust as necessary.
- **Never Over-Correct:** Avoid prolonged or excessive use of stimulation. The goal is to get your dog's attention, not to punish.
- **Test on Yourself:** Before placing the collar on your dog, test the stimulation levels on your wrist to understand the sensation.

MAINTENANCE

- **Cleaning:** Regularly clean the receiver collar and contact points with a damp cloth. Ensure no dirt or debris accumulates around the contact points.
- **Battery Care:** To prolong battery life, avoid fully discharging the devices frequently. Charge them when the battery indicator shows low power.
- **Storage:** Store the collar and remote in a dry, cool place when not in use.
- **Inspect Regularly:** Periodically check the collar for any signs of wear or damage, especially the strap and contact points.



Image: The waterproof design of both the collar and remote, demonstrating their durability in wet conditions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Collar not responding to remote	Low battery; Not paired; Out of range; Interference	Charge devices; Re-pair collar and remote; Move closer to dog; Avoid strong electromagnetic fields.
No stimulation/vibration/tone	Incorrect mode/level selected; Poor contact with dog's skin; Device malfunction	Check mode and level on remote; Adjust collar fit and contact points; Test with test light; Contact support if issue persists.

Problem	Possible Cause	Solution
Collar turning off automatically	Low battery; Safety feature (e.g., during charging)	Charge collar fully; Ensure collar is turned on after charging.
Remote display not working	Low battery; Damage	Charge remote; Contact support for repair/replacement.

SPECIFICATIONS

- **Model:** AB-T60
- **Brand:** ABBIDOT
- **Item Weight:** 12.3 ounces
- **Item Package Dimensions:** 5.91 x 5.51 x 2.28 inches
- **Control Range:** Up to 4100 feet
- **Training Modes:** Tone (9 levels), Vibration (36 levels), Stimulation (118 levels), E-Clicker (12 sound modes), LED Night Light (3 modes)
- **Waterproof Rating:** IP67 (Collar and Remote)
- **Battery Type:** 2 Nonstandard Battery batteries required (included)
- **Battery Life (Standby):** 25 to 45 days
- **Adjustable Collar Fit:** For dogs 10 to 130 lbs (Min 6 inches, Max 27 inches)
- **Multi-Dog Support:** Up to 6 dogs
- **Manufacturer:** Shenzhen Zheer Life Technology Co., Ltd.
- **First Available Date:** May 23, 2024

WARRANTY & SUPPORT

Your ABBIDOT Dog Training Collar comes with a **1-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact ABBIDOT customer service. Refer to the contact information provided on the product packaging or the official ABBIDOT website.

Return Policy: This product is eligible for a refund or replacement within 30 days of purchase, subject to the seller's return policy.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F9F6LQZ3>

More documents and user manuals: <https://manuals.plus/>