

Greadio CD86

Greadio CD Player with Bluetooth (Model CD86) Instruction Manual

Your guide to setting up and operating your new Greadio CD Player.

1. INTRODUCTION

Thank you for choosing the Greadio CD Player with Bluetooth, Model CD86. This device is designed to provide a versatile audio experience, supporting CD playback, Bluetooth connectivity, USB playback, and AUX input. It features built-in HiFi speakers, a remote control, LED display, and various sound customization options. Please read this manual carefully to ensure proper use and to maximize your enjoyment of the product.

2. PACKAGE CONTENTS

Please check the package for the following items:

- CD Player (1 unit)
- AUX Cable (1 unit)
- Remote Control (1 unit)
- Type-C Power Cable (1 unit)

Note: A 5V2A power adapter is required but not included in the package.

3. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Greadio CD Player.



Ideal Gift for your Family and Friends

Image: Front and side view of the CD player with labeled components, and a diagram of the remote control functions.

Player Controls:

- **Carrying Handle:** For portability.
- **CD Disc Placement Area:** Where CDs are inserted.
- **CD Lid:** Transparent cover to protect the CD.
- **Power/Mode Switching Button:** Turns the unit on/off and cycles through modes.
- **Volume + / Volume -:** Adjusts the sound level.
- **Previous Song / Next Song:** Navigates tracks.
- **Play/Pause:** Controls playback.
- **USB Reading Port:** For USB drive playback.
- **Type-C Power Port:** For power connection.
- **Headphone Jack/Audio Input (AUX):** For headphones or external audio sources.
- **Reset Button:** To reset the device.
- **Speaker:** Built-in stereo speakers.

Remote Control Functions:

- **Power Switch:** Turns the unit on/off.
- **Pause:** Pauses playback.
- **Previous Song / Next Song:** Navigates tracks.
- **Volume + / Volume -:** Adjusts the sound level.
- **Play Mode:** Cycles through repeat modes.
- **Timer Shutdown:** Sets the sleep timer.
- **Bluetooth Transmitter:** Activates Bluetooth transmission.
- **EQ Mode:** Cycles through equalizer presets.
- **Repeat Play:** Activates repeat functions.
- **Track +10 / Track -10:** Jumps tracks (for MP3 CDs).

4. SETUP INSTRUCTIONS

4.1 Power Connection

1. Connect the provided Type-C power cable to the Type-C Power Port on the CD player.
2. Plug the other end of the Type-C power cable into a 5V2A power adapter (not included).
3. Plug the power adapter into a wall outlet.

Important: The CD player does not have a built-in battery and requires continuous power. Do not connect directly to a laptop's power source or a low-voltage adapter, as this may cause stuttering or shutdown. A 5V2A power adapter or power bank with 5V2A output is recommended.

4.2 Inserting a CD



Image: Step-by-step guide for inserting a CD into the player.

1. Ensure the player is powered on.
2. Gently push up the transparent dust cover to open the CD compartment.
3. Place the CD onto the spindle with the label side facing up.
4. Push down the dust cover to close the CD compartment.

5. OPERATING INSTRUCTIONS

5.1 CD Playback Mode

After inserting a CD and powering on the device, the player will automatically detect the CD and begin playback. Use the Play/Pause, Previous Song, and Next Song buttons on the player or remote control to manage playback.

5.2 Bluetooth Mode (Transmitter)

The CD player can transmit audio to Bluetooth headphones or speakers.

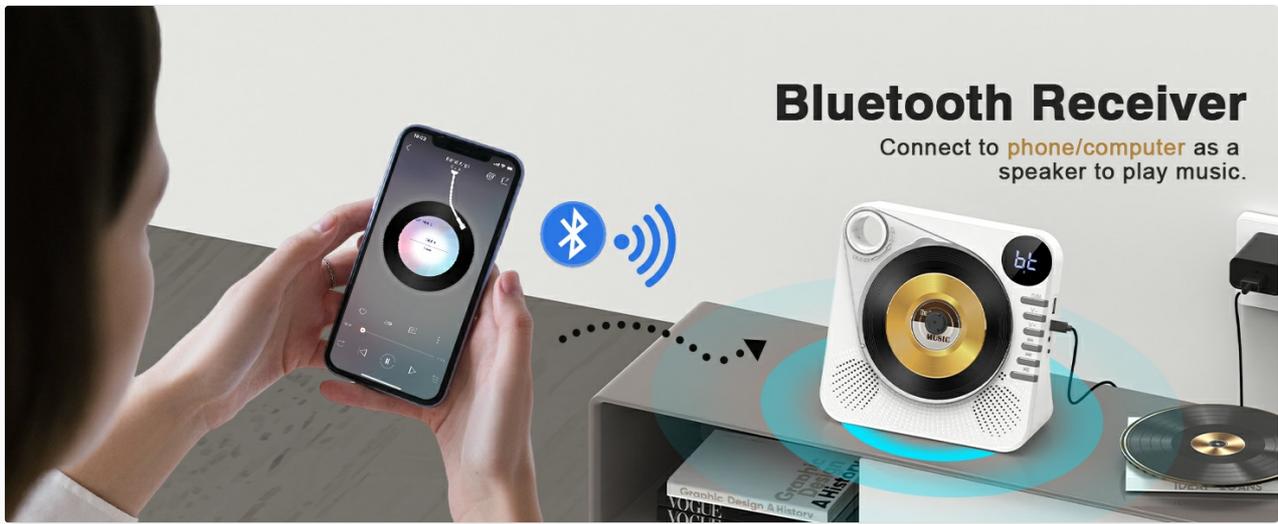


Image: Demonstrates connecting the CD player to wireless headphones via Bluetooth.

1. Press the Power/Mode button on the player or remote until 'BT' appears on the LED display.
2. Activate pairing mode on your Bluetooth headphones or speaker.
3. The CD player will automatically search for and connect to nearby Bluetooth devices. Once connected, audio from the CD player will transmit to your external Bluetooth device.

5.3 Bluetooth Mode (Receiver)

The CD player can also receive Bluetooth audio from your smartphone, tablet, or computer, acting as a Bluetooth speaker.



Image: Demonstrates connecting a smartphone to the CD player to use it as a Bluetooth speaker.

1. Press the Power/Mode button on the player or remote until 'BT' appears on the LED display.
2. On your external device (phone, tablet, computer), search for Bluetooth devices and select 'Greadio CD86' to pair.
3. Once connected, audio from your external device will play through the CD player's speakers.

5.4 USB Playback Mode

Play MP3 or WMA audio files directly from a USB flash drive.

Sleep Timer Setting

Set the play time and it will stop playing when it's time, let your favorite CD music accompany you to sleep.

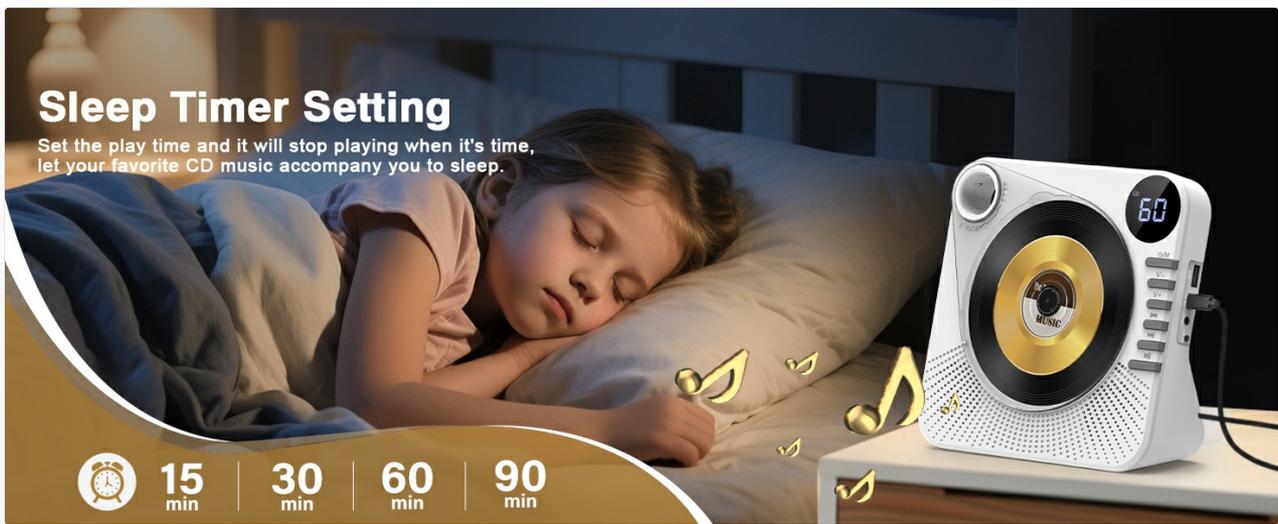


Image: The CD player connected to a USB drive for music playback.

1. Insert a USB flash drive (up to 128GB, formatted with MP3/WMA files) into the USB Reading Port.
2. Press the Power/Mode button until 'USB' appears on the LED display.
3. The player will automatically detect and begin playing audio files from the USB drive.

5.5 AUX Input Mode

Connect external audio devices using the AUX cable.



Image: The CD player connected to a laptop using the AUX cable.

1. Connect one end of the AUX cable to the Headphone Jack/Audio Input port on the CD player.
2. Connect the other end of the AUX cable to the audio output of your external device (e.g., smartphone, computer).
3. Press the Power/Mode button until 'AUX' appears on the LED display.
4. Control playback and volume from your external device.

5.6 Remote Control Usage

The included remote control allows convenient operation from a distance of up to 26 feet.



Image: Demonstrates using the remote control for the CD player.

Use the remote control for functions such as power, volume, track navigation, play/pause, EQ mode, repeat play, and timer shutdown. Some advanced functions like EQ and timer are only accessible via the remote.

5.7 EQ Sound Effects

Customize your audio experience with 5 equalizer presets.



Image: Illustrates the 5 EQ sound effects available on the CD player.

Press the 'EQ Mode' button on the remote control to cycle through the available sound effects **Classic, Jazz, Pop, Rock, Flat**. Select the mode that best suits your music genre.

5.8 Repeat Function

The repeat function is useful for continuous playback or language learning.



Built-In Hifi Stereo Speakers

5 EQ sound effects can be adjusted according to the style of the song.

Image: Icons representing the different repeat functions: Repeat One, Repeat All, Shuffle, and A-B Repeat. Press the 'Repeat Play' or 'Play Mode' button on the remote control to select different repeat modes:

- **Repeat One:** Repeats the current track.
- **Repeat All:** Repeats all tracks on the disc/USB.
- **Shuffle (Random Play):** Plays tracks in a random order.
- **A-B Repeat:** Repeats a specific section of a track (ideal for language learning).

5.9 Sleep Timer

Set a timer for the player to automatically shut down.



Repeat Function

This feature is great with language learning.



Image: Sleep timer settings for 15, 30, 60, and 90 minutes.

Use the 'Timer Shutdown' button on the remote control to set an automatic shutdown timer. Available options are 15, 30, 60, and 90 minutes. The player will stop playback and power off after the selected time.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Greadio CD Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the CD lens, use a specialized CD lens cleaner. Do not use abrasive cleaners or solvents.

- **Dust Cover:** Keep the transparent dust cover closed when not inserting or removing a CD to prevent dust accumulation.
- **Storage:** Store the player in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling CDs:** Always handle CDs by their edges. Avoid touching the playing surface. Store CDs in their cases to prevent scratches.

7. TROUBLESHOOTING

If you encounter any issues with your CD player, please refer to the following common solutions:

Problem	Possible Cause	Solution
Player does not power on.	No power connection or faulty adapter.	Ensure the Type-C power cable is securely connected and the 5V2A power adapter is working and plugged into a live outlet.
CD skips or stutters.	Scratched/dirty CD, low power input, or player movement.	Clean the CD. Ensure a stable 5V2A power supply. Avoid moving the player during CD playback.
No sound from speakers.	Volume too low, wrong mode selected, or headphones connected.	Increase volume. Ensure correct mode (CD, USB, AUX, BT) is selected. Disconnect headphones if using speakers.
Bluetooth device won't pair.	Device not in pairing mode, too far, or already connected.	Ensure both devices are in pairing mode and within range. Disconnect from other Bluetooth devices.
Remote control not working.	Battery depleted or obstruction.	Replace remote control battery. Ensure no obstructions between remote and player.
Disc stops spinning during playback.	Normal power-saving function.	This is normal. The player buffers music and stops the disc to save power. Music will continue to play.

8. SPECIFICATIONS

- **Model Number:** CD86
- **Brand:** Greadio
- **Connectivity Technology:** Auxiliary, Bluetooth
- **Bluetooth Version:** 5.1
- **Supported Disc Formats:** CD, MP3, CD-R, CD-RW
- **Supported USB Formats:** MP3, WMA (up to 128GB USB disk)

- **Speaker Output:** 5W Dual Stereo Speakers
- **Power Input:** USB-C, requires 5V2A adapter (not included)
- **Item Weight:** 1.76 pounds
- **Package Dimensions:** 8.03 x 7.68 x 3.03 inches
- **Included Components:** CD Player, AUX Cable, Remote Control, Type-C Power Cable

9. WARRANTY AND SUPPORT

Your Greadio CD Player (Model CD86) is backed by a **12-month hassle-free warranty**. Greadio also provides **lifetime customer support** for this product.

For any questions, technical assistance, or warranty claims, please contact Greadio customer service through the retailer where you purchased the product or visit the official Greadio website for contact information.