

[Manuals.plus](#) /

› [PLOCVB](#) /

› PLOCVB 17L Glass Halogen Air Fryer User Manual

PLOCVB Air Fryers

PLOCVB 17L Glass Halogen Air Fryer User Manual

Model: Air Fryers

INTRODUCTION

Thank you for choosing the PLOCVB 17L Glass Halogen Air Fryer. This appliance combines halogen heating with hot-air circulation to provide a versatile cooking experience, suitable for frying, roasting, baking, and steaming. Please read this manual thoroughly before first use to ensure safe and optimal operation.



Figure 1: The PLOCVB 17L Glass Halogen Air Fryer, showcasing its transparent glass bowl and food being cooked.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions.

- Read all instructions before operating the appliance.
- Do not immerse the appliance's top unit (containing electrical components) in water or any other liquid.
- Ensure the voltage rating on the appliance matches your local power supply.
- Keep the appliance and its cord out of reach of children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Always unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool

before putting on or taking off parts.

- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Use extreme caution when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for anything other than its intended use.
- Avoid using abrasive cleaning agents or sharp objects when cleaning the appliance.
- The appliance generates heat during operation. Ensure adequate ventilation around the unit.
- The glass bowl and internal components will be hot during and immediately after use. Use oven mitts and the provided tongs.

PRODUCT COMPONENTS

The PLOCVB 17L Glass Halogen Air Fryer comes with the following components:

- **Air Fryer Unit:** Main cooking unit with halogen heating element and control panel.
- **Glass Bowl:** 17L borosilicate glass cooking vessel.
- **Expansion Ring:** Increases the cooking capacity.
- **High Grill:** For cooking larger items or for two-tier cooking.
- **Low Grill:** For cooking smaller items or for two-tier cooking.
- **Tongs:** For safely handling hot food and accessories.
- **Base Stand:** Provides stability and protects surfaces from heat.
- **English Manual:** This instruction guide.



Figure 2: Overview of the PLOCVB 17L Glass Halogen Air Fryer and its included accessories.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the glass bowl, grills, and tongs in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Assembly:**
 - Place the base stand on a stable, heat-resistant surface.
 - Carefully place the clean glass bowl into the base stand.
 - Insert the desired grill (high or low) into the glass bowl. If using the expansion ring for larger capacity, place it on top of the glass bowl before placing the main unit.
 - Position the main unit (lid) securely on top of the glass bowl or expansion ring. Ensure it sits flush.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The appliance is now ready for operation.

OPERATING INSTRUCTIONS

The PLOCVB Halogen Air Fryer features simple controls for temperature and time settings.



Figure 3: The control panel with Time and Temperature dials, and Power/Heat indicator lights.

1. **Prepare Food:** Place your food on the appropriate grill inside the glass bowl. Do not overfill.
2. **Set Temperature:** Use the **Temperature** dial to select the desired cooking temperature (ranging from 0°C to 250°C / 32°F to 482°F).
3. **Set Time:** Use the **Time** dial to set the cooking duration (from 0 to 60 minutes). The appliance will begin heating once both time and temperature are set and the handle is in the down position.
4. **Indicator Lights:**
 - **POWER** light (red) indicates the appliance is powered on.
 - **HEAT** light (green) indicates the heating element is active. It will cycle on and off to maintain the set temperature.
5. **Monitoring:** The transparent glass bowl allows you to monitor the cooking process without opening the lid. The warm light inside also aids visibility.
6. **Automatic Shut-off:** The appliance will automatically turn off when the set time expires. It also features an automatic power cutoff when the handle is lifted, preventing burns.
7. **Removing Food:** Once cooking is complete, carefully lift the main unit using the handle. Use the provided tongs and oven mitts to remove the hot food and grills.

Note: The lid of the appliance has a simple recipe guide printed on it for common ingredients, providing

recommended temperatures and times.

COOKING GUIDE

This halogen air fryer is versatile and can be used for various cooking methods. Adjust cooking times and temperatures based on food quantity, desired crispness, and personal preference.

- **Frying:** Ideal for achieving crispy results with minimal oil. Examples include french fries, chicken wings, and breaded vegetables.
- **Roasting:** Suitable for meats like chicken, pork, and beef, as well as root vegetables. The 360° heating ensures even cooking.
- **Baking:** Can be used for items like small cakes, muffins, or casseroles that fit within the glass bowl.
- **Steaming:** With appropriate accessories (not included), steaming can be achieved.
- **Defrosting:** The lower temperature settings can be used for gentle defrosting.



Figure 4: The air fryer in use, roasting a whole chicken, highlighting its capacity and even cooking.

For best results, preheat the air fryer for 5-10 minutes at the desired temperature before adding food. Shake or flip food halfway through cooking for even browning.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your PLOCVB Halogen Air Fryer.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Glass Bowl and Grills:** These parts are dishwasher safe. Alternatively, wash them in warm, soapy water using a non-abrasive sponge. Rinse thoroughly and dry.
3. **Main Unit (Lid):** Wipe the exterior of the main unit with a damp cloth. For stubborn stains, use a mild detergent. Do not immerse the main unit in water or rinse it under a tap, as it contains electrical components.
4. **Heating Element:** Gently wipe the heating element area with a dry cloth to remove any food residue. Do not use water directly on the heating element.
5. **Storage:** Store the clean and dry appliance in a cool, dry place.

Caution: Ensure all parts are completely dry before reassembling and storing the appliance.

TROUBLESHOOTING

If you encounter issues with your PLOCVB Halogen Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet issue; time/temperature not set; handle not fully lowered.	Check power cord connection; test outlet with another appliance; ensure time and temperature dials are set; ensure handle is fully lowered.
Food is not cooking evenly.	Overcrowding the bowl; food not flipped/shaken.	Do not overcrowd the cooking bowl; shake or flip food halfway through cooking.
Smoke coming from the appliance.	Excess oil/grease from food; food residue on heating element.	Ensure food is not excessively greasy; clean the heating element and bowl thoroughly after each use. If smoke persists, unplug immediately.
Food is not crispy.	Temperature too low; cooking time too short; too much moisture in food.	Increase temperature or cooking time; pat food dry before cooking; use a light coating of oil for crispier results.

SPECIFICATIONS

Feature	Detail
Brand	PLOCVB
Model Name	Air Fryers
Total Capacity	17L / 17.96 Qt
Power	1200W-1400W

Feature	Detail
Voltage	110V-120V
Frequency	60Hz
Temperature Range	0°C-250°C / 32°F-482°F
Time Range	0-60 minutes
Heating Method	Halogen Heating Tube + Hot Air Circulation
Material	Borosilicate Glass, PP
Product Dimensions (L*H)	39cm * 33cm / 15.35in * 12.99in
Expansion Ring Height	5cm / 1.97in
Net Weight	5.61kg / 12.37lbs
UPC	756352963028
ASIN	B0F9F8X23C



Figure 5: Dimensional overview of the PLOCVB 17L Glass Halogen Air Fryer.

WARRANTY AND SUPPORT

This product is designed for durability and performance. For any questions, technical assistance, or warranty claims, please contact PLOCVB customer support through your retailer or the official brand website.

Please retain your proof of purchase for warranty purposes. Specific warranty terms and conditions may vary by region and retailer.