



[Manuals.plus](#) /

› [Mtxmy](#) /

› Mtxmy 63-inch Fluted TV Stand User Manual

Mtxmy RXZER291

Mtxmy 63-inch Fluted TV Stand User Manual

Model: RXZER291

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Mtxmy 63-inch Fluted TV Stand. Please read this manual thoroughly before assembly and use to ensure proper installation and safe operation. Keep this manual for future reference.



Image: The Mxtxmy 63-inch Fluted TV Stand, showcasing its mid-century modern design with fluted doors and a walnut finish, positioned beneath a large arched mirror with two table lamps on top.

SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product:

- Do not exceed the maximum weight capacity of the TV stand. The top surface is designed to support TVs up to 70 inches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and retighten as necessary.
- Place the TV stand on a level and stable surface to prevent tipping.
- Keep small parts and packaging materials away from children to avoid choking hazards.
- Avoid placing hot items directly on the surface without protection.
- Do not stand or climb on the TV stand.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Product size



Image: A detailed diagram illustrating the overall dimensions of the TV stand (63" L x 15.8" D x 22.4" H) and the internal measurements of its storage compartments, including the central drawer and side cabinets.

Refer to the included assembly instructions for a complete list of hardware and panels. Typically, the package includes:

- Main panels (top, bottom, side, back)
- Fluted doors and sliding door mechanisms
- Drawer components
- Legs and adjustable feet
- Hardware pack (screws, dowels, cam locks, handles)
- Assembly tools (e.g., Allen wrench)

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for this TV stand. It is recommended that two adults assemble the unit. Please follow

the step-by-step instructions provided in the separate assembly manual included in your package. A typical assembly process involves:

1. **Prepare the Area:** Clear a spacious, clean, and soft surface (e.g., a carpet) to prevent scratching the parts during assembly.
2. **Identify Parts:** Lay out all parts and hardware, comparing them with the parts list in the assembly manual.
3. **Assemble the Frame:** Attach the side panels to the bottom panel, then secure the back panel.
4. **Install Drawer Slides:** Mount the drawer slides to the designated panels.
5. **Assemble Drawer:** Construct the drawer box and install it onto the slides.
6. **Attach Doors:** Install the fluted doors and sliding door mechanisms. Ensure they operate smoothly.
7. **Install Legs:** Secure the five solid wood legs to the base of the TV stand. Adjust the feet for stability.
8. **Final Checks:** Ensure all connections are tight and the stand is stable.

Estimated assembly time: Less than 50 minutes for two people.

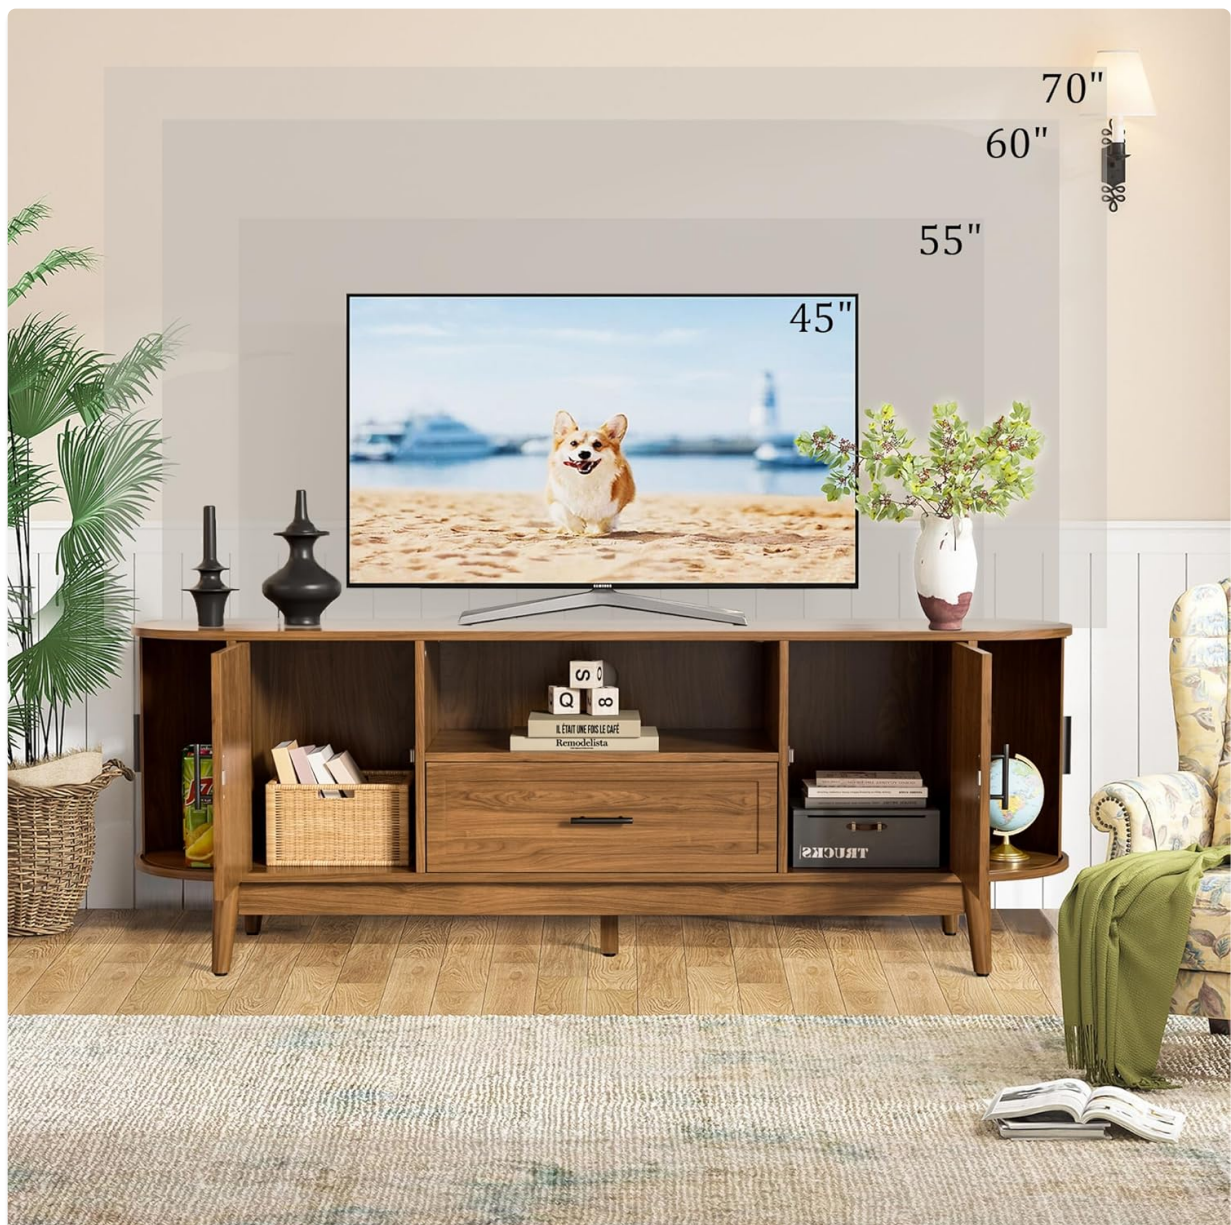


Image: The Mxtxmy 63-inch Fluted TV Stand in a living room, supporting a large television and displaying various decorative items and media devices within its compartments.

OPERATING INSTRUCTIONS

Your Mtxmy TV Stand is designed for functional and aesthetic integration into your living space. Here's how to utilize its features:

- **Sliding Doors:** The curved fluted doors on the sides are designed to slide smoothly along their tracks. Gently push or pull the doors to open or close the side compartments.
- **Central Drawer:** The central drawer provides concealed storage for smaller items. Pull the metal handle to open and push to close.
- **Open Shelf:** The open shelf above the drawer is ideal for media devices such as a soundbar, gaming console, or streaming box.
- **Cable Management:** Utilize the two large cable management holes located on the back panel of the central compartments to route and organize power cords and signal cables, keeping them out of sight and preventing clutter.
- **Adjustable Feet:** The five solid wood legs are equipped with adjustable feet. If the stand is wobbly, gently turn the feet clockwise or counter-clockwise to level the unit on uneven floors.



Image: A detailed view of the TV stand's features, including the cable management hole for organizing wires, the spacious central drawer, and the sturdy support leg with adjustable foot.

MAINTENANCE

To ensure the longevity and appearance of your Mxtxmy TV Stand, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish. For stubborn marks, a mild soap solution can be used, followed by drying with a clean cloth.
- **Spills:** Immediately wipe up any spills to prevent staining or water damage to the engineered wood.
- **Protection:** Use coasters or protective pads under hot items, beverages, or decorative objects to prevent scratches and heat marks.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure, which can cause fading or discoloration of the wood finish.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary to maintain stability.

Mix & Match



Image: A collage highlighting key product details: tall legs allowing for easy cleaning underneath, a spacious tabletop for various items, and the smooth operation of the fluted sliding doors.

TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand is wobbly or uneven.	Uneven floor; loose leg connections.	Adjust the leveling feet on the bottom of the legs. Ensure all leg screws are tightened.
Doors do not slide smoothly or are misaligned.	Improper installation of door tracks or hinges; debris in tracks.	Check the installation of the door tracks and ensure they are level. Clean any debris from the tracks. Refer to assembly instructions for door adjustment.
Drawer does not open/close smoothly.	Drawer slides are misaligned or damaged; obstruction in the drawer.	Ensure drawer slides are correctly installed and lubricated if necessary. Check for any items obstructing the drawer's movement.
Missing or damaged parts.	Manufacturing defect; shipping damage.	Do not proceed with assembly. Contact Mxtxmy customer support immediately for replacement parts.

SPECIFICATIONS

Feature	Detail
Brand	Mxtxmy
Model Number	RXZER291
Product Dimensions (L x D x H)	63" x 15.8" x 22.4" (160cm x 40cm x 57cm)
Accommodates TV Size	Up to 70 inches
Material	Engineered Wood (MDF), Metal Handles, Solid Wood Legs
Color	Walnut
Special Features	Fluted Sliding Doors, Central Drawer, Open Shelf, Cable Management Holes, Adjustable Feet
Item Weight	68.3 pounds (31 kg)
Assembly Required	Yes

WARRANTY AND SUPPORT

Mxtxmy is committed to providing high-quality products. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Mxtxmy website. If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Mxtxmy customer support:

- **Customer Service:** Refer to your purchase documentation for contact details.
- **Online Support:** Visit the [Mtxmy Store on Amazon](#) for product information and support options.

Please have your model number (RXZER291) and purchase date ready when contacting support.