

**B0F9FH2TJR**

# Generic APP Remote Control Mini Cordless Vibrator: User Manual

Model: B0F9FH2TJR

## INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Generic APP Remote Control Mini Cordless Vibrator. Please read this manual thoroughly before first use and retain it for future reference.

## SAFETY INFORMATION

- This device is intended for adult use only.
- Do not use if the device appears damaged.
- Clean the device thoroughly before and after each use as per the "Maintenance" section.
- Discontinue use immediately if any discomfort or irritation occurs.
- Keep out of reach of children.
- Consult a healthcare professional if you have any medical conditions or concerns.

## PACKAGE CONTENTS

- 1 x Generic APP Remote Control Mini Cordless Vibrator
- 1 x USB Charging Cable
- 1 x User Manual (this document)

## SETUP

### 1. Charging the Device

1. Connect the USB charging cable to the charging port on the device.
2. Plug the other end of the USB cable into a standard USB power adapter (not included) or a computer USB port.
3. The indicator light will illuminate during charging and turn off or change color when fully charged.
4. Allow approximately 2-3 hours for a full charge before first use.

### 2. APP Download and Pairing

This device features APP remote control functionality. Follow these steps to connect:

1. Scan the QR code provided in the packaging (if available) or search for the designated control APP on your smartphone's app store (e.g., Apple App Store, Google Play Store).
2. Download and install the APP.
3. Ensure your device is charged and powered on (see "Operating" section).
4. Enable Bluetooth on your smartphone.
5. Open the APP and follow the on-screen instructions to search for and pair with your device. The APP will typically display a list of available devices.
6. Once paired, you can control the device's functions via the APP interface.



This image illustrates the Generic APP Remote Control Mini Cordless Vibrator, a black, flexible device with a textured surface, positioned alongside a smartphone. The smartphone screen displays the control application, showing options like 'Classic Mode', 'Game Mode', and 'Video Mode', along with numbered vibration patterns (mode 1, mode 7, mode 8, mode 9). This visual demonstrates the device's app-controlled functionality.

## OPERATING INSTRUCTIONS

### 1. Power On/Off

- **To Power On:** Press and hold the power button (usually located on the device body) for approximately 3 seconds until the device vibrates briefly or an indicator light illuminates.
- **To Power Off:** Press and hold the power button again for approximately 3 seconds until the device stops vibrating or the indicator light turns off.

## 2. Manual Control (if applicable)

If your device has physical buttons for control:

- **Change Vibration Mode:** Short press the power button (or a dedicated mode button) to cycle through the 10 available vibration frequencies.

## 3. APP Control

Once paired with the APP:

- Open the control APP on your smartphone.
- The APP interface will display various control options, including 'Classic Mode', 'Game Mode', and 'Video Mode'.
- Select your desired mode and adjust the vibration intensity or pattern directly from the APP.
- The APP offers 10-frequency vibration and 10-frequency extension vibrations.

## MAINTENANCE

### 1. Cleaning

- Always clean the device before and after each use.
- Wash the device with warm water and a mild, toy-safe soap.
- Rinse thoroughly to remove all soap residue.
- Dry completely with a lint-free cloth or air dry before storing.
- Do not use harsh chemicals, alcohol, or petroleum-based cleaners, as these may damage the material.

### 2. Storage

- Store the device in a clean, dry, and cool place, away from direct sunlight and extreme temperatures.
- Keep it separate from other toys or objects that could cause damage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully.
Device does not turn on.	Power button not pressed correctly.	Press and hold the power button for 3 seconds.
APP cannot connect to the device.	Bluetooth is off on the phone.	Ensure Bluetooth is enabled on your smartphone.
APP cannot connect to the device.	Device is not powered on or out of range.	Ensure the device is powered on and within close proximity to your smartphone.
APP cannot connect to the device.	APP or device firmware issue.	Restart the APP and the device. Reinstall the APP if necessary.

## SPECIFICATIONS

- **Model:** B0F9FH2TJR
- **Brand:** Generic

- **Vibration Modes:** 10-frequency vibration, 10-frequency extension vibrations
- **Control:** APP Remote Control, Manual Button
- **Power Source:** Rechargeable Battery (USB charging)
- **Material:** (Not specified, assuming body-safe silicone or similar)
- **Date First Available:** May 21, 2025

## WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the manufacturer's official website. Please retain your proof of purchase for any warranty claims.