

[Manuals.plus](#) /

› [SOLARA](#) /

› SOLARA 4.5L Digital Air Fryer Instruction Manual

SOLARA SOL-AF-124

SOLARA 4.5L Digital Air Fryer Instruction Manual

Model: SOL-AF-124

1. INTRODUCTION

The SOLARA 4.5L Digital Air Fryer is designed for efficient and healthier cooking. It utilizes 360° high-speed air circulation to fry, grill, roast, and bake a variety of foods with significantly less oil. This manual provides essential information for the safe and effective use of your new appliance.



Image: The SOLARA 4.5L Digital Air Fryer, demonstrating its ability to grill, bake, fry, and roast various dishes like pizza, fries, and cake.

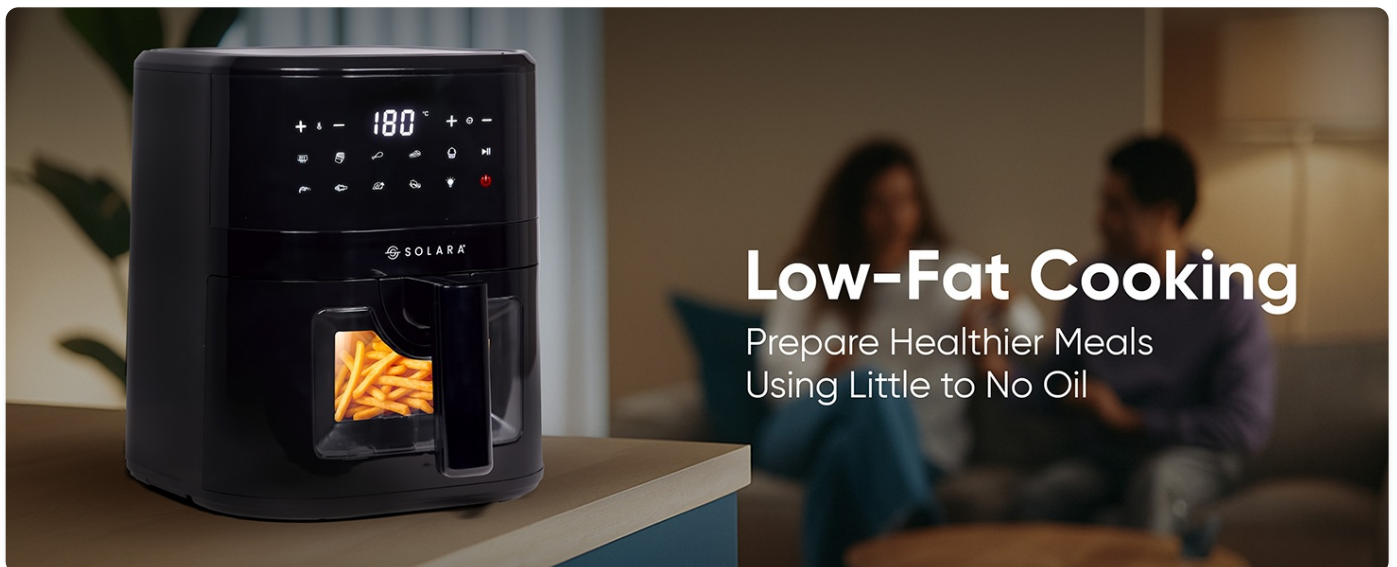


Image: The SOLARA Air Fryer in a home setting, highlighting its low-fat cooking capabilities.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance to prevent personal injury or damage to the air fryer.

- **Electrical Safety:** Do not immerse the main unit, cord, or plug in water or other liquids. Ensure hands are dry before handling the plug or operating the appliance.
- **Hot Surfaces:** The air fryer's exterior surfaces, especially the air outlet, may become hot during operation. Use oven mitts when handling hot components. Always use the cool-touch handle to remove the basket.
- **Ventilation:** Place the air fryer on a stable, heat-resistant surface, ensuring at least 10 cm (4 inches) of clear space around all sides for proper air circulation. Do not block any ventilation openings.
- **Children and Supervision:** This appliance is not intended for use by children. Close supervision is necessary when any appliance is used near children.
- **Power Cord:** Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces. Do not operate the appliance with a damaged cord or plug.
- **Intended Use:** Use the appliance only for its intended household purpose. Do not use outdoors.
- **Food Safety:** Do not overfill the basket. Ensure food is cooked thoroughly to safe temperatures.
- **Lab-Certified Safety:** This product is certified to be free from harmful substances. PFAS, PFOA, and PFOS compounds are not detected. It is BPA-Free and TÜV SÜD Certified for global safety standards.



Image: Visual representation of the air fryer's lab-certified safety features.

3. PRODUCT FEATURES

The SOLARA 4.5L Digital Air Fryer comes equipped with several features designed for convenience and optimal cooking performance:

- **360° Rapid Air Circulation:** Advanced technology crisps food using hot air, reducing fat by up to 90% compared to traditional frying.
- **10 Pre-set Cooking Modes:** Offers one-touch smart presets for common dishes, ensuring consistent results.
- **Digital Touch Control:** Intuitive interface for easy selection of cooking modes, temperature, and time.
- **Cooking Window:** A transparent viewing window allows you to monitor food progress without interrupting the cooking cycle.

- **Cool-Touch Handle:** Ensures safe handling of the basket during and after cooking.
- **1500W Powerful Heating:** Provides quick and even heating for faster, crispier results.
- **4.5L Non-Stick Basket:** Spacious basket suitable for small to medium-sized families, featuring a non-stick coating for easy food release and cleaning.
- **Automatic Shut-Off:** For safety and convenience, the appliance automatically turns off when the cooking cycle is complete or the basket is removed.
- **Countdown Timer & Temperature Control:** Allows precise control over cooking duration and heat.



Easy-View Window

See your food
rise to
perfection.

Image: The easy-view window of the air fryer, allowing monitoring of food during cooking.



Image: Illustration of the rapid air technology circulating hot air for even cooking.

4. SETUP AND FIRST USE

1. **Unpack:** Carefully remove the air fryer and all accessories from the packaging. Remove any stickers or labels.
2. **Clean:** Wash the air fryer basket and pan with warm, soapy water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper ventilation. Do not place it near flammable materials or heat sources.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **First Use (Burn-off):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) to eliminate any manufacturing odors. A slight smell or smoke may occur, which is normal. Ensure the area is well-ventilated.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your SOLARA Digital Air Fryer:

1. **Prepare Food:** Place your ingredients into the air fryer basket. Do not overfill the basket to allow for proper air circulation.
2. **Insert Basket:** Slide the basket firmly into the main unit until it clicks into place.
3. **Power On:** Press the power button on the digital touch control panel.
4. **Select Cooking Mode:**
 - **Preset Menu:** Choose one of the 10 preset icons for common dishes. The air fryer will automatically set the recommended temperature and time.
 - **Manual Mode:** Use the temperature control buttons (+/-) to adjust the temperature (100°F - 400°F / 38°C - 204°C) and the time control buttons (+/-) to set the cooking duration.
5. **Start Cooking:** Press the start/pause button to begin the cooking cycle.
6. **Monitor Progress:** Use the transparent cooking window to check on your food without opening the basket.
7. **Shake/Turn Food (Optional):** For even cooking, some recipes may require shaking or turning food halfway through the cooking time. The air fryer may beep to remind you. Carefully remove the basket using the cool-touch handle, shake or turn the food, and reinsert the basket. The cooking will resume automatically.

8. **Completion:** The air fryer will beep when the cooking cycle is complete and automatically shut off. Carefully remove the basket and transfer the cooked food to a serving dish.

Smart Touch Interface

Effortless Meals at Your Fingertips



Image: The smart touch interface of the SOLARA Air Fryer, showing digital controls for temperature and time.

6. COOKING GUIDE (PRESET MENUS)

The following table provides recommended settings for common foods using the preset menus. Adjustments may be necessary based on food quantity and desired crispiness.

Food Item	Temperature	Time
Pizza	170°C (340°F)	18-22 minutes
Drumsticks	200°C (390°F)	12-18 minutes
Fries	160°C (320°F)	13-15 minutes
Shrimp	200°C (390°F)	12-20 minutes
Cake	180°C (350°F)	12-22 minutes



NO MORE EATING
OILY FOOD OUTSIDE
**Eat Healthy
Food at Home**



PIZZA
170°C 18-22min



DRUMSTICKS
200°C 12-18min



FRIES
160°C 13-15min



SHRIMP
200°C 12-20min



CAKE
180°C 12-22min

Image: The air fryer showcasing preset cooking options for various foods like pizza, drumsticks, fries, shrimp, and cake.

7. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
2. **Basket and Pan:** The air fryer basket and pan are **not dishwasher safe**. Hand wash them with warm, soapy water and a non-abrasive sponge. For stubborn food residue, soak the basket and pan in warm, soapy water for about 10-15 minutes before cleaning.
3. **Interior:** Wipe the interior of the air fryer with a damp cloth. Do not use abrasive cleaners or metal scouring pads, as these can damage the non-stick coating.
4. **Exterior:** Wipe the exterior of the appliance with a soft, damp cloth.
5. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

Meet Your **SOLARA** Digital Airfryer



EASY TO CLEAN

Nonstick coated basket
and dishwasher safe



LARGE BASKET (4.5 LITRES)

Nonstick coated basket
and dishwasher safe



SAFE TO USE

Wear resistant and easy to
clean food grade non stick pan



Image: The air fryer basket, emphasizing its non-stick coating and ease of cleaning.

8. TROUBLESHOOTING

If you encounter any issues with your air fryer, refer to the following common problems and solutions:

- **Appliance Not Turning On:**

- Ensure the power cord is securely plugged into a grounded electrical outlet.
- Check if the air fryer basket is fully inserted into the main unit. The appliance will not operate if the basket is not correctly in place.

- **Food Not Cooked Evenly:**

- Do not overfill the basket. Cook food in smaller batches if necessary.
- Shake or turn food halfway through the cooking process to ensure even browning.
- Adjust cooking time and temperature as needed for specific food types.

- **White Smoke Coming from Appliance:**

- White smoke can be caused by grease residue from previous use. Clean the basket and pan thoroughly after each use.
- If cooking fatty foods, excess oil may drip into the pan and cause smoke. Remove excess oil from the pan during cooking if needed.

- **Food Not Crispy:**

- Ensure food is patted dry before air frying.
- Lightly spray or brush food with a small amount of oil for extra crispiness.
- Increase cooking time or temperature slightly.

For further assistance, please contact customer support.

9. SPECIFICATIONS

Feature	Specification
Model Name	Air Fryer 4.5L- See Through
Model Number	SOL-AF-124
Capacity	4.5 Liters
Output Wattage	1500 Watts
Voltage	230 Volts (AC)
Control Method	Touch
Min Temperature Setting	100 Degrees Fahrenheit (approx. 38°C)
Max Temperature Setting	400 Degrees Fahrenheit (approx. 204°C)
Air Frying Technology	360° Air Circulation
Product Dimensions (D x W x H)	24.5D x 30W x 30.2H Centimeters
Item Weight	3.9 Kilograms
Material Type	Plastic (Exterior)
Inner Material	Plastic (Basket)
Has Nonstick Coating	Yes
Dishwasher Safe	No
Recommended Uses	Roast, Grill, Toast, Bake, Defrost, Fry, Reheat
Special Features	Automatic Shut-Off, Countdown Timer, Light Weight, Noise Free, Temperature Control

10. WARRANTY AND SUPPORT

Your SOLARA Air Fryer comes with a 1-year warranty. To activate your warranty, you must register your product at www.solara.in/pages/product-registration within 7 days of delivery.

For any product-related queries, technical support, or warranty claims, please contact:

- **Manufacturer:** Solara Home, Win The Buy Box Private Limited
- **Contact Email:** support@solara.in
- **Address:** 16-11-477/6/4/302, Venu Castle, Moosarambag, Hyderabad, Telangana, India - 500036

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question