

**LM85805**

# Purple Handheld Electric Massager LM85805 User Manual

Model: LM85805

## 1. INTRODUCTION

This user manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Purple Handheld Electric Massager, Model LM85805. Designed for versatile use, including foot and back massages, this device offers a comfortable and relaxing experience. Please read this manual thoroughly before first use and retain it for future reference.



Figure 1: The Purple Handheld Electric Massager LM85805, showcasing its sleek design and vibrant purple color, with illustrative energy effects indicating its vibrating function.

## 2. PRODUCT FEATURES

---

- **Waterproof Design:** Ensures easy cleaning and hassle-free maintenance.
- **10 Vibration Modes:** Offers a wide range of customizable massage experiences to suit individual preferences.
- **Skin-Friendly Silicone Material:** Crafted from high-quality silicone, providing a comfortable, odorless, and safe touch against the skin.
- **USB Charging Capability:** Allows for convenient and portable charging, making it ideal for on-the-go use.
- **Compact and Portable:** Designed for easy handling and transport.

## 3. SETUP

---

### 3.1 Initial Charging

Before first use, fully charge the massager. Locate the USB charging port, typically at the base of the device. Connect the provided USB cable to the massager and plug the other end into a standard USB power source (e.g., computer USB port, wall adapter). The indicator light will typically show charging status and turn off or change color when fully charged. A full charge usually takes 1-2 hours.

### 3.2 Cleaning Before First Use

As the device is waterproof, it can be easily cleaned. Before initial use, gently wash the massager with mild soap and warm water. Rinse thoroughly and dry completely with a soft, lint-free cloth.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Power On/Off

Press and hold the power button (usually located at the base or side of the device) for 2-3 seconds to turn the massager on. The device will typically start in its default vibration mode. To turn off, press and hold the power button again for 2-3 seconds.

### 4.2 Changing Vibration Modes

Once the massager is on, short press the power button (or a dedicated mode button, if present) to cycle through the 10 available vibration modes. Each short press will advance to the next mode. Experiment with different modes to find the one that best suits your needs.



Figure 2: Visual representation of the 10 distinct vibration patterns available on the massager, each indicated by a unique waveform icon.

### 4.3 Usage Tips

- Apply the massager directly to the desired area of the body (e.g., back, neck, shoulders, feet).
- Move the massager in circular motions or along muscle lines for optimal effect.
- Start with a lower intensity mode and gradually increase as desired.
- For external use only.

## 5. MAINTENANCE

### 5.1 Cleaning

Due to its waterproof design, the massager is easy to clean. After each use, wash the device with mild soap and warm water. Rinse thoroughly to remove all soap residue. Do not use harsh chemicals, abrasive cleaners, or petroleum-based products, as these may damage the silicone material.

### 5.2 Drying

Ensure the massager is completely dry before storing or recharging. Use a soft, lint-free cloth to wipe it dry. Allow it to air

dry completely in a well-ventilated area if necessary.

### 5.3 Storage

Store the massager in a cool, dry place, away from direct sunlight and extreme temperatures. Keep it out of reach of children and pets.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Device does not turn on.	Battery is low or depleted.	Charge the device fully using the provided USB cable.
Vibration is weak or inconsistent.	Battery is low.	Recharge the device.
Device does not charge.	USB cable or power source issue.	Ensure the USB cable is properly connected. Try a different USB port or power adapter.

## 7. SPECIFICATIONS

---

**Model:** LM85805

**Material:** Silicone

**Color:** Purple

**Vibration Modes:** 10

**Charging:** USB Rechargeable

**Waterproof:** Yes

**ASIN:** B0F9FQ35L9

**Manufacturer:** Dolych

**Date First Available:** May 21, 2025



Figure 3: The massager's dimensions (4.13 inches length, 0.87 inches width) and weight (60.7g) are illustrated alongside a lipstick for scale, highlighting its compact and lightweight design.

## 8. SAFETY INFORMATION

Please read and follow all safety instructions to prevent injury or damage to the device:

- This device is intended for external use only. Do not insert into any body orifice.
- Consult a physician before use if you have any medical conditions, are pregnant, have a pacemaker, or are undergoing medical treatment.
- Do not use on swollen, inflamed, or broken skin areas.
- Discontinue use immediately if you experience any discomfort, pain, or adverse reactions.
- Keep out of reach of children and pets.
- Do not disassemble, modify, or attempt to repair the device yourself. This will void the warranty and may cause damage or injury.
- Use only the provided charging cable.
- Do not expose the device to extreme temperatures, direct sunlight, or corrosive substances.
- Statements regarding this product have not been evaluated by the FDA and are not intended to diagnose, treat, cure,

or prevent any disease or health condition.

## 9. WARRANTY AND SUPPORT

---

Specific warranty information for the Purple Handheld Electric Massager LM85805 is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please contact the seller or manufacturer directly. Please retain your proof of purchase for any warranty claims.

**Manufacturer:** Dolych

For further assistance, please refer to the contact information provided by your retailer or on the product packaging.

