

Xech Prism Pro (X-607)

Xech Prism Pro Digital Alarm Clock with Speaker User Manual

Model: X-607

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Xech Prism Pro Digital Alarm Clock with Speaker. This device features a multi-coloured display, dual alarms, a built-in Bluetooth speaker, and USB-C recharging capabilities. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.



Image: Front view of the Xech Prism Pro Digital Alarm Clock, showcasing its vibrant multi-coloured time display.

2. PACKAGE CONTENTS

Upon unpacking, please verify that all the following items are included:

- Xech Prism Pro Digital Alarm Clock (Model X-607)
- USB-C Charging Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your Xech Prism Pro alarm clock.



Image: Detailed diagram illustrating the control buttons, display indicators, USB-C charging port, and integrated speaker of the Xech Prism Pro.

Key Components:

- **Display Screen:** Shows time, alarm status, and other information with multi-coloured digits.
- **Control Buttons:** Located on the top panel for setting time, alarms, and controlling speaker functions.
- **USB-C Port:** For charging the device.
- **Integrated Speaker:** For audio playback and alarm sounds.
- **Pen Stand:** A convenient slot for holding pens or small stationery items.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the Xech Prism Pro using the provided USB-C cable. Connect the cable to the USB-C port on the device and plug the other end into a compatible USB power adapter (not included).

Power Through USB-C



**Battery Backup
When You Need It**

Image: The Xech Prism Pro alarm clock being charged via its USB-C port, demonstrating its rechargeable capability.

4.2 Powering On/Off

Press and hold the Power button (refer to Product Overview diagram) to turn the device on or off.

4.3 Automatic Time Synchronization

The Prism Pro supports automatic time synchronization when paired with a smartphone via Bluetooth. This eliminates the need for manual time setting.

1. Ensure Bluetooth is enabled on your smartphone.
2. On the Xech Prism Pro, activate Bluetooth pairing mode (refer to the Operating Instructions for detailed steps).
3. Select "Xech Prism Pro" from your phone's Bluetooth device list to pair.
4. Once paired, the clock will automatically synchronize its time with your phone.



Image: A smartphone displaying its time next to the Xech Prism Pro, indicating the device's ability to auto-sync time via Bluetooth pairing.

5. OPERATING INSTRUCTIONS

5.1 Setting Alarms

The Xech Prism Pro features dual alarms (Alarm 1 and Alarm 2) to accommodate different schedules.

1. Press the "Alarm" button (usually marked with an alarm icon) to select Alarm 1 or Alarm 2.
2. Use the "+" and "-" buttons to adjust the hour and minute settings.
3. Press the "Alarm" button again to confirm the setting and move to the next parameter (e.g., AM/PM, alarm tone, volume).
4. To activate or deactivate an alarm, press the "Alarm" button until the corresponding alarm indicator (e.g., "AL1" or "AL2") appears or disappears on the display.

Set 2 Alarms For Busy Mornings



Dual Alarms To Keep You Both On Schedule

Image: The Xech Prism Pro alarm clock positioned between two beds, highlighting its dual alarm functionality for multiple users.

5.2 Using the Bluetooth Speaker

The integrated 5W Bluetooth 5.3v speaker allows for wireless audio playback.

1. Ensure the clock is powered on.
2. Press the "Mode" button (or Bluetooth button) to switch to Bluetooth mode. The display may show a Bluetooth icon or "BT".
3. On your smartphone or audio device, search for Bluetooth devices and select "Xech Prism Pro".
4. Once connected, you can play audio from your device through the clock's speaker.
5. Use the volume controls on the clock or your connected device to adjust audio levels.



Image: The Xech Prism Pro functioning as a wireless speaker, wirelessly connected to a smartphone for audio playback.

5.3 Display Settings

The multi-coloured display offers adjustable brightness for comfortable viewing in various lighting conditions.

- **Brightness Adjustment:** Press the "Brightness" button (or a dedicated button, refer to Product Overview) to cycle through different brightness levels.
- The display is designed to be clear during the day and dim enough for comfortable viewing at night without harsh light.

**Large Display With
Adjustable Brightness**




**View Time At Night
Without Harsh Light**



Image: The clock displaying time with high brightness, suitable for daytime viewing.

Clock That Plays Music

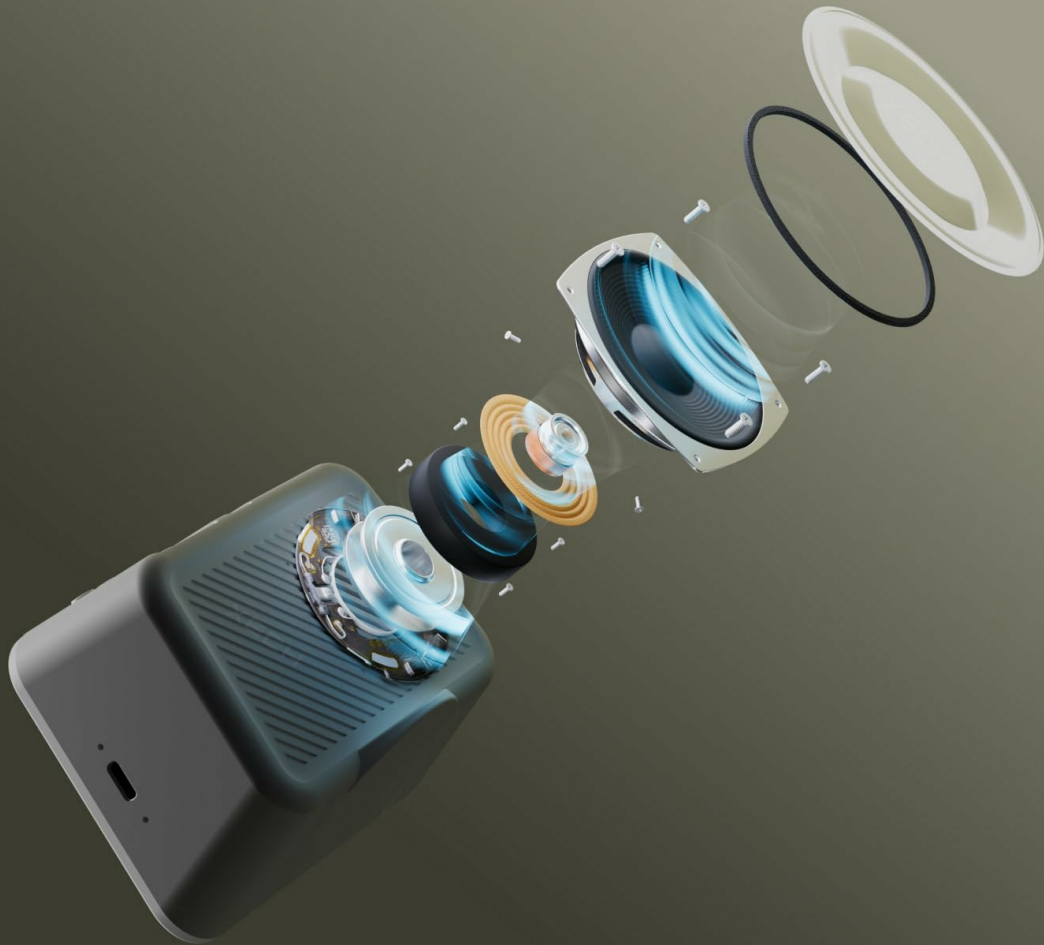

Crisp Sound On Your Desk Or Bedside

Image: The clock displaying time with low brightness, ideal for night use without causing disturbance.

5.4 Using the Pen Stand

The integrated pen stand provides a convenient storage solution for pens, pencils, or other small desk items, helping to keep your workspace organized.

6. MAINTENANCE

To ensure the longevity and proper functioning of your Xech Prism Pro, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the clock. Avoid abrasive cleaners, solvents, or sprays that could damage the finish or display.
- **Placement:** Place the clock on a stable, flat surface. Avoid direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:** While the device is rechargeable, prolonged periods without charging or frequent deep discharges may affect battery life over time. Charge regularly as needed.

7. TROUBLESHOOTING

If you encounter issues with your Xech Prism Pro, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clock does not power on.	Low battery or no charge.	Connect the device to a power source using the USB-C cable and allow it to charge for at least 30 minutes before attempting to power on again.
Alarm does not sound.	Alarm is deactivated or volume is too low.	Ensure the alarm is activated (check alarm indicator on display) and the alarm volume is set to an audible level.
Bluetooth speaker not connecting.	Device not in pairing mode or out of range.	Ensure the clock is in Bluetooth pairing mode. Move the clock closer to your audio device. Disconnect and re-pair if necessary.
Time is incorrect.	Not synchronized or manual setting error.	Pair with a smartphone for automatic time synchronization, or manually set the time following the instructions in section 5.1.
Battery life is shorter than expected.	Continuous use of speaker, high display brightness, or aging battery.	Reduce display brightness. Limit continuous speaker use. Ensure the device is fully charged before use. Note that battery performance may degrade over time.

8. SPECIFICATIONS

Feature	Detail
Brand	Xech
Model Number	X-607
Colour	White
Display Type	Digital, Multi-Coloured
Special Features	Bluetooth, Charging Port, Large Display, Loud Alarm, Snooze, Pen Stand
Product Dimensions	7.8W x 6.3H Centimeters
Power Source	Battery Powered (USB-C Rechargeable)
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	208 Grams
Number of Batteries	1 (9V, included)
Connectivity Technology	USB-C, Bluetooth 5.3v
Manufacturer	XECH Technologies Pvt Ltd
Country of Origin	China






9. WARRANTY AND SUPPORT

The Xech Prism Pro Digital Alarm Clock comes with a **Limited Warranty**. For specific details regarding warranty coverage, duration, and terms, please refer to the warranty card included with your product or contact Xech customer support.

For technical assistance or support inquiries, please visit the official Xech website or contact their customer service department. Contact information is typically provided on the product packaging or the manufacturer's website.

© 2025 Xech Technologies Pvt Ltd. All rights reserved.

Related Documents - Prism Pro (X-607)

	<p>XECH Nuke II Portable Bluetooth Speaker User Manual</p> <p>The XECH Nuke II is an IP68 certified, ultra-durable portable Bluetooth speaker featuring XECH Multi Connect for stereo pairing, high-fidelity bass, FM radio, USB, and AUX connectivity. This user manual provides detailed instructions for operation, pairing, and warranty information.</p>
	<p>XECH Cerebro Head, Eye & Neck Massager User Manual Features, Operation & Troubleshooting</p> <p>Comprehensive user manual for the XECH Cerebro Head, Eye & Neck Massager. Discover its features, functions, safety guidelines, troubleshooting tips, and operation instructions for this advanced personal relaxation device.</p>
	<p>XECH V-SHARK Cordless Rechargeable Handheld Vacuum Cleaner User Manual</p> <p>User manual for the XECH V-SHARK Cordless Rechargeable Handheld Vacuum Cleaner. Details on operation, maintenance, specifications, features, and applications for this 80W, 6000Pa suction device.</p>
	<p>XECH Jetsteam Foldable Garment Steamer User Manual Portable Clothes Iron</p> <p>Comprehensive user manual for the XECH Jetsteam foldable garment steamer. Includes operating instructions, safety guidelines, troubleshooting tips, product features, specifications, and warranty information.</p>
	<p>Goodmans PRISM GCRUSB03 FM Alarm Clock Radio with USB Charging User Manual</p> <p>Comprehensive user manual for the Goodmans PRISM GCRUSB03, an FM alarm clock radio with USB charging. Learn how to set up, operate features, troubleshoot, and view technical specifications.</p>