

ZJSWTH ZJSWTH456

ZJSWTH Projector Remote Control User Manual

Model: ZJSWTH456

1. INTRODUCTION

This user manual provides comprehensive instructions for the ZJSWTH Projector Remote Control. This remote is designed to provide seamless control over your compatible projectors, including the HY300, HY300PRO, HY320, and HY320Mini models. Please read this manual thoroughly before using the remote control to ensure proper operation and to maximize its lifespan.

2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, excessive heat, or moisture.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not attempt to disassemble or modify the remote control. This will void the warranty.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations.

3. PACKAGE CONTENTS

Please check the package contents upon opening to ensure all items are present:

- 1 x ZJSWTH Projector Remote Control
- (Batteries are typically not included and must be purchased separately)

4. PRODUCT OVERVIEW

Familiarize yourself with the buttons and features of your new remote control.



Figure 4.1: Front view of the ZJSWTH Projector Remote Control, showing all primary buttons.



Figure 4.2: Back view of the ZJSWTH Projector Remote Control, showing the battery compartment.

Remote control for HY300/HY320/HY300 PRO



Figure 4.3: The remote control displayed alongside compatible HY300 and HY320 series projectors.

Button Functions:

Button	Function
Power (Red Button)	Turns the projector On or Off.
Source/Input	Switches between different input sources (e.g., HDMI, USB).
Mute	Mutes or unmutes the audio output.
Mouse Mode	Activates or deactivates the air mouse function (if supported by projector).
Navigation Arrows (Up, Down, Left, Right)	Navigates through menus and options.
OK/Enter	Confirms selections or enters sub-menus.
Return/Back	Goes back to the previous screen or menu.
Menu	Opens the projector's main menu.

Button	Function
Home	Returns to the projector's home screen.
Volume Down (-)	Decreases the audio volume.
Volume Up (+)	Increases the audio volume.

5. SETUP

5.1. Installing Batteries

1. Locate the battery compartment on the back of the remote control.
 2. Slide open the battery cover.
 3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
 4. Close the battery cover securely.
- The remote control is now ready for use with your compatible projector. No pairing is typically required for this type of infrared remote control; simply point it at the projector.

6. OPERATING INSTRUCTIONS

To operate your projector using the remote control, ensure there is a clear line of sight between the remote's infrared emitter and the projector's IR receiver.

6.1. Basic Functions

- **Power On/Off:** Press the **Power** button once to turn the projector on or off.
- **Volume Control:** Use the **+** and **-** buttons to adjust the audio volume.
- **Mute:** Press the **Mute** button to silence the audio. Press again to unmute.

6.2. Navigation and Menu Control

- **Navigation:** Use the **Up**, **Down**, **Left**, **Right** arrow buttons to move through menus, lists, or adjust settings.
- **Selection:** Press the **OK** button to confirm a selection or open an item.
- **Return:** Press the **Return/Back** button to go back to the previous screen or exit a menu.
- **Menu Access:** Press the **Menu** button to open the projector's main settings menu.
- **Home Screen:** Press the **Home** button to quickly return to the projector's main interface.

6.3. Input Source Selection

- Press the **Source/Input** button to cycle through available input sources (e.g., HDMI 1, HDMI 2, USB, AV).

6.4. Mouse Mode (if applicable)

- If your projector supports an air mouse function, press the **Mouse Mode** button to activate or deactivate it. In mouse mode,

you can typically move a cursor on the screen by moving the remote control.

7. MAINTENANCE

7.1. Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.

7.2. Battery Replacement

- Replace batteries when the remote control's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new ones of the same type (AAA).
- Remove batteries if the remote control will not be used for an extended period to prevent leakage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control not working.	◦ Batteries are dead or inserted incorrectly. ◦ Obstruction between remote and projector. ◦ Remote is too far from the projector. ◦ Projector's IR receiver is blocked or faulty.	◦ Replace batteries with new ones, ensuring correct polarity. ◦ Remove any objects blocking the line of sight. ◦ Move closer to the projector. ◦ Check projector manual for IR receiver location and ensure it's clear.
Buttons are unresponsive or sticky.	◦ Dirt or debris under buttons. ◦ Internal damage.	◦ Clean the remote surface with a soft, dry cloth. ◦ If problem persists, consider replacing the remote.
Remote works for some functions but not others.	◦ Compatibility issue with specific projector model. ◦ Specific function not supported by projector.	◦ Verify your projector model is listed as compatible. ◦ Consult your projector's user manual for supported remote functions.

If you continue to experience issues, please refer to the "Warranty and Support" section for contact information.

9. SPECIFICATIONS

Feature	Detail
Model Number	ZJSWTH456
Compatibility	HY300, HY300PRO, HY320, HY320Mini Projectors
Power Source	2 x AAA Batteries (not included)
Dimensions (L x W x H)	Approx. 0.39 x 0.39 x 0.39 inches (as per package dimensions, likely product dimensions are similar)
Weight	1.76 ounces (without batteries)
Material	High-quality ABS plastic

10. WARRANTY AND SUPPORT

This ZJSWTH Projector Remote Control comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact your retailer.

For technical support or inquiries, please contact ZJSWTH customer service through the platform where you purchased the product or visit the official ZJSWTH website for contact information.

Customer Service Contact: Please refer to your purchase receipt or the seller's information on the product listing for the most up-to-date contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F9K5CL33>

More documents and user manuals: <https://manuals.plus/>