

Manuals.plus /

- › SKMEI /
- › SKMEI Digital Watch Model 2212 Instruction Manual

SKMEI 2212

SKMEI Digital Watch

MODEL: 2212 INSTRUCTION MANUAL

Introduction

Thank you for choosing the SKMEI Digital Watch Model 2212. This watch combines advanced digital technology with a robust design, offering precise timekeeping and multiple functions. Designed for durability and comfort, it features a zinc alloy case, stainless steel strap, and 30M water resistance. This manual provides detailed instructions to help you set up, operate, and maintain your watch effectively.

Product Overview

The SKMEI Digital Watch Model 2212 features a clear digital display and intuitive button controls for easy access to its various functions.





Figure 1: Front view of the SKMEI Digital Watch Model 2212, showing the display and button layout.

Button Functions:

- **LIGHT:** Activates the EL backlight for illumination.
- **MODE:** Cycles through different modes (Time, Dual Time, Chronograph, Countdown, Alarm).
- **START:** Used to start/stop functions in Chronograph and Countdown modes, and to adjust settings.
- **RESET:** Used to reset functions in Chronograph and Countdown modes, and to adjust settings.

FUNCTION OVERVIEW

EACH FUNCTIONAL DESIGN, ALL FOR YOUR CARING SERVICE, RECORDING EVERY MOMENT OF LIFE.



2 TIME



STOPWATCH



COUNTDOWN TIMER



ALARM



DATE / WEEK



EL LIGHT



WR 30M



12/24 HOUR

Figure 2: Overview of key functions including dual time, stopwatch, countdown timer, alarm, date/week display, EL light, 30M water resistance, and 12/24 hour format.

Setup: Initial Time and Date Setting

1. From the Timekeeping Mode, press the **MODE** button repeatedly until the seconds begin to flash, indicating setting mode.
2. Press the **RESET** button to cycle through the setting parameters: Seconds → Hour → Minute → Year → Month → Day.
3. Use the **START** button to adjust the flashing value. Hold **START** to rapidly advance the value.
4. Once all settings are correct, press the **MODE** button to exit the setting mode and return to Timekeeping Mode.
5. To switch between 12-hour and 24-hour format, adjust the hour setting past 12 or 24.

Operating Instructions

1. Timekeeping Mode

This is the default mode, displaying the current time, day of the week, and date. Press the **LIGHT** button to illuminate the display.



SKMEI

LIGHT

WED 10:20 50

START

ALM

SNZ

CHM

MODE

P 10:59

RESET

2TIME

30M

Figure 3: The watch display illuminated by the EL backlight for visibility in low-light conditions.

2. Dual Time Mode

This function allows you to keep track of a second time zone. To access Dual Time Mode, press the **MODE** button until "2TIME" or a similar indicator appears on the display.

1. In Dual Time Mode, press and hold the **RESET** button until the hour digits begin to flash.
2. Use the **START** button to adjust the hour.
3. Press **RESET** to move to the minute setting, then use **START** to adjust.
4. Press **MODE** to exit the setting mode.

3. Chronograph (Stopwatch) Mode

To use the stopwatch function:

1. Press the **MODE** button until "CHM" or "STOPWATCH" appears.
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.
5. To resume timing after pausing, press **START**.

4. Countdown Timer Mode

To set and use the countdown timer:

1. Press the **MODE** button until "TMR" or "COUNTDOWN" appears.
2. Press and hold the **RESET** button until the hour digits flash.
3. Use the **START** button to set the desired hour.
4. Press **RESET** to move to the minute setting, then use **START** to adjust.
5. Press **RESET** to move to the second setting, then use **START** to adjust.
6. Press **MODE** to exit the setting mode.
7. Press **START** to begin the countdown.
8. Press **START** again to pause the countdown.
9. Press **RESET** to reset the timer to its initial set value.

5. Alarm Mode

To set the alarm:

1. Press the **MODE** button until "ALM" or "ALARM" appears.
2. Press and hold the **RESET** button until the hour digits flash.
3. Use the **START** button to set the desired alarm hour.
4. Press **RESET** to move to the minute setting, then use **START** to adjust.
5. Press **MODE** to exit the setting mode.
6. To turn the alarm ON/OFF, press the **START** button while in Alarm Mode. An alarm icon will appear/disappear.
7. To activate/deactivate the hourly chime, press the **RESET** button while in Alarm Mode. A chime icon will appear/disappear.

- **Water Resistance:** This watch is rated 30M (3ATM) water resistant. It is suitable for daily use, splashes, rain, and handwashing. Do not press any buttons while the watch is wet or submerged. Not suitable for swimming, diving, or showering with hot water.
- **Cleaning:** Wipe the watch case and strap regularly with a soft, dry cloth. For stainless steel straps, a slightly damp cloth can be used, followed by immediate drying. Avoid harsh chemicals or abrasive cleaners.
- **Battery:** The watch uses a standard button cell battery. When the display dims or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.
- **Storage:** Store your watch in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Refer to "Setup: Initial Time and Date Setting" to reset the time.
Buttons are unresponsive.	Watch may be in a locked mode or battery is very low.	Try pressing all buttons firmly. If still unresponsive, replace battery.
Water inside the watch.	Water resistance exceeded (e.g., hot shower, deep diving) or buttons pressed underwater.	Immediately take the watch to a professional for inspection and repair to prevent further damage.

Specifications

- **Model Number:** 2212
- **Case Material:** Zinc Alloy
- **Strap Material:** Stainless Steel
- **Clasp Type:** Stainless Steel
- **Movement:** High-precision Digital
- **Display:** Digital with EL Backlight
- **Functions:** Dual Time, Chronograph, Countdown Timer, Alarm, Date/Week, 12/24 Hour Format
- **Water Resistance:** 30M (3ATM) - Suitable for splashes, rain, handwashing. Not for swimming or diving.
- **Manufacturer:** SKMEI

Warranty and Support

SKMEI products are manufactured to high-quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact SKMEI customer service through their official website or authorized retailers. Please retain your proof of purchase for any warranty claims.

