

[Manuals.plus](#) /

› [FLEXISPOT](#) /

› FLEXISPOT 55x28 Inch Electric Standing Desk User Manual

FLEXISPOT FLEXISPOT One-Piece Electric Standing Desk

FLEXISPOT 55x28 Inch Electric Standing Desk User Manual

Model: FLEXISPOT One-Piece Electric Standing Desk

INTRODUCTION

This manual provides essential information for the safe and efficient use of your FLEXISPOT 55x28 Inch Electric Standing Desk. Please read all instructions carefully before assembly and operation.

SAFETY INSTRUCTIONS

- Do not exceed the maximum weight limit of 176 pounds (80 kg).
- Ensure the desk is properly assembled and all connections are secure before use.
- Keep children and pets away from the desk during operation.
- Avoid placing liquids directly on the control panel or near electrical components.
- Do not disassemble or modify the desk's electrical components. Contact customer support for service.
- Always ensure there are no obstructions in the desk's path when adjusting height.

SETUP AND ASSEMBLY

Your FLEXISPOT Electric Standing Desk is designed for straightforward assembly. The product is shipped in two packages, containing the desktop and the frame components. An electric drill may be required for certain steps.

Package Contents:

- One-Piece Desktop (55 x 28 inches, 1-inch thick)
- Electric Lifting Frame (Black)
- Control Panel with Memory Presets
- Assembly Hardware and Tools (as specified in the included guide)
- Headphone Hook

Assembly Steps:

1. Unpack all components and verify against the packing list.

2. Attach the lifting columns to the desktop using the provided screws.
3. Install the foot supports to the lifting columns.
4. Mount the control box and control panel to the underside of the desktop.
5. Connect all motor and control cables to the control box.
6. Attach the headphone hook to your preferred side of the desk.
7. Plug the power cord into a grounded outlet.
8. Perform initial calibration as per the detailed assembly instructions included in your package.

DEMENTIONS & FUNCTIONAL

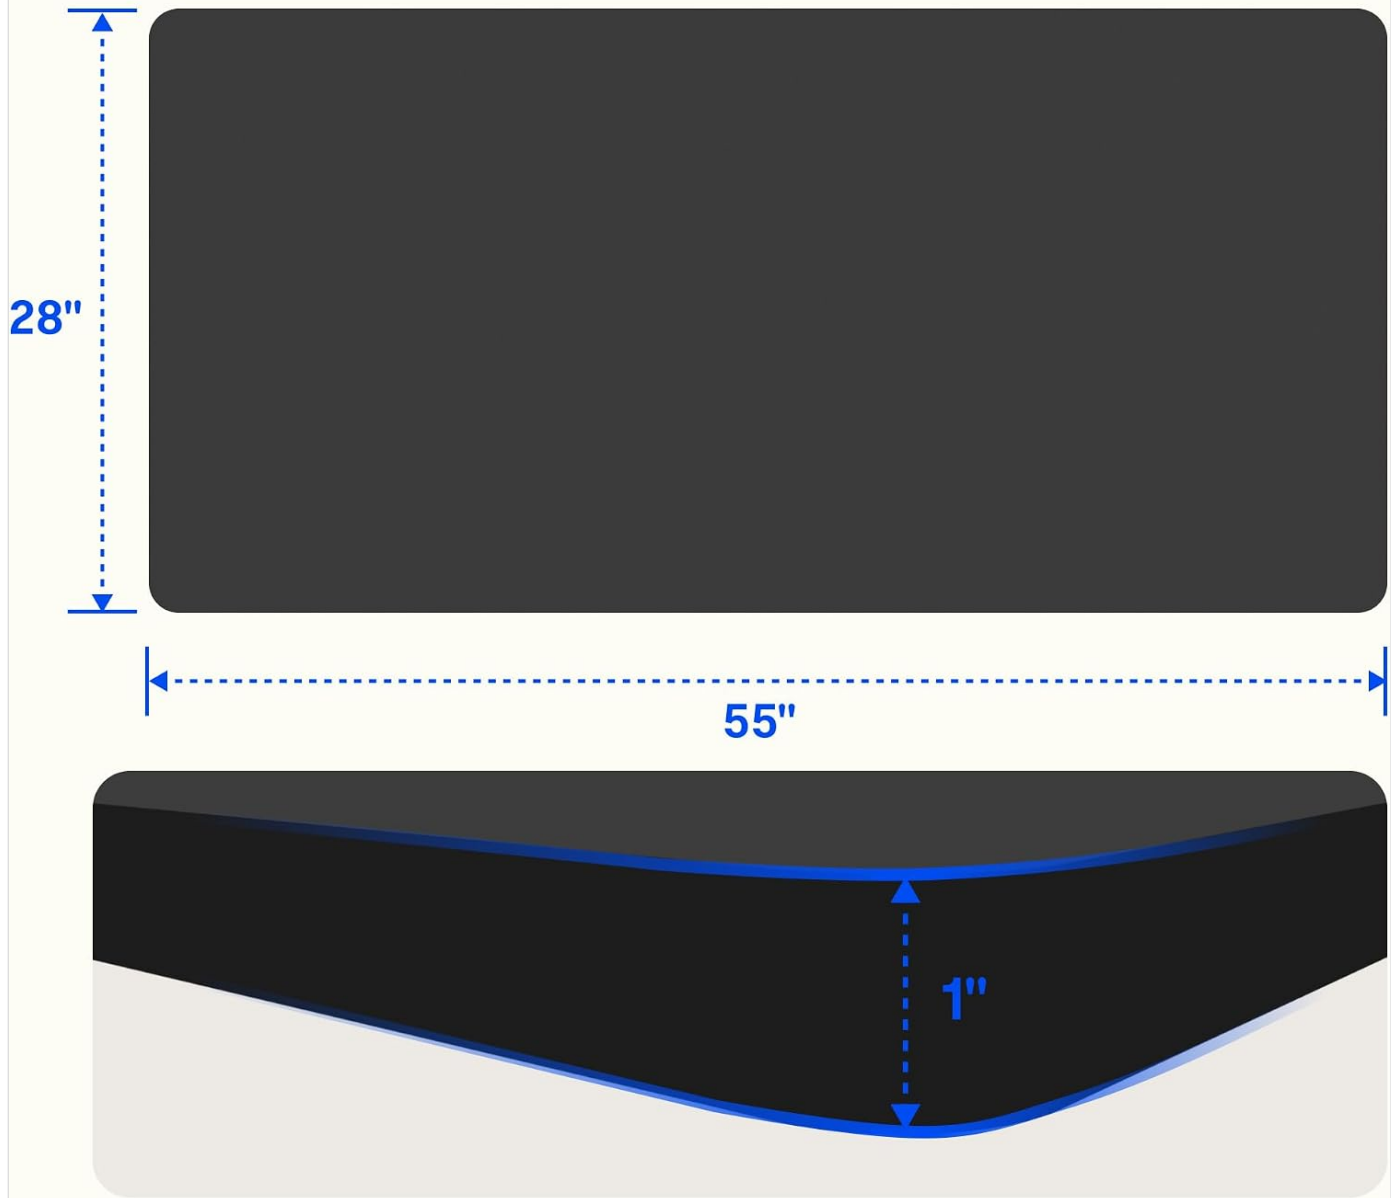


Image: Desk dimensions (55" W x 28" D) and 1-inch desktop thickness for stability.

2 Desk Hooks For Convenient Storage



Image: Two integrated desk hooks provide convenient storage for headphones or bags.

OPERATING INSTRUCTIONS

Your FLEXISPOT Electric Standing Desk features a user-friendly control panel for effortless height adjustments and memory functions.

Height Adjustment:

- Use the **Up** (^) and **Down** (v) arrow buttons on the control panel to manually adjust the desk height.
- The LED display will show the current desk height in inches.
- The desk operates smoothly and quietly, ensuring minimal disruption to your work environment.

Memory Presets:

The control panel includes four programmable memory buttons (1, 2, 3, 4) to save and recall your preferred sitting and

standing heights.

1. Adjust the desk to your desired height using the Up/Down buttons.
2. Press the **"M"** button (or "i" depending on model) followed by a number button (1, 2, 3, or 4) to save the current height.
3. To recall a saved height, simply press the corresponding number button. The desk will automatically move to that position.



Image: The smart control panel features an LED display, up/down controls, and four programmable memory presets.

LARGE ADJUSTMENT RANGE

Height Options for Everyone



Image: The desk offers a large adjustment range, from a minimum height of 28.1 inches to a maximum of 45.7 inches.

SMOOTH AND QUIET MOVEMENT

operates with minimal noise, ideal for maintaining concentration and productivity



Image: The desk features smooth and quiet movement, operating with minimal noise to maintain concentration.

MAINTENANCE

- Regularly wipe the desktop surface with a soft, damp cloth. Avoid harsh chemicals.
- Check all screws and bolts periodically to ensure they are tight.
- Keep the electrical components and cables free from dust and debris.
- Do not lubricate the lifting columns unless specifically instructed by FLEXISPOT support.

TROUBLESHOOTING

Common Issues and Solutions:

- **Desk not responding:**
 - Check if the power cord is securely plugged into both the desk and the wall outlet.
 - Ensure the control box cables are properly connected.

- Perform a reset: Unplug the desk for 10 seconds, then plug it back in.

- **Desk wobbles:**

- Verify that all assembly screws are tightened.
- Ensure the desk is placed on a level surface. Adjust foot glides if necessary.
- Do not exceed the maximum weight capacity of 176 lbs.

- **Unusual noises (e.g., clicking):**

- This may indicate an issue with the motor or lifting mechanism. Discontinue use and contact FLEXISPOT customer support.

- **Error codes on display:**

- Refer to the detailed troubleshooting section in your included assembly manual for specific error code interpretations and solutions.

SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model	One-Piece Electric Standing Desk
Desktop Dimensions	55"W x 28"D
Desktop Thickness	1 Inch
Height Adjustment Range	28.1" to 45.7"
Maximum Weight Capacity	176 Pounds (80 kg)
Frame Material	Alloy Steel
Desktop Material	Engineered Wood
Special Features	One-Piece Desktop, Memory Controller, Headphone Hook

WARRANTY AND SUPPORT

Your FLEXISPOT Electric Standing Desk comes with a **Limited Warranty**. For specific details regarding coverage periods for the frame, motor, and electronics, please refer to the warranty card included with your product or visit the official FLEXISPOT website.

Optional protection plans (2-Year and 3-Year) may be available for extended coverage.

For technical support, troubleshooting assistance, or warranty claims, please contact FLEXISPOT customer service:

- **Manufacturer:** FLEXISPOT
- **Contact Information:** Refer to your product packaging or the official FLEXISPOT website for the most current contact details.

ABOUT FLEXISPOT

FLEXISPOT is committed to excellence in every step of the manufacturing process, from design to delivery. Explore the precision and innovation behind FLEXISPOT products.

Your browser does not support the video tag.

Video: An inside look at FLEXISPOT's factory, showcasing the manufacturing process and commitment to quality.

Your browser does not support the video tag.

Video: Discover the FLEXISPOT Brand Store, highlighting the range and philosophy of FLEXISPOT products.

© 2026 FLEXISPOT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question