

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Retekess](#) /

› [Retekess TR508 FM Transmitter & PR13 FM Receiver System User Manual](#)

Retekess TR508, TR503, PR13

Retekess TR508 FM Transmitter & PR13 FM Receiver System User Manual

Model: TR508 FM Transmitter, TR503 FM Transmitter Headset, PR13 FM Radio Receivers

1. INTRODUCTION

The Retekess TR508 FM Transmitter and PR13 FM Receiver System is designed for wireless audio broadcasting over long distances. This system is ideal for applications such as church translation, museum tours, factory communication, and school events, providing clear and stable audio transmission. The TR508 transmitter features a durable metal body and adjustable frequency, while the PR13 receivers are compact and easy to operate.



The Retekess TR508 FM Transmitter system is designed for various applications, including church services, providing clear stereo sound.



The TR508 transmitter delivers stereo surround sound for clear audio quality.

2. SAFETY INFORMATION


The FCC ID for the TR508 is 2AA8TR508. This device complies with Title 47 SECTION 15.205 Restricted bands of operation, ensuring legal and safe usage.

3. COMPONENTS OVERVIEW

The system includes the following main components:

- **TR508 FM Transmitter:** The main broadcasting unit with adjustable frequency, audio, and microphone inputs.
- **TR503 FM Transmitter Headset:** A headset with a microphone for the speaker, designed for comfortable wear and clear voice transmission.
- **PR13 FM Radio Receivers:** Compact, portable receivers for listeners to tune into the broadcast.

Function buttons

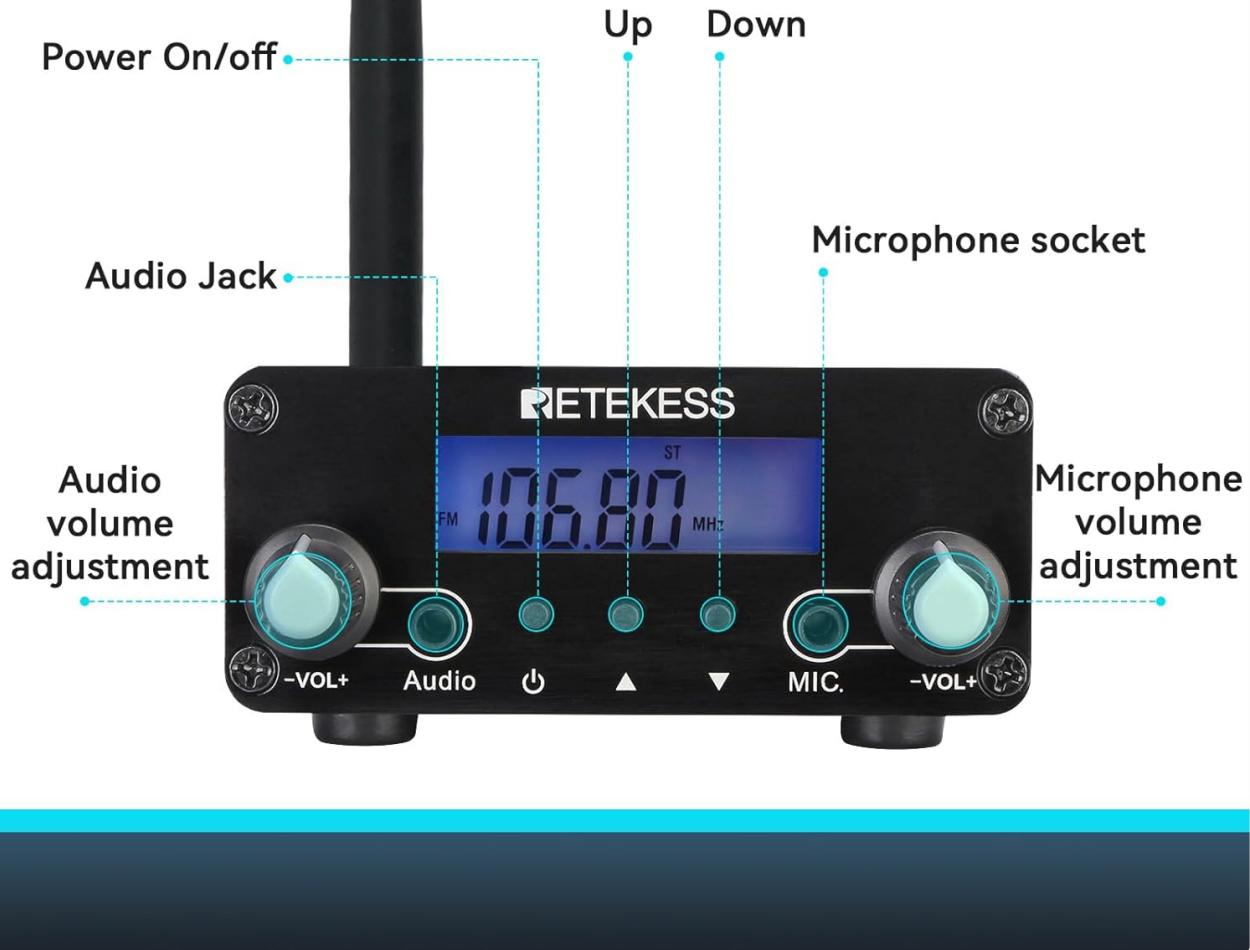

Front panel of the TR508 FM Transmitter showing power, audio, and microphone controls.



Working time: 8h



Charging time: 2-3h



The TR503 FM Headset offers 8 hours of working time and charges in 2-3 hours.



LCD-display to indicate FM frequency



The PR13 FM Radio Receiver features an LCD display to indicate the FM frequency.

4. SETUP INSTRUCTIONS

4.1 TR508 FM Transmitter Setup

- 1. Connect Antenna:** Screw the antenna securely into the ANT port on the back of the TR508 transmitter.
- 2. Connect Power:** Plug the power adapter into the 12V=2.0A port on the back of the transmitter, then plug the adapter into a power outlet.
- 3. Connect Audio Source:** Use the provided 3.5mm audio cable to connect your audio source (e.g., MP3 player, PC, mobile phone) to the 'Audio' input jack on the front panel. For microphone input, connect the TR503 headset or another compatible microphone to the 'Mic' input jack.

**Metal body,
durable and good heat dissipation**



The TR508 features a metal body for durability and efficient heat dissipation.

4.2 TR503 FM Transmitter Headset Setup

- Charging:** Ensure the TR503 headset is fully charged before use. Connect it to a USB power source using the appropriate cable.
- Wearing:** Place the headset comfortably on your head with the microphone positioned near your mouth for optimal voice pickup.

4.3 PR13 FM Radio Receiver Setup

- Batteries:** Insert the required AAA batteries into each PR13 receiver.
- Earphones:** Plug the earphones into the 3.5mm jack on the PR13 receiver.

5. OPERATING INSTRUCTIONS

5.1 TR508 FM Transmitter Operation

- Power On/Off:** Press the power button on the front panel to turn the transmitter on or off.
- Frequency Adjustment:** Use the 'Up' and 'Down' buttons to select the desired FM broadcasting frequency. The frequency will be displayed on the LCD screen.
- Volume Control:** Adjust the 'Audio' knob to control the volume of the connected audio source and the 'Mic' knob to control the microphone volume.
- High/Low Power Mode:** To change power mode, first turn off the transmitter and remove the charger. Then, press and hold the power button while plugging in the charger. The screen will display 'L' for low power or 'H' for high power. Release the power button once the desired mode is displayed.



The TR508 features separate volume controls for audio and microphone inputs.



The TR508's blue LCD display shows the current FM frequency.

Video: Instructions on how to use the Retekess TR508 FM Transmitter, including connecting the antenna, power, and adjusting frequency and volume.

Video: Overview of what can be received with the Retekess TR508 system, demonstrating its broadcasting capabilities.


5.2 PR13 FM Radio Receiver Operation

- 1. Power On/Off:** Press the power button on the PR13 receiver to turn it on or off.
- 2. Tuning:** Use the 'TUN+' and 'TUN-' buttons to search for the desired FM frequency broadcasted by the TR508 transmitter.
- 3. Volume Adjustment:** Use the 'VOL+' and 'VOL-' buttons to adjust the listening volume.
- 4. Mono/Stereo Switch:** Press the 'S/M' button to switch between mono and stereo audio modes.
- 5. Saving Favorite Stations:** Press the 'MEM' button to jump to a memory slot, then press buttons 1-5 to select and save a favorite station.

CHURCH PARKING

PR13 FM Receiver

DSP technology

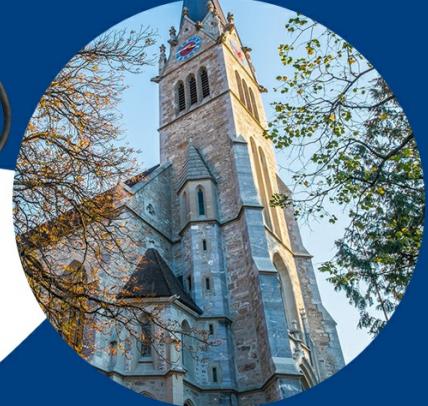

The PR13 FM Receiver is suitable for use in various environments, including church parking lots.

PR13 Portable FM Radio Receiver

The PR13 unit is small enough to fit easily in your shirt pocket



The PR13 receiver is portable and designed to fit easily in a shirt pocket.

Video: Demonstrates the basic operation of the Retekess PR13 FM Receiver, including power, tuning, and volume controls.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the transmitter and receivers. Avoid using harsh chemicals or abrasive materials.
- **Battery Care:** For PR13 receivers, replace AAA batteries as needed. For the TR503 headset, ensure regular charging to maintain battery life.
- **Storage:** Store the system components in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

7. TROUBLESHOOTING

• No Signal/Poor Audio:

- Ensure the TR508 antenna is securely connected and fully extended.
- Verify that the TR508 transmitter and PR13 receivers are tuned to the same frequency.
- Check the distance between the transmitter and receivers; the effective range is up to 300m/980ft in a barrier-free environment. Obstacles can reduce range.
- Confirm that the audio source is properly connected and playing.

• Power Issues:

- For TR508, ensure the power adapter is correctly plugged into both the transmitter and a working power outlet.
- For TR503, check if the headset is charged.
- For PR13, ensure batteries are correctly inserted and have sufficient charge.

• Microphone Not Working:

- Verify the TR503 headset is connected to the 'Mic' input of the TR508.
- Adjust the 'Mic' volume knob on the TR508.

8. SPECIFICATIONS

Feature	Specification
Model Number	FF9244A-F9221A-F9213AX10 (Kit)
Brand	Retekess
Connectivity Technology	AUX
Power Source	Battery Powered (Receivers), AC Adapter (Transmitter)
Material	Metal body (TR508), ABS body (TR503)
Transmission Range	Up to 300m/980ft (barrier-free environment)
Item Weight	3.89 pounds (Total package)
Package Dimensions	12.05 x 11.61 x 9.37 inches
Batteries	11 AAA batteries required (included)

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Retekess website or contact their customer service directly. Keep your purchase receipt for any warranty claims.