

ZWP MF-H-01, D802, C5, S200, P70324, M858, ZF0801, TD05-EB-010 Compatible

Replacement Remote Control User Manual

Model Compatibility: Putnen MF-H-01, HJDFGSS D802, CURSOR Fitness C5, GEONEO S200, Medilax P70324, Morelax M858, DOMNIU, Yagud ZF0801, Roylvan TD05-EB-010 Under Desk Elliptical Machine

INTRODUCTION

This manual provides instructions for the ZWP Replacement Remote Control, designed for various under-desk elliptical machines. This remote control is a direct replacement and requires no programming. Simply install batteries to begin operation.

PRODUCT OVERVIEW

The ZWP Replacement Remote Control is constructed from high-quality, wear-resistant ABS material, offering a comfortable hand feeling and durable performance. It features soft silicone buttons for reliable operation.

Key Features:

- Made of high-quality ABS material for durability.
- Comfortable hand feeling.
- No programming required; ready to use after battery installation.
- Compatible with a range of under-desk elliptical machines.



ABS.Environmental protection material
Soft silicon button

Ensure quality
Protecting health

Image: The remote control's construction, emphasizing its ABS material and soft silicone buttons for user comfort and durability.



Image: A general view of two ZWP replacement remote controls, illustrating their design and form factor.

SETUP

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two (2) 1.5V AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. *(Batteries are not included with the remote control.)*
4. Slide the battery compartment cover back into place until it clicks securely.

Requires Two 1.5V AAA Batteries

(Batteries are not included)

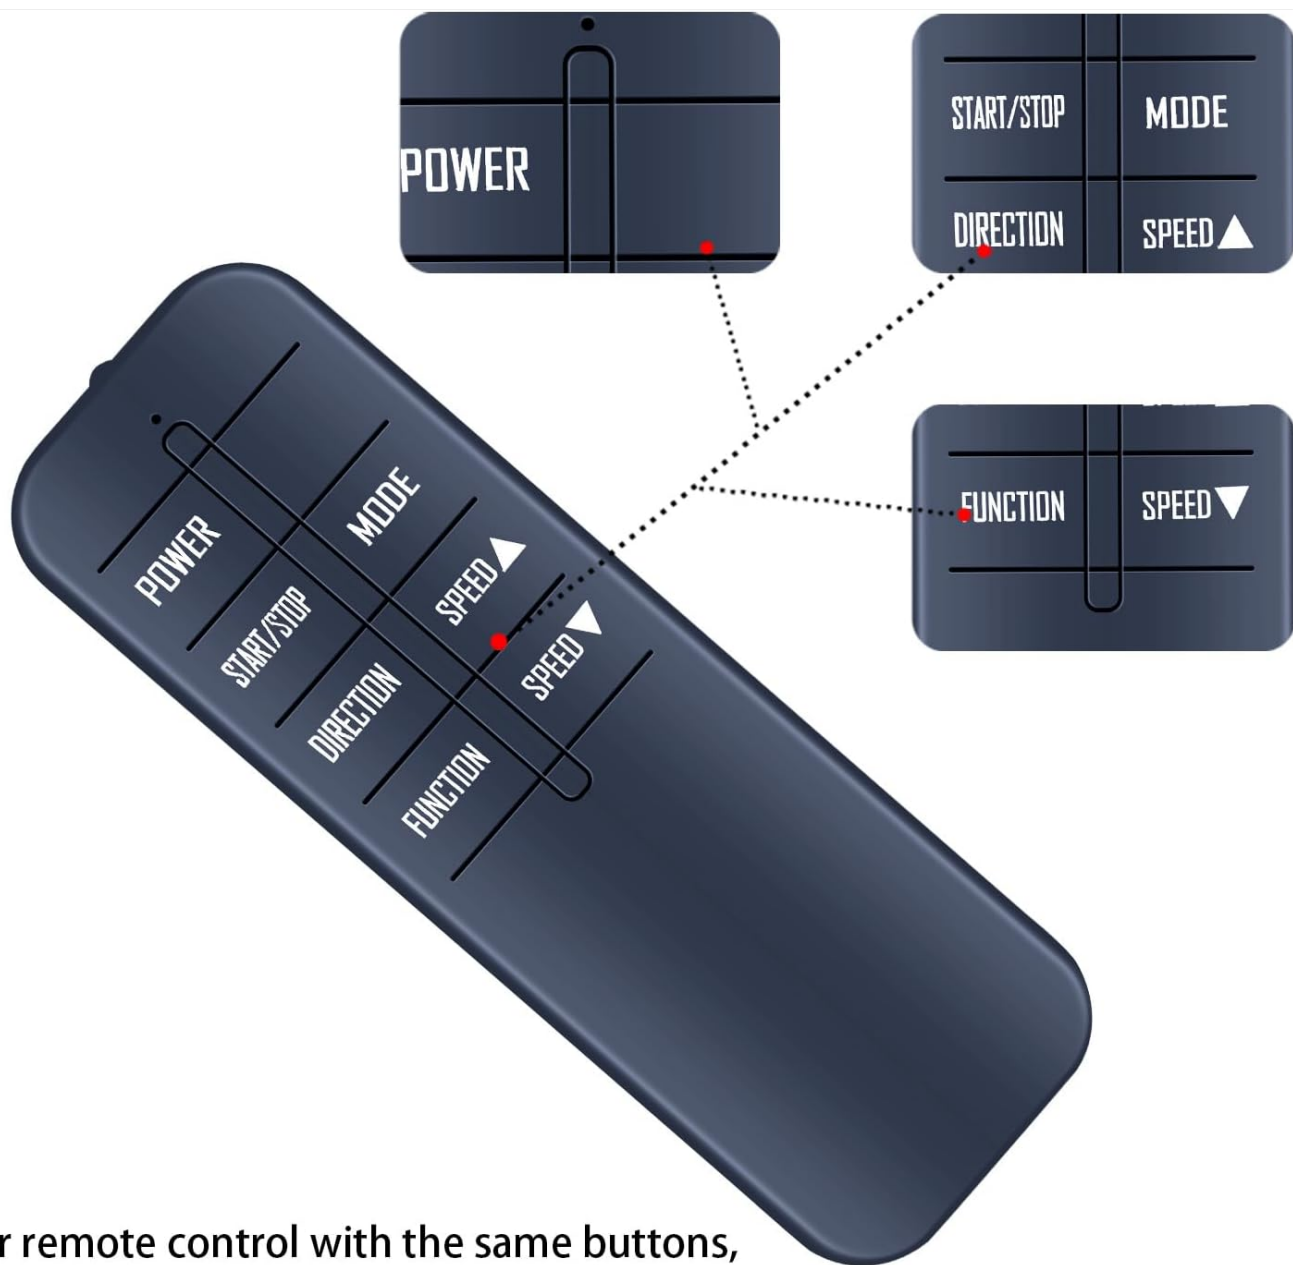


Image: Illustration of the remote control's battery compartment, demonstrating the correct insertion of two 1.5V AAA batteries.

OPERATING INSTRUCTIONS

After installing the batteries, the remote control is ready for immediate use with compatible under-desk elliptical machines. No additional programming is required.

Button Functions:



**For remote control with the same buttons,
please distinguish carefully when purchasing**

Image: A detailed view of the remote control, highlighting each button and its corresponding function for easy identification.

- **POWER:** Turns the elliptical machine on or off.
- **START/STOP:** Initiates or pauses the exercise program.
- **MODE:** Cycles through different exercise modes or display options.
- **DIRECTION:** Changes the direction of pedal rotation (forward/reverse).
- **SPEED ▲ (Up):** Increases the speed or intensity level.
- **SPEED ▼ (Down):** Decreases the speed or intensity level.
- **FUNCTION:** Activates specific functions or settings on the elliptical machine.

Important Compatibility Note: Before purchasing or using this replacement remote, ensure that the button layout and functions on your original remote control match those shown on this replacement. Discrepancies in button layout may result in incompatibility.



Image: A visual comparison between the ZWP replacement remote and an original remote, illustrating the importance of verifying identical button configurations for proper functionality.



Image: Two remote controls displayed side-by-side, visually confirming the functional equivalence of the replacement remote with the original.

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water; avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, refer to the following common troubleshooting steps:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new 1.5V AAA batteries.
 - Ensure there are no obstructions between the remote control and the elliptical machine's receiver.
 - Verify that the remote control's button layout matches your original remote for compatibility.
- **Intermittent Functionality:**
 - Ensure the battery contacts are clean and free of corrosion.
 - Try operating the remote closer to the elliptical machine.

SPECIFICATIONS

Feature	Detail
Brand	ZWP
Compatible Devices	Putnen MF-H-01, HJDFGSS D802, CURSOR Fitness C5, GEONEO S200, Medilax P70324, Morelax M858, DOMNIU, Yagud ZF0801, Roylvan TD05-EB-010 Under Desk Elliptical Machines
Power Source	2 x 1.5V AAA Batteries (Not Included)
Material	High-quality ABS
Color	Black
Item Weight	2.08 ounces
Package Dimensions	7.5 x 2.6 x 1 inches
Special Feature	Ergonomic design

SUPPORT

For any questions or assistance regarding your ZWP Replacement Remote Control, please do not hesitate to contact us. We are committed to helping you resolve any issues you may encounter.
Please refer to your purchase documentation or the seller's contact information for specific support channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question