

[manuals.plus](#) /

› [vidaXL](#) /

› [vidaXL White Engineered Wood Wardrobe with Shelves \(Model 3334008\) Instruction Manual](#)

vidaXL 3334008

vidaXL White Engineered Wood Wardrobe with Shelves (Model 3334008) Instruction Manual

INTRODUCTION

Thank you for purchasing the vidaXL White Engineered Wood Wardrobe with Shelves. This manual provides important information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before beginning assembly and retain them for future reference.



Image: Front view of the assembled vidaXL White Engineered Wood Wardrobe with Shelves.

SAFETY INFORMATION

- **Adult Assembly Required:** This product requires adult assembly. Keep small parts and packaging materials away from children.
- **Stable Placement:** Ensure the wardrobe is placed on a flat, stable surface to prevent tipping. Consider securing it to a wall if necessary, especially in households with children.
- **Weight Limits:** Do not overload shelves. Distribute weight evenly.
- **Material Care:** Engineered wood can be sensitive to moisture. Avoid prolonged exposure to liquids.
- **Tool Safety:** Use appropriate tools for assembly and follow all safety guidelines for tool usage.

PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. Refer to the parts list provided in your

packaging. If any parts are missing or damaged, contact customer support.

- Engineered wood panels (sides, top, bottom, shelves, doors, back panel)
- Hardware pack (screws, dowels, hinges, handles, cam locks, etc.)
- Assembly instructions (this document)

SETUP AND ASSEMBLY

Assembly is required for this wardrobe. It is recommended to have two people for assembly. Clear a spacious area and lay out all components on a soft, clean surface to prevent scratches.

1. **Identify Components:** Match all panels and hardware to the parts list in your package.
2. **Assemble Frame:** Begin by connecting the side panels to the base and top panels using the provided hardware (e.g., cam locks and dowels). Ensure all connections are secure.
3. **Install Shelves:** Insert the wooden shelves into the designated slots or attach them using shelf pins. The shelves are designed to hold various items, providing flexible storage.
4. **Attach Back Panel:** Secure the back panel to the frame. Note that some designs may feature a multi-part back panel.
5. **Mount Hinges:** Attach the hinges to the wardrobe doors and then to the side panels of the wardrobe.

 


Image: Detail of a hinge mechanism for the wardrobe doors.

6. **Install Doors:** Carefully attach the doors to the hinges. Adjust the hinges as needed to ensure proper door alignment and smooth opening/closing.
7. **Attach Handles:** Secure the modern handles to the wardrobe doors.
8. **Final Check:** Verify all screws and connections are tight. Ensure the wardrobe is stable and doors operate correctly.

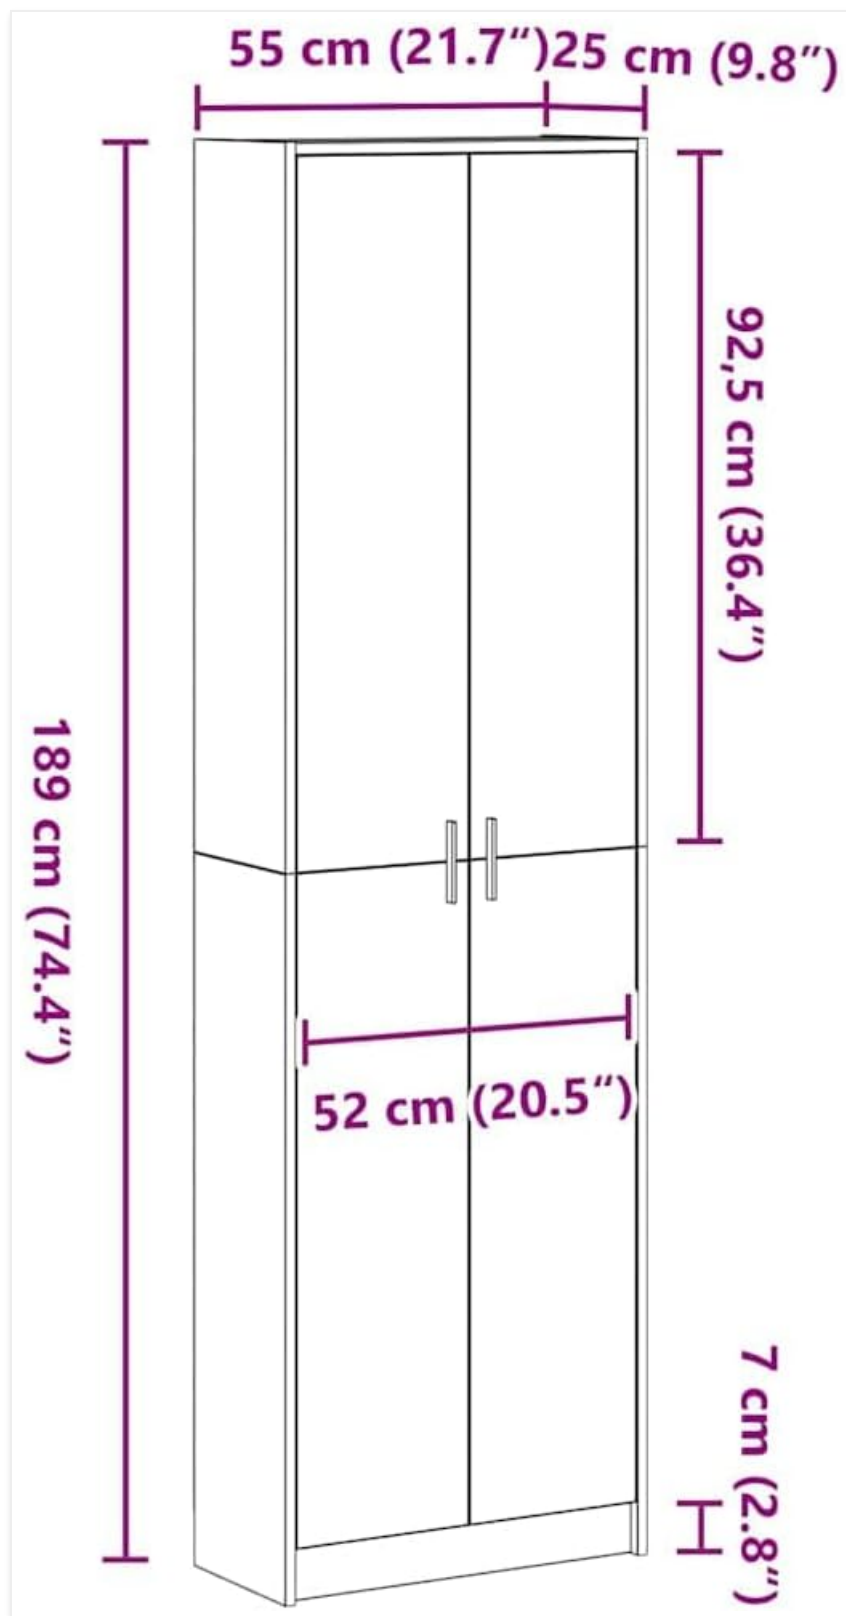


Image: The wardrobe with its doors open, revealing multiple internal shelves for storage.

OPERATING INSTRUCTIONS

This wardrobe is designed for storing clothing, accessories, and other household items. Its hinged doors provide easy access to the contents.

- **Opening/Closing Doors:** Use the handles to gently open and close the doors. Avoid forcing them.
- **Utilizing Shelves:** Arrange items on the shelves according to your needs. Distribute weight evenly to maintain stability and prevent warping of shelves.

- **Freestanding Design:** The wardrobe's freestanding design allows for flexible placement within your room. Ensure it is always on a level surface.

MAINTENANCE AND CARE

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that can damage the engineered wood finish.
- **Spills:** Immediately wipe up any liquid spills to prevent moisture absorption and potential damage to the material.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.
- **Door Alignment:** If doors become misaligned over time, adjust the hinges as per the hinge manufacturer's instructions (typically involves adjusting screws on the hinge mechanism).

TROUBLESHOOTING

Problem	Possible Cause	Solution
Parts do not align during assembly.	Incorrect orientation of panels or misaligned hardware.	Review the assembly instructions carefully. Disassemble the affected section and re-align components. Ensure dowels and cam locks are correctly seated.
Wardrobe feels unstable or wobbly.	Loose connections or uneven floor.	Check and tighten all screws and fittings. Ensure the wardrobe is on a level surface. Use shims if necessary. Consider wall anchoring for added stability.
Doors are misaligned or do not close properly.	Hinges are not adjusted correctly or loose.	Adjust the screws on the hinges to align the doors. Refer to hinge adjustment guides if unfamiliar. Ensure hinges are securely attached.
Missing parts upon unboxing.	Packaging error.	Do not proceed with assembly. Contact vidaXL customer support immediately with your product model number and a description of the missing parts.

SPECIFICATIONS

Brand	vidaXL
Model Number	3334008
Color	White
Material	Engineered Wood
Product Dimensions (L x W x H)	55 x 25 x 189 cm (21.7 x 9.8 x 74.4 inches)
Item Weight	33.8 Kilograms (74.5 lbs)



Image: Dimensional diagram of the wardrobe, indicating height, width, and depth.

WARRANTY AND SUPPORT

For warranty information, please refer to your purchase documentation or contact the retailer. For technical support, missing parts, or any other inquiries, please contact vidaXL customer service through their official website or the platform where the product was purchased.

Note: Information regarding spare parts availability is not provided.