

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EWEADN](#) /

› [EWEADN V20 Wireless Typewriter Keyboard Instruction Manual](#)

## EWEADN V20

# EWEADN V20 Wireless Typewriter Keyboard Instruction Manual

Model: V20 | Brand: EWEADN

## INTRODUCTION

Thank you for choosing the EWEADN V20 Wireless Typewriter Keyboard. This mechanical keyboard combines a retro typewriter aesthetic with modern functionality, offering multiple connection modes, customizable backlighting, and a comfortable typing experience. This manual will guide you through the setup, operation, and maintenance of your new keyboard.

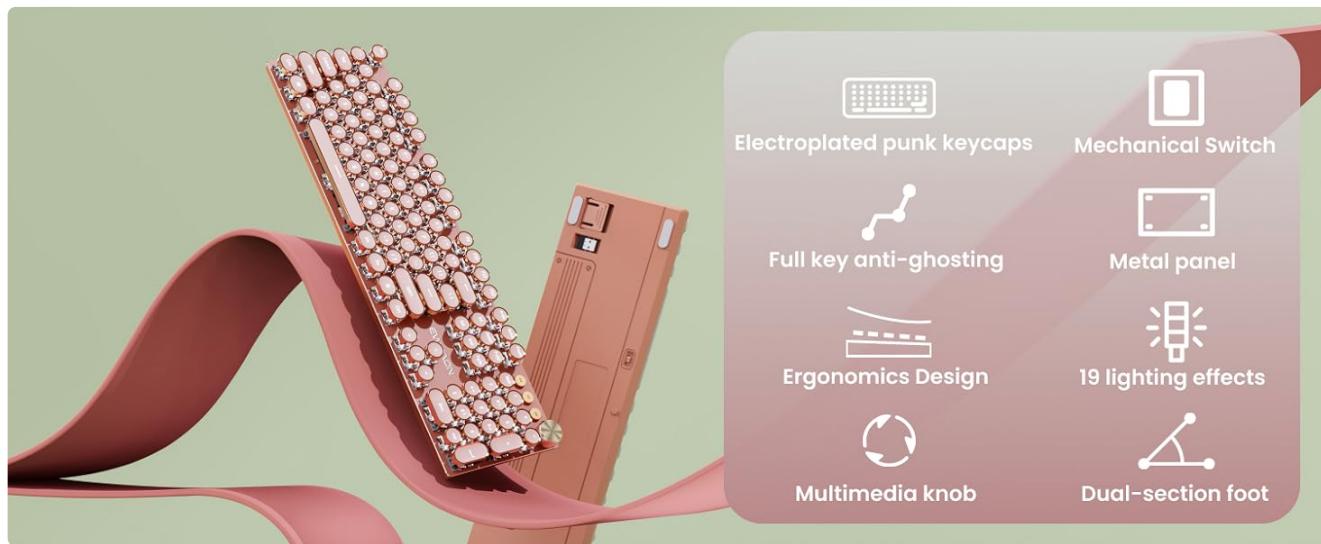


Image: Overview of the EWEADN V20 keyboard highlighting features like electroplated punk keycaps, mechanical switches, anti-ghosting, metal panel, ergonomics, 19 lighting effects, multimedia knob, and dual-section foot.

## WHAT'S IN THE BOX

Please check the package contents upon unboxing:

- EWEADN V20 Keyboard x 1

- USB Cable x 1
- Instruction Manual x 1

## SETUP

### Connection Modes

The V20 keyboard supports three connection modes: Bluetooth 5.0, 2.4GHz Wireless, and USB-C Wired. It can connect to up to 5 devices simultaneously.

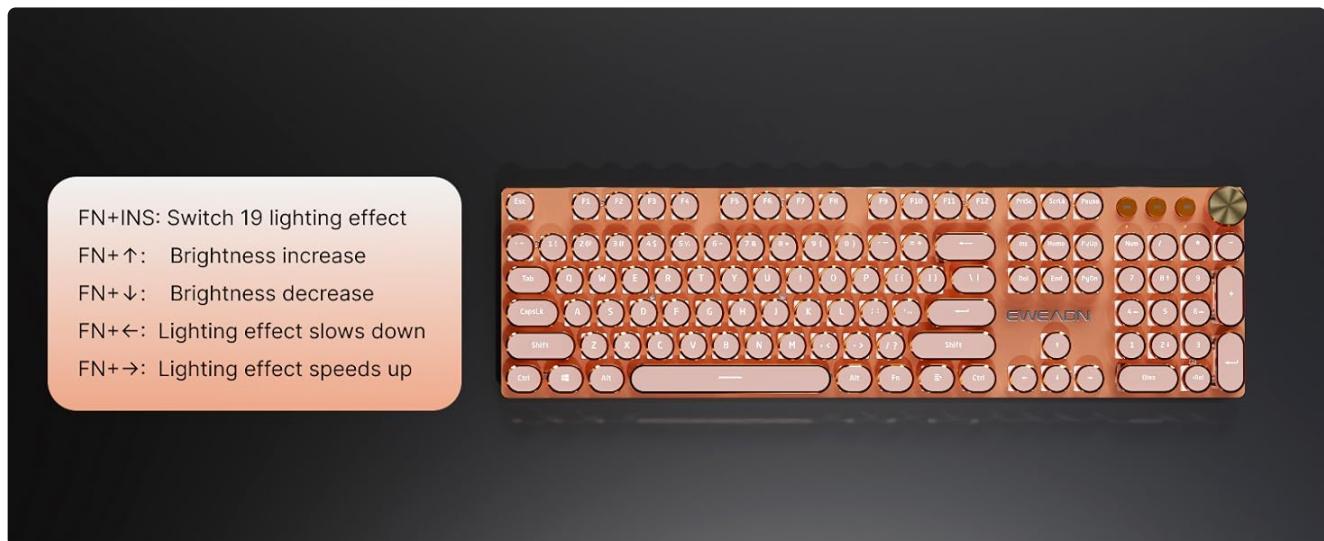


Image: The keyboard demonstrating its tri-mode connection capabilities: Bluetooth 5.0, 2.4GHz Wireless, and USB-C Wired, connecting to a laptop, phone, and tablet.

#### 1. Bluetooth Connection (BT1/BT2/BT3):

Press and hold **FN + 1**, **FN + 2**, or **FN + 3** to switch to one of the three Bluetooth channels. The indicator light will flash, indicating pairing mode. Search for "EWEADN V20" on your device's Bluetooth settings and connect.

#### 2. 2.4GHz Wireless Connection:

Insert the 2.4GHz USB receiver (located in the keyboard's back compartment) into your device's USB port. Press and hold **FN + 4** to activate 2.4GHz mode. The keyboard should connect automatically.

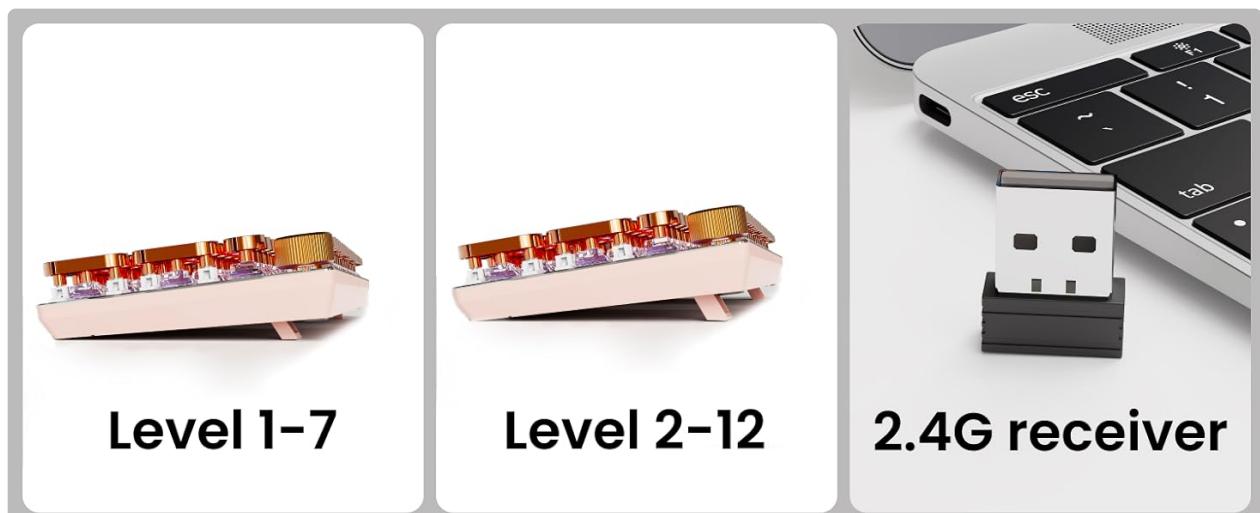


Image: Visual guide for switching between connection modes using FN key combinations: FN+1/2/3 for Bluetooth, FN+4 for 2.4GHz Wireless, and FN+5 for USB-C Wired.

#### 3. USB-C Wired Connection:

Connect the keyboard to your device using the provided USB-C cable. Press and hold **FN + 5** to switch to

wired mode. The keyboard will function as a standard wired keyboard and charge simultaneously.

## System Compatibility

The V20 keyboard is compatible with Windows 7/8/10/XP/Vista, Linux, and Mac OS systems. You can easily switch between Windows and Mac layouts.

- **Switch to Windows Layout:** Press **FN + W**
- **Switch to Mac Layout:** Press **FN + A**
- **Reset Keyboard:** Press **FN + ESC**

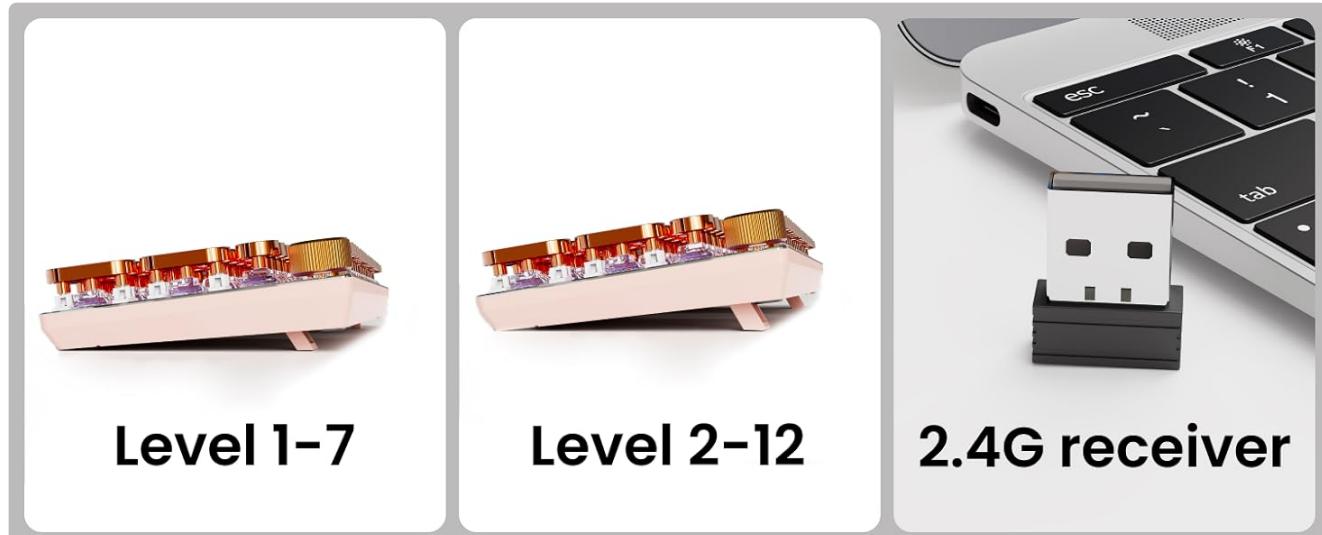


Image: Visual guide for switching between Windows and Mac layouts using FN+W and FN+A, and resetting the keyboard with FN+ESC.

## OPERATING INSTRUCTIONS

### Multimedia and Backlight Control

The keyboard features a multimedia knob and dedicated buttons for easy control of media and lighting effects.



Image: Diagram illustrating the functions of the rotary multimedia knob for both multimedia and lighting modes.

- **Multimedia Knob:**

- Press and hold the knob for three seconds to switch between Multimedia Mode and Lighting Mode.

- In *Multimedia Mode*: Turn clockwise to increase volume, counter-clockwise to decrease volume. Press the knob to mute/unmute.
- In *Lighting Mode*: Turn clockwise to increase brightness, counter-clockwise to decrease brightness. Press the knob to switch lighting effects.
- **Dedicated Media Buttons:** Located next to the knob, these buttons allow quick control for previous song, next song, and play/pause.

## Backlight Effects

The keyboard offers 19 lighting effects and adjustable brightness/speed.

## For Win and Mac

### MULTIPLE SYSTEM COMPATIBILITY

Easy to change the keyboard WIN/MAC layout

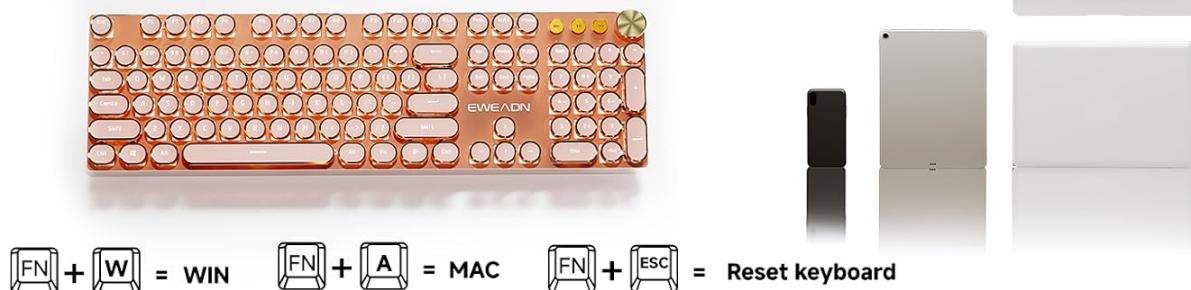


Image: Instructions for controlling backlight effects: FN+INS to switch effects, FN+Up/Down for brightness, and FN+Left/Right for speed.

- **Switch Lighting Effect:** Press **FN + INS** to cycle through 19 lighting effects.
- **Game Backlight Modes:** Press **FN + 1~8** to select specific game backlight modes.
- **Adjust Brightness:** Press **FN + ↑** (Up Arrow) to increase brightness, **FN + ↓** (Down Arrow) to decrease brightness (5 levels).
- **Adjust Speed:** Press **FN + ←** (Left Arrow) to slow down the lighting effect, **FN + →** (Right Arrow) to speed up the lighting effect.

## Anti-Ghosting

The V20 keyboard features full key anti-ghosting technology. This ensures that every key press is registered accurately, even when multiple keys are pressed simultaneously, preventing conflicts and errors during high-speed typing or gaming.

## MAINTENANCE

To ensure the longevity and optimal performance of your EWEADN V20 keyboard, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. For dust and debris between keycaps, use compressed air. Avoid using harsh chemicals or abrasive materials.
- **Spills:** In case of liquid spills, immediately disconnect the keyboard from power. Turn it upside down to drain liquid and allow it to dry completely before reconnecting. Do not use a hairdryer as excessive heat can damage components.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery Care:** For optimal battery life, avoid fully discharging the keyboard frequently. Charge it when the battery indicator is low.

## TROUBLESHOOTING

---

If you encounter any issues with your EWEADN V20 keyboard, please refer to the following common solutions:

Problem	Solution
Keyboard not connecting via Bluetooth/2.4GHz.	<ul style="list-style-type: none"><li>• Ensure the keyboard is charged.</li><li>• Verify the correct connection mode (FN+1/2/3 for Bluetooth, FN+4 for 2.4GHz) is selected.</li><li>• For Bluetooth, ensure your device's Bluetooth is on and the keyboard is in pairing mode.</li><li>• For 2.4GHz, ensure the USB receiver is properly inserted and try a different USB port.</li><li>• Try resetting the keyboard by pressing <b>FN + ESC</b>.</li></ul>
Backlight not working or dim.	<ul style="list-style-type: none"><li>• Increase brightness using <b>FN + ↑</b>.</li><li>• Ensure the keyboard is charged, as low battery can affect backlight performance.</li><li>• Cycle through lighting effects using <b>FN + INS</b>.</li></ul>
Keys are unresponsive or typing errors occur.	<ul style="list-style-type: none"><li>• Check the connection mode.</li><li>• Ensure the keyboard is fully charged.</li><li>• Clean any debris from under the keycaps.</li><li>• Try connecting via USB-C wired mode to rule out wireless interference.</li></ul>
Multimedia knob not functioning correctly.	<ul style="list-style-type: none"><li>• Press and hold the knob for three seconds to ensure it's in the desired mode (Multimedia or Lighting).</li><li>• Check if the keyboard is properly connected to your device.</li></ul>

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

---

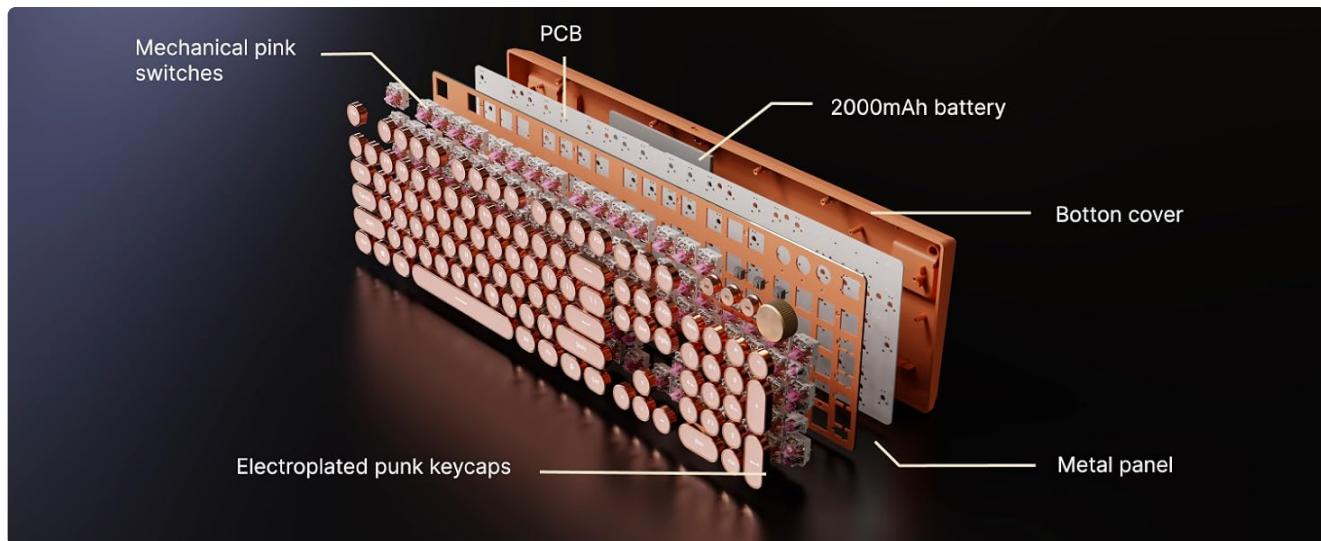


Image: Diagram showing the dimensions (Length: 17.7 inch, Width: 5 inch, Height: 1.7 inch) and weight (1.65 lb) of the EWEADN V20 keyboard.

Feature	Detail
Model Number	V20
Connectivity Technology	2.4GHz Wireless, Bluetooth 5.0, USB-C Wired
Compatible Devices	Laptop, PC, Gaming Console, Tablet, Smartphone
Operating System Compatibility	Windows 7/8/10/XP/Vista, Linux, Mac OS
Keyboard Description	Mechanical Gaming Keyboard
Switch Type	Pink Mechanical Switches (Linear, low resistance)
Key Strokes Life	100 million times
Special Feature	Backlit (Single Color, 19 effects), Multimedia Knob, Anti-Ghosting
Battery Capacity	2000mAh
Battery Life (Backlight On)	Approx. 3 Days
Battery Life (Backlight Off)	Approx. 15 Days
Material	Metal Panel, Electroplated Punk Keycaps
Item Weight	1.65 pounds (approx. 0.75 kg)
Dimensions (L x W x H)	17.7 x 5 x 1.7 inches (approx. 45 x 12.7 x 4.3 cm)

## WARRANTY AND SUPPORT

### Warranty Information

EWEADN products are typically covered by a limited manufacturer's warranty. Please refer to the warranty card included in your product packaging or visit the official EWEADN website for detailed warranty terms and conditions. Keep your purchase receipt as proof of purchase for warranty claims.

### Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact EWEADN customer support through the following channels:

- **Official Website:** Visit the EWEADN official website for support resources, FAQs, and contact information.
- **Email Support:** Refer to your product packaging or the official website for the customer support email address.
- **Online Retailer:** If purchased from an online retailer, you may also contact their customer service for assistance.

When contacting support, please have your product model (V20) and purchase details ready.

© 2026 EWEADN. All rights reserved.