



Manuals.plus /

› BLITZHOME /

› BLITZHOME BH-6-CDW1 WiFi Countertop Portable Mini Dishwasher User Manual

BLITZHOME BH-6-CDW1

BLITZHOME BH-6-CDW1 WiFi Countertop Portable Mini Dishwasher User Manual

Model: BH-6-CDW1 | Brand: BLITZHOME

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your BLITZHOME BH-6-CDW1 WiFi Countertop Portable Mini Dishwasher. Please read all instructions carefully before use and retain this manual for future reference.

PRODUCT OVERVIEW

Key Features

- **Smart App Control:** Monitor washing progress, internal temperature, receive error notifications, schedule washes, select modes, pause/start, create groups, and share device access.
- **9 Wash Programs:** Standard, ECO, Baby Care, Strong, Quick, Fruit, Self-Clean, Dry, and Delayed Start.
- **PTC Hot Air Drying & Air Refresh System:** 60-minute hot air drying and 72-hour air refresh function for dry, odor-free dishes.
- **360° High-Temperature Cleaning:** Three spray arms deliver 167°F (75°C) high-temperature spray for thorough cleaning.
- **Dual Water Supply Modes:** Use the 5.2L built-in water tank (Tank Mode) or connect directly to a tap (Faucet Mode).
- **Compact & Large Capacity:** Measures 21.6 x 14.2 x 19.5 inches, suitable for apartments, RVs, and dorms. Accommodates plates up to 11.81 inches (with top rack removed) for 4-6 person households.
- **Water Saving:** Uses 5.2L of water per cycle, saving up to 85% compared to handwashing.
- **Upgraded Features:** 24-hour delayed start, 2-level rack design, fruit basket, measuring cup, drainage hose, inlet hose, clamp, and suction cup.

Included Components

- 1 Dishwasher Unit
- 1 Measuring Cup

- 1 Fruit and Vegetable Basket
- 1 Drain Hose (59.06 inches)
- 1 Water Inlet Hose (59.06 inches)
- 1 Clamp
- 1 Suction Cup
- 1 Instruction Manual

Product Dimensions

21.57"D x 14.17"W x 19.53"H (54.8 cm D x 36 cm W x 49.6 cm H)
Item Weight: 38.5 pounds (17.5 kg)

Visual Overview



Front view of the BLITZHOME BH-6-CDW1 Countertop Dishwasher.



The dishwasher features double shelves for cutlery and a compact design with large capacity. Dimensions are 21.6 inches (length), 14.2 inches (width), and 19.5 inches (height). It weighs 38.6 lbs and can hold plates up to 10.24 inches, or 11.81 inches with the top rack removed.

Your browser does not support the video tag.

Official overview video highlighting the new generation features of the BLITZHOME Smart Countertop Dishwasher. (Duration: 0:50)

SETUP

Water Supply Connection

Your dishwasher offers two methods for water supply:

1. **Tank Mode (Manual Fill):** Open the water inlet cover on top of the unit. Use the provided measuring cup to pour water into the tank. The dishwasher will beep when the tank is full (approximately 5.2 liters).
2. **Faucet Mode (Direct Connection):** Connect the provided water inlet hose to a compatible faucet. Ensure a secure connection to prevent leaks.

Smart APP Control Clean Anytime Anywhere



Error
Notification



Dishwashing
Status
Tracking



Internal
Temperature
Monitor



Pause/Start
Functionality



Scheduled
Time



Wash Mode
Selection



Group
Creation



Device
Sharing



Illustration of the dual water supply options: manual filling into the top inlet and automatic connection via a faucet hose.

Power Connection

Plug the dishwasher's power cord into a standard 120V AC electrical outlet. Ensure the outlet is properly grounded.

Drainage Setup

Connect the drain hose to the designated outlet at the back of the dishwasher. Secure the hose with the provided clamp. Direct the other end of the drain hose into a sink or a suitable drainage container. Use the suction cup to keep the hose steady if draining into a sink.

Your browser does not support the video tag.

Official video demonstrating the setup and features of the BLITZHOME Mini Dishwasher, including water filling and hose connections. (Duration: 10:27)

OPERATING INSTRUCTIONS

Control Panel Overview

The control panel features touch-sensitive buttons and an LED display for program selection and status monitoring.



The control panel displays various wash programs and functions, including Power, Standard, ECO, Baby Care, Strong, Quick, Fruit, Self-Clean, Dry, and Start/Pause.

Wash Programs

Select the appropriate program based on the type and soil level of your dishes:

- **Standard (58 mins):** For everyday dishware and glassware.
- **ECO (88 mins):** Energy-efficient cycle for normally soiled dishes.
- **Baby Care (78 mins):** High-temperature wash for sterilizing baby bottles and utensils.
- **Strong (98 mins):** For heavily soiled pots, pans, and bakeware.
- **Quick (28 mins):** For lightly soiled items needing a fast wash.
- **Fruit (19 mins):** Gentle wash for fruits and vegetables.
- **Self-Clean (28 mins):** For cleaning the dishwasher interior.
- **Dry (60 mins):** Activates the PTC hot air drying system.
- **Delayed Start (1-24H):** Allows scheduling a wash cycle to begin later.

Smart App Control

Download the BLITZHOME app to access advanced control features:

- Monitor washing status and internal temperature.
- Receive error notifications.
- Schedule wash cycles.
- Select wash modes.
- Pause or start cycles remotely.
- Create device groups and share access.

Smart Control at Your Fingertips with Advanced App Integration



The BLITZHOME app allows for remote control and monitoring of the dishwasher, including error notifications, status tracking, temperature monitoring, pause/start, scheduling, wash mode selection, group creation, and device sharing.

Loading Dishes

Arrange dishes to ensure water spray reaches all surfaces. Utilize the 2-level rack for optimal capacity. The bottom rack is suitable for larger plates and bowls, while the top rack can hold smaller items and cutlery. Plates up to 11.81 inches can be accommodated by removing the top rack.

Detergent Use

Place a dishwasher pod or up to 10 grams of liquid dishwasher detergent in the designated dispenser. Ensure the dispenser is closed before starting a cycle.

MAINTENANCE

Filter Cleaning

Regularly check and clean the filter located at the bottom of the dishwasher to prevent blockages and ensure efficient cleaning. Remove any food debris and rinse the filter under running water. Allow it to air dry before reinserting.



Detailed interior design showing the automatic LED light, removable storage rack, detachable filter, water inlet, drainage holes, and leak protection.

PTC Hot Air Drying and Air Refresh

The PTC hot air drying system activates for 60 minutes after a wash cycle to ensure dishes are dry. The 72-hour air refresh

function circulates air to maintain hygiene and prevent odors, especially during extended storage.

PTC Hot Air Drying and Air Refresh System: Keeps Tableware Fresh and Odor-Free During Long Storage



Visual representation of the PTC hot air drying and air refresh system, designed to keep tableware fresh and odor-free.

General Cleaning

Wipe down the interior and exterior of the dishwasher with a soft, damp cloth as needed. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dishwasher does not start.	Power cord not plugged in; Door not closed properly; Program not selected.	Ensure power cord is securely plugged in. Close the door firmly. Select a wash program and press Start/Pause.
Water not filling.	Water tank empty (Tank Mode); Water inlet hose not connected or water supply off (Faucet Mode).	Fill the water tank until the beep indicator sounds. Check water inlet hose connection and ensure water supply is on.
Dishes not clean.	Improper loading; Filter clogged; Insufficient detergent; Incorrect program selected.	Rearrange dishes for better water circulation. Clean the filter. Use recommended amount of detergent. Select a stronger wash program if needed.
Excessive noise during operation.	Dishes interfering with spray arms; Dishwasher not level.	Ensure dishes do not block spray arm rotation. Adjust dishwasher to be level.
Water leakage.	Loose hose connections; Damaged hose.	Check and tighten all hose connections. Inspect hoses for damage and replace if necessary.

SPECIFICATIONS

Feature	Detail
Model Name	BH-6-CDW1
Form Factor	Countertop
Dimensions (D x W x H)	21.57" x 14.17" x 19.53" (54.8 x 36 x 49.6 cm)
Item Weight	38.5 pounds (17.5 kg)
Voltage	230 Volts
Energy Consumption	950 Watts
Number of Programs	9
Water Consumption (per cycle)	5.2 Liters (approx. 1.37 Gallons)
Capacity	5.2 Liters (water tank)
Material Type	Stainless Steel
Controls Type	App/Touch
Noise Level	56 Decibels

For detailed energy information, refer to the EU EPREL database: <https://eprel.ec.europa.eu/qr/2426943>

Scheda informativa del prodotto

REGOLAMENTO DELEGATO (UE) 2019/2017 DELLA COMMISSIONE per quanto riguarda l'etichettatura energetica delle lavastoviglie per uso domestico

Nome o marchio del fornitore: BLITZHOME

Indirizzo del fornitore: MARWAY Consulting UG (haftungsbeschaenkt), Am Maibusch 108 -110,45883, Gelsenkirchen, Germany, DE

Identificativo del modello: BH-6-CDW1

Parametri generali del prodotto:

Parametro	Valore	Parametro	Valore	
Capacità nominale ^(a) (ps)	4	Dimensioni in cm	Altezza	50
			Larghezza	55
			Profondità	36
EEI ^(a)	53,0	Classe di efficienza energetica ^(a)	E	
Indice di efficienza di lavaggio ^(a)	1,131	Indice di efficienza di asciugatura ^(a)	1,015	
Consumo di energia in kWh [per ciclo] con il programma eco con acqua fredda. Il consumo energetico effettivo dipende dalle modalità d'uso dell'apparecchio.	0,439	Consumo di acqua in litri [per ciclo] con il programma eco. Il consumo effettivo di acqua dipende dalle modalità d'uso dell'apparecchio e dalla durezza dell'acqua.	5,4	
Durata del programma ^(a) (ore:min)	2:36	Tipo	A libera installazione	
Emissioni di rumore aereo ^(a) (dB(A) re 1 pW)	58	Classe di emissione di rumore aereo ^(a)	D	
Modo spento (W) (se applicabile)	0,49	Modo stand-by (W) (se applicabile)	0,00	
Avvio ritardato (W) (se applicabile)	0,00	Modo stand-by in rete (W) (se applicabile)	0,00	

Durata minima della garanzia offerta dal fornitore: 12 mesi

Informazioni supplementari:

Link al sito web del fornitore che riporta le informazioni di cui all'allegato II, punto 6, del regolamento (UE) 2019/2022 della Commissione: N/A

^(a) per il programma eco.

Modello immesso sul mercato dell'Unione da 25/07/2025



Numero di registrazione EPREL: 2426943

<https://eprel.ec.europa.eu/qr/2426943>

Fornitore: Donghuababa (Rappresentante autorizzato)

Sito web:

Servizio di assistenza alla clientela:

Nome: MARWAY Consulting UG (haftungsbeschraenkt)

Sito web:

E-mail: MARWAY.UG@outlook.com

Telefono: 004917645084650

Indirizzo:

Am Maibusch 108 -110,45883, Gelsenkirchen, Germany
Germania

Pagina 2 / 2

EU Energy Label for BLITZHOME BH-6-CDW1 Dishwasher, showing energy efficiency class E, 44 kWh/100 cycles, 4 place settings, 5.4 L water, 58 dB noise, and 2:36 cycle duration.

WARRANTY AND SUPPORT

Warranty Information

The BLITZHOME BH-6-CDW1 Dishwasher comes with a 12-month manufacturer's warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting, or warranty inquiries, please contact BLITZHOME customer support through the official website or your retailer.