

Grundig RGB LED Floor Lamp 140cm

Grundig RGB LED Floor Lamp 140cm User Manual

Model: RGB LED Floor Lamp 140cm | Brand: Grundig

1. INTRODUCTION

Thank you for purchasing the Grundig RGB LED Floor Lamp. This modern floor lamp is designed to enhance your living space with dynamic RGB colors and warm white light, offering various features such as music synchronization, dimming, and a timer function. This manual provides detailed instructions for safe installation, operation, and maintenance of your new lamp.

2. SAFETY INSTRUCTIONS

- Read all instructions carefully before use and retain for future reference.
- This product is for indoor use only. Do not expose to water or high humidity.
- Ensure the power source matches the requirements specified in the product specifications.
- Do not attempt to disassemble or modify the lamp. This may void the warranty and pose a safety risk.
- Keep the lamp away from heat sources, direct sunlight, and sharp objects.
- Unplug the lamp from the power source before cleaning or if it will not be used for an extended period.
- Do not look directly into the LED light source for prolonged periods, as it may cause eye strain.
- Keep the remote control and its batteries out of reach of children.

3. PACKAGE CONTENTS

Please check that all components are present and in good condition:

- Grundig RGB LED Floor Lamp Unit (140 cm)
- Lamp Base
- Remote Control

- USB Type-C Power Cable
- User Manual (this document)

4. SETUP

1. **Assemble the Lamp Base:** Carefully attach the lamp unit to its base. Ensure it is securely fastened and stable on a flat surface.
2. **Position the Lamp:** Place the floor lamp in your desired location. Its slim design is ideal for corners or behind furniture.
3. **Connect Power:** Insert the USB Type-C power cable into the lamp's power port. Connect the other end of the USB cable to a compatible USB power adapter (not included) and plug it into a wall outlet.
4. **Insert Remote Control Batteries:** Open the battery compartment on the back of the remote control and insert 2x AAA batteries (not included), observing the correct polarity.



Image 1: The Grundig RGB LED Floor Lamp, measuring 140 cm in height, positioned in a living room corner. This image illustrates the lamp's dimensions and how it fits into a typical indoor setting.

5. OPERATING INSTRUCTIONS

The Grundig RGB LED Floor Lamp is operated using the included remote control. Ensure the remote control has working batteries and is pointed towards the lamp for optimal response.

5.1 Basic Functions

- **Power On/Off:** Press the **On** button to turn the lamp on, and the **Off** button to turn it off.
- **Color Selection:** Press any of the colored buttons (Red, Green, Blue, Yellow, Cyan, Magenta, etc.) to select a static color.
- **Warm White Light:** Press the **W** button to switch to warm white light mode.
- **Brightness Adjustment:** Use the **Brightness +** and **Brightness -** buttons (sun icons) to increase or decrease the light intensity.

5.2 Special Modes

- **Music Synchronization Mode:** Press one of the music note buttons (**1**, **2**, **3**) to activate music sync mode. The lamp's built-in sound sensor will detect ambient sound and synchronize the light effects accordingly. Different music modes may offer varying patterns or sensitivities.
- **Dynamic Color Modes:** Use the **Mode +** and **Mode -** buttons to cycle through various dynamic color-changing effects (e.g., fade, jump, strobe).
- **Speed Adjustment:** When in a dynamic color mode, use the **Speed +** and **Speed -** buttons to increase or decrease the speed of the color transitions.
- **Timer Function:** Press the **1H**, **2H**, or **3H** button to set the lamp to automatically turn off after 1, 2, or 3 hours, respectively.



Image 2: The Grundig RGB LED Floor Lamp showcasing both cool white light on the left and a vibrant, colorful RGB display on the right. This demonstrates the lamp's versatility for different ambient lighting needs.

With music sensor

Responds to music and sound



Image 3: A group of people dancing in a room, illuminated by the Grundig RGB LED Floor Lamp which is actively synchronizing its light effects with music. This illustrates the lamp's music sync feature in a dynamic setting.

6. REMOTE CONTROL FUNCTIONS

The remote control provides full command over your Grundig RGB LED Floor Lamp. Familiarize yourself with its buttons:

With remote control *for various functions*

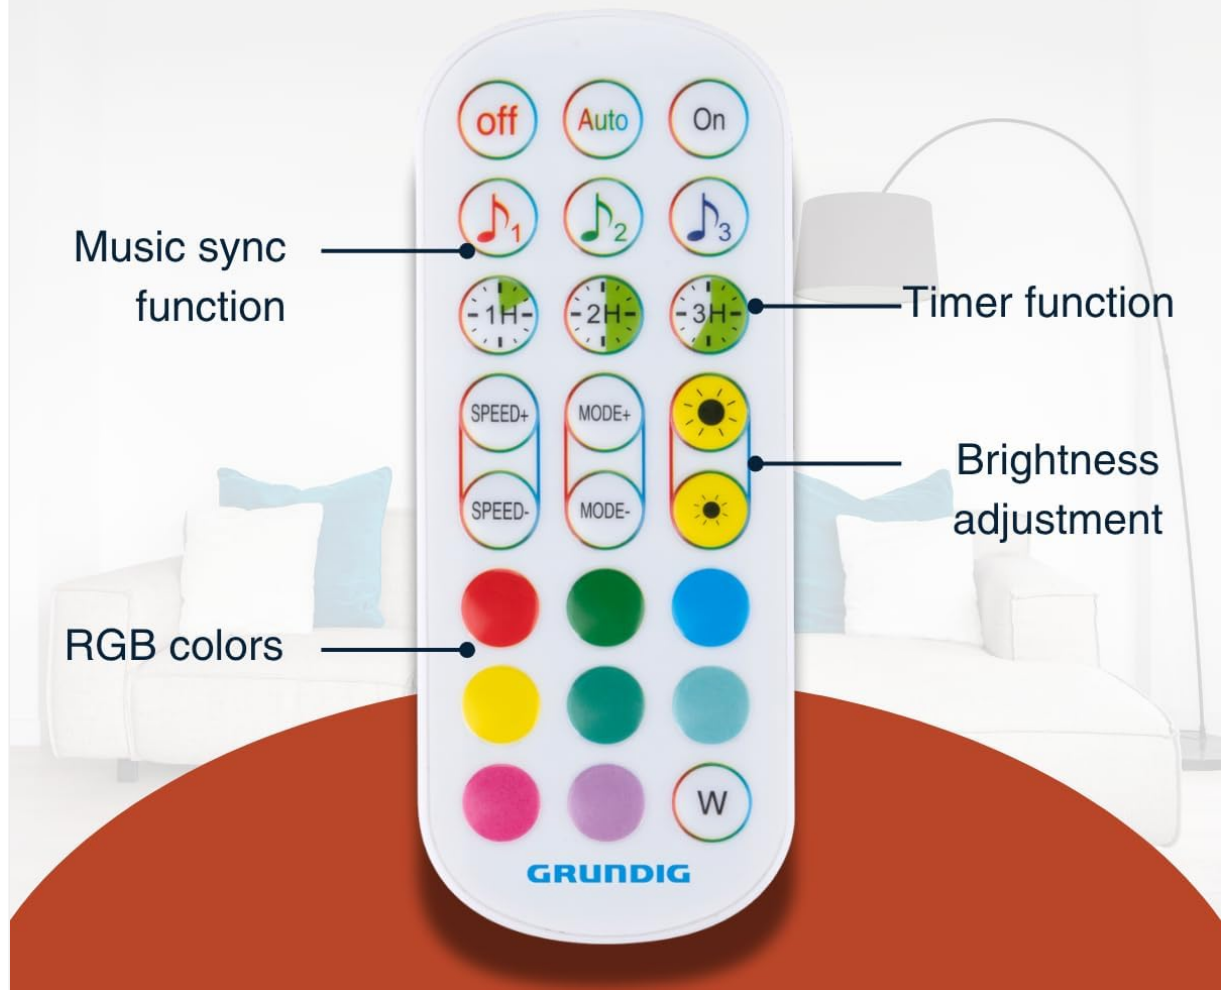


Image 4: A close-up view of the Grundig RGB LED Floor Lamp's remote control. Key functions such as On/Off, Auto (music sync), Timer (1H, 2H, 3H), Speed adjustment, Mode selection, Brightness adjustment, and various RGB color buttons are clearly visible and labeled.

Off: Turns the lamp off.

Auto: Activates automatic music synchronization mode.

On: Turns the lamp on.

♪1, ♪2, ♪3: Selects different music synchronization patterns.

1H, 2H, 3H: Sets the timer for 1, 2, or 3 hours respectively.

Speed +, Speed -: Adjusts the speed of dynamic color modes.

Mode +, Mode -: Cycles through different dynamic color effects.

Brightness + (Sun Up), Brightness - (Sun Down): Adjusts the brightness level.

RGB Color Buttons: Directly selects static colors (e.g., Red, Green, Blue, Yellow, Cyan, Magenta, Purple, Orange).

W: Activates warm white light mode.

7. MAINTENANCE

- **Cleaning:** Disconnect the lamp from the power supply before cleaning. Use a soft, dry cloth to wipe the lamp. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish or electronic components.
- **Storage:** If storing the lamp for an extended period, unplug it and store it in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace remote control batteries when the remote's range decreases or it stops responding. Ensure correct polarity when inserting new batteries.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply; loose connection; remote control batteries dead.	Check if the USB-C cable is securely connected and the power adapter is plugged into a working outlet. Replace remote control batteries.
Remote control not responding.	Batteries are dead or incorrectly inserted; remote is too far or obstructed.	Replace batteries, ensuring correct polarity. Move closer to the lamp and ensure no obstructions.
Colors are not changing or lamp is stuck on one color.	Incorrect mode selected; temporary software glitch.	Try pressing different color or mode buttons. Turn the lamp off and on again to reset.
Music sync mode not working.	Ambient sound is too low; sensor obstructed.	Increase music volume or move the lamp closer to the sound source. Ensure the sensor area is clear.

9. SPECIFICATIONS

Product Type	RGB LED Floor Lamp
Brand	Grundig
Model	RGB LED Floor Lamp 140cm
Light Source	LED
Light Colors	RGB + Warm White
Luminous Flux	360 Lumens
Height	Approx. 140 cm (55 inches)
Power Supply	USB Type-C (Adapter not included)
Control Method	Remote Control
Functions	Dimmable, Timer, Music Mode, Dynamic Color Effects

Material	Metal, Plastic
Weight	1 Kilogram
Dimensions (L x W x H)	8.4 x 52.5 x 130.2 cm (Base dimensions may vary slightly)
Power Consumption	10 Watts
Indoor/Outdoor Use	Indoor Use Only

10. WARRANTY AND SUPPORT

Grundig products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact your retailer. If you encounter any issues or have questions about your Grundig RGB LED Floor Lamp, please contact Grundig customer support or your point of purchase for assistance.

Please have your product model and purchase date available when contacting support.