

Manuals.plus /

› LEHMANN /

› LEHMANN LHOEK-2217B Venice 1.7L 2200W Electric Kettle Instruction Manual

LEHMANN LHOEK-2217B

LEHMANN Electric Kettle Instruction Manual

Model: LHOEK-2217B Venice

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using the appliance and keep them for future reference. Incorrect use may result in electric shock, fire, or serious injury.

- Always ensure the voltage indicated on the rating label matches your mains voltage.
- Do not immerse the kettle, power base, cord, or plug in water or any other liquid.
- Keep the appliance out of reach of children. Close supervision is necessary when used near children.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any manner.
- Place the kettle on a firm, flat, heat-resistant surface, away from hot surfaces or open flames.
- Do not fill the kettle above the maximum fill line or below the minimum fill line to prevent boiling dry or splashing.
- Always close the lid securely before operating the kettle.
- Exercise extreme caution when pouring hot water.
- The outer surface of the kettle may become hot during use. Avoid touching hot surfaces. The double-wall insulation helps keep the exterior cooler, but caution is still advised.
- Unplug the kettle from the outlet when not in use and before cleaning.
- This kettle features automatic shut-off and boil-dry protection for your safety.
- All parts in contact with water are made from BPA-free materials.

2. PRODUCT OVERVIEW

The LEHMANN LHOEK-2217B Venice Electric Kettle is designed for efficient and safe water boiling. It features a 1.7-liter capacity, 2200W power for rapid boiling, and double-wall thermal insulation.

Key Features:

- **Capacity:** 1.7 Liters
- **Power:** 2200 Watts for rapid boiling
- **Double-Wall Insulation:** Keeps water hot longer and exterior cooler to the touch.
- **360° Rotational Base:** Cordless design for easy lifting and placing from any angle.
- **Automatic Shut-off:** Kettle turns off automatically once water boils.
- **Boil-Dry Protection:** Prevents damage if the kettle is accidentally switched on without water.
- **BPA-Free Materials:** All water-contacting parts are free from BPA.
- **LED Indicator:** Illuminates when the kettle is boiling.
- **Removable Sediment Filter:** For cleaner water and easy maintenance.



Figure 1: Kettle Dimensions and Key Specifications. The kettle measures approximately 25 cm in height, 21.5 cm in width (including the handle), and has a base diameter of 16 cm. It weighs 1 kg, has a 1.7-liter capacity, and operates at 2200W.



Figure 2: 360° Rotational Base. The kettle can be placed on its power base from any direction, offering convenience for both left and right-handed users.

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the kettle and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels from the kettle.
3. Inspect the kettle for any signs of damage. Do not use if damaged.

Before First Use:

1. Fill the kettle with clean water up to the MAX mark.
2. Boil the water as described in the 'Operating Instructions' section.
3. Discard the boiled water.
4. Repeat this process 2-3 times to remove any manufacturing residues and ensure the best taste.

4. OPERATING INSTRUCTIONS

Filling the Kettle:

1. Remove the kettle from its power base.
2. Open the lid.
3. Fill the kettle with the desired amount of fresh water. Ensure the water level is between the MIN and MAX marks.
4. Close the lid securely.

Boiling Water:

1. Place the kettle back onto its power base.
2. Plug the power cord into a suitable electrical outlet.
3. Press the ON/OFF switch (usually located at the bottom of the handle or on the base). The LED indicator will illuminate.
4. The kettle will begin to heat the water.
5. Once the water boils, the kettle will automatically switch off, and the LED indicator will extinguish.

Pouring Water:

1. Carefully lift the kettle from its power base.
2. Pour the hot water slowly and steadily to avoid splashing.
3. Always hold the kettle by its handle, as the body may still be warm despite double-wall insulation.



Figure 3: Pouring Water from the Kettle. The image shows the kettle in use, highlighting its pouring spout and the BPA-free interior.

5. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your kettle and ensure optimal performance.

Exterior Cleaning:

- Always unplug the kettle and allow it to cool completely before cleaning.
- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- Ensure the power base and electrical connections remain dry.

Interior Cleaning and Descaling:

Mineral deposits (limescale) can build up inside the kettle, especially in hard water areas. Descale regularly to maintain efficiency.

1. Fill the kettle with a mixture of one part white vinegar and two parts water. Alternatively, use a commercial descaling solution according to its instructions.
2. Bring the mixture to a boil.

3. Allow the solution to soak in the kettle for at least 30 minutes, or longer for heavy deposits.
4. Pour out the solution and rinse the interior thoroughly with fresh water several times.
5. For stubborn deposits, gently scrub the interior with a soft brush or sponge.
6. The removable sediment filter can be rinsed under running water.



Figure 4: Interior Components and Cleaning. This image illustrates the kettle's stainless steel interior, the removable filter for easy cleaning, and how to clean the inside.

6. TROUBLESHOOTING

If you encounter any issues with your kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not turn on.	No power supply; Kettle not properly seated on base; Power switch not pressed.	Check power outlet; Ensure kettle is correctly placed on the base; Press the power switch.
Water not boiling.	Insufficient water; Kettle has boil-dry protection activated.	Ensure water level is above MIN mark; If boil-dry protection activated, unplug, let cool, then refill and restart.
Kettle switches off before boiling.	Limescale buildup; Faulty thermostat.	Descale the kettle (see 'Cleaning and Maintenance'); If problem persists, contact customer support.
Water has an unusual taste.	New kettle residue; Limescale buildup.	Perform first-use cleaning (boil and discard water several times); Descale the kettle.

If the problem persists after trying these solutions, please contact LEHMANN customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	LEHMANN
Model Number	LHOEK-2217B
Model Name	Venice
Capacity	1.7 Liters
Power	2200 Watts
Voltage	230 Volts
Material	Stainless Steel, Plastic (BPA-Free)
Color	White
Special Features	Automatic Shut-off, Rotational Base, Double Wall, Anti-scale Filter, Rapid Boil
Product Dimensions (L x W x H)	22L x 15W x 24H cm
Item Weight	1.03 Kilograms
Care Instructions	Hand wash only

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your product or visit the official LEHMANN website. For technical support or service inquiries, please contact LEHMANN customer service through their official channels.