

[Manuals.plus](#) /

› [Epson](#) /

› Epson L4360 Wi-Fi MFP A4 Duplex Printer User Manual

Epson Epson L4360

Epson L4360 Wi-Fi MFP A4 Duplex Printer User Manual

Model: Epson L4360 | Brand: Epson

PRODUCT OVERVIEW

The Epson L4360 is a cost-effective Wi-Fi Multi-Function Printer (MFP) designed for A4 duplex printing, scanning, and copying. It features an intuitive LCD display for easy navigation and operation. This model incorporates a premium design with a newly installed "Status Light" to clearly indicate the printer's current status, guiding the user effectively. Additionally, it includes an automatic stacker cover that opens to securely hold your printed documents.

SETUP GUIDE

1. Unboxing and Initial Placement

Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the exterior and interior of the printer. Place the printer on a stable, flat surface with adequate space around it for ventilation and paper handling.

Included Components:

- Epson L4360 Printer
- Ink Bottles (Black, Cyan, Magenta, Yellow)
- Power Cord
- Setup Guide / Documentation



Front view of the Epson L4360 printer, showcasing its compact design and integrated ink tank system on the right side. The control panel with an LCD display is centrally located.

2. Power On and Ink Filling

1. Connect the power cord to the printer and then to a power outlet.
2. Press the power button to turn on the printer.
3. Follow the on-screen instructions on the LCD display to initiate the ink filling process.
4. Open the ink tank covers and carefully fill each tank with the corresponding color ink bottle. Ensure the correct color ink is poured into the correct tank.
5. Close the ink tank covers securely. The printer will then prepare the ink system, which may take several minutes.

3. Software Installation

1. Insert the software CD-ROM (if included) into your computer's CD/DVD drive, or visit the official Epson support website to download the latest drivers and software for the L4360 model.
2. Run the installer and follow the on-screen prompts to complete the installation. This typically includes drivers, utility software, and network connection tools.

4. Network Connection (Wi-Fi)

1. On the printer's LCD display, navigate to the Wi-Fi setup menu.
2. Select your Wi-Fi network from the list of available networks.
3. Enter your Wi-Fi password using the printer's control panel.
4. Confirm the connection. Once connected, the Wi-Fi indicator on the printer will illuminate steadily.
5. For USB connection, simply connect the printer to your computer using a USB cable after driver installation.

OPERATING INSTRUCTIONS

1. Loading Paper

Open the rear paper support and pull out the extension. Fan the paper stack and load it into the paper feeder with the print side facing up. Adjust the paper guides to fit the width of the paper. The maximum input sheet capacity is 100 sheets.



The Epson L4360 printer with paper loaded in the rear input tray and a printed document partially visible in the front output tray. The status light on the right side is illuminated.

2. Basic Printing

1. Open the document or image you wish to print on your computer or smartphone.

2. Select 'Print' from the application's menu.
3. Choose 'Epson L4360 Series' as your printer.
4. Adjust print settings such as paper size (e.g., A4, 8.5 x 11 inches), print quality, and color/monochrome. For duplex printing, select the two-sided printing option in the printer driver settings.
5. Click 'Print'. The automatic stacker cover will open to hold your printouts.

3. Scanning Documents

1. Lift the scanner lid and place the document face-down on the scanner glass, aligning it with the corner mark.
2. Close the scanner lid gently.
3. On the printer's LCD display, select 'Scan', or initiate scanning from your computer using Epson Scan software.
4. Choose scan settings such as resolution, color mode, and destination (e.g., save to computer, email).
5. Press the 'Start' button on the printer or in the software to begin scanning.



A view of the Epson L4360 printer with its top cover open, revealing the internal paper path and scanner bed. This view is typical for accessing the scanner or clearing paper jams.

4. Copying Documents

1. Place the document on the scanner glass as described in the scanning section.
2. On the printer's LCD display, select 'Copy'.
3. Adjust copy settings such as number of copies, color/monochrome, and paper size.
4. Press the 'Start' button to begin copying.

5. Using the LCD Display

The LCD display provides access to various printer functions and settings. Use the navigation buttons (up, down, left, right, OK) to browse menus, select options, and confirm actions. The 'Status Light' on the printer will also provide visual cues regarding the printer's operational state (e.g., ready, error, busy).



An angled view of the Epson L4360 printer, emphasizing the illuminated status light on the right side, which indicates the printer's operational status.

MAINTENANCE

1. Cleaning the Printer

- Regularly wipe the exterior of the printer with a soft, damp, lint-free cloth.

- Clean the scanner glass with a soft, dry cloth or a glass cleaner applied to the cloth (not directly to the glass).
- Refer to the printer's utility software for options like print head cleaning or nozzle check, which help maintain print quality.

2. Ink Replacement

The Epson L4360 uses ink bottles for refilling. When an ink tank level is low, the printer's LCD display will indicate which color needs refilling. Purchase genuine Epson ink bottles for optimal performance and to prevent damage to the printer. Follow the same procedure as initial ink filling to replenish the tanks.

3. Clearing Paper Jams

If a paper jam occurs, the printer's LCD display will show an error message. Turn off the printer and carefully open all covers (front, rear, and top) to locate the jammed paper. Gently pull the paper out in the direction of the paper path. Avoid tearing the paper, as small pieces can remain inside and cause further issues. Close all covers and turn the printer back on.

TROUBLESHOOTING

Printer Not Responding / Offline:

Check power connections. Ensure the printer is turned on. Verify Wi-Fi or USB cable connection. Restart both the printer and your computer/router. Check printer status on your computer to ensure it's not set to 'Offline'.

Poor Print Quality (Streaks, Faded Colors):

Perform a nozzle check and print head cleaning using the printer's utility software or LCD menu. Ensure ink tanks are adequately filled. Use genuine Epson ink. Check paper type settings in your print driver.

Paper Feed Issues (Multiple Sheets, No Feed):

Ensure paper is loaded correctly and the paper guides are adjusted to the paper width. Fan the paper stack before loading to prevent sticking. Check for any foreign objects or torn paper pieces inside the printer.

Scanner Not Working:

Ensure the printer is connected to the computer and drivers are installed. Restart the computer and printer. Check if the scanner lid is fully closed. Try scanning from the printer's control panel directly.

SPECIFICATIONS

Feature	Value
Product Dimensions	34.7D x 37.5W x 18.7H Centimeters
Item Weight	5.2 kg
Connectivity Technology	USB, Wi-Fi
Printing Technology	Inkjet
Special Feature	Display Screen
Printer Output	Colour
Maximum Print Speed (Colour)	33 ppm
Max Print Speed Monochrome	33 ppm
Maximum Colour Print Resolution	4800x 1200 Dots Per Inch

Feature	Value
Maximum Black and White Print Resolution	4800x 1200 Dots Per Inch
Scanner Type	Flatbed
Max Input Sheet Capacity	100
Maximum Media Size	8.5 x 11 inches
Sheet Size	8.5 x 11 inches
Power Consumption	13 Watts
Printer Ink Type	Dye-Based Ink
Form Factor	All-in-One
Compatible Devices	PC, Smartphones
Specific Uses For Product	Home, Office

WARRANTY AND SUPPORT

The Epson L4360 printer comes with a Limited Warranty. For specific terms and conditions of your warranty, please refer to the documentation included with your product or visit the official Epson support website.

Manufacturer: Epson India Pvt. Ltd.

For technical support, driver downloads, FAQs, and service information, please visit the official Epson support portal. You can typically find this by searching for "Epson support" and your printer model (L4360) on your preferred search engine, or by visiting the [Epson Store on Amazon](#) for general brand information.

