

[Manuals.plus](#) /

› [ATMPC](#) /

› ATMPC 10-inch Android 14 Tablet (Model IT-801B) User Manual

ATMPC IT-801B

ATMPC 10-inch Android 14 Tablet (Model IT-801B) User Manual

1. INTRODUCTION

This manual provides detailed instructions for the ATMPC 10-inch Android 14 Tablet, Model IT-801B. It covers setup, operation, maintenance, and troubleshooting to ensure optimal use of your device. Please read this manual thoroughly before using your tablet.



Image 1.1: Front and back view of the ATMPK 10-inch Android 14 Tablet.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- ATMPK 10-inch Android 14 Tablet (Model IT-801B)
- USB-C Cable
- User Manual (this document)

3. DEVICE LAYOUT

Familiarize yourself with the physical components and ports of your tablet:



Image 3.1: Diagram illustrating the location of the TF Card Slot, 3.5mm Headphone Jack, Power button, Volume buttons, USB-C port, Front Camera, Rear Camera, and Speakers on the ATMPG tablet.

- **TF Card Slot:** For inserting a microSD card to expand storage.
- **3.5mm Headphone Jack:** For connecting wired headphones.
- **Power Button:** Press and hold to power on/off or restart. Press briefly to turn the screen on/off.
- **Volume Buttons:** Adjust the audio volume.
- **USB-C Port:** For charging the tablet and connecting to a computer.
- **Front Camera:** For video calls and selfies.
- **Rear Camera:** For taking photos and videos.
- **Speakers:** For audio output.

4. SETUP

4.1 Charging the Tablet

Before first use, fully charge the tablet using the provided USB-C cable and a compatible power adapter (not

included). The charging indicator will show the charging status.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button until the power options appear, then select "Power Off."
- **To Restart:** Press and hold the Power button until the power options appear, then select "Restart."

4.3 Initial Setup

Upon first power-on, follow the on-screen prompts to configure your tablet:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one. This is necessary to access the Google Play Store and other Google services.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, or password) for security.

4.4 Inserting a TF Card (MicroSD Card)

To expand the tablet's storage:

1. Locate the TF card slot on the side of the tablet (refer to Image 3.1).
2. Gently insert the TF card into the slot until it clicks into place.
3. The tablet will detect the card and may prompt you to format it for internal or portable storage. Follow the on-screen instructions.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

The tablet uses a multi-touch IPS display for interaction:

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through lists or switch between home screens.
- **Pinch-to-Zoom:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

5.2 Connecting to Wi-Fi

Your tablet supports dual-band Wi-Fi 6 (2.4G/5G) for fast and stable internet connectivity.

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi ON.
3. Select your desired network from the list and enter the password if required.

Advanced Connectivity for Convenience



Image 5.1: Illustration of the tablet's advanced connectivity, highlighting Dual-band WiFi 6 and Bluetooth 5.4.

5.3 Bluetooth Pairing

The tablet features Bluetooth 5.4 for connecting wireless accessories.

1. Go to **Settings** > **Connected devices** > **Bluetooth**.
2. Toggle Bluetooth ON.
3. Select the device you wish to pair from the list of available devices.
4. Confirm the pairing code if prompted.

5.4 Using the Cameras

Your tablet is equipped with a 2MP front camera and a 5MP rear camera.

1. Open the **Camera** app.
2. Tap the shutter button to take a photo.
3. Switch between front and rear cameras using the camera toggle icon.
4. Select video mode to record videos.

5.5 Installing Applications

As a GMS-certified Android tablet, you can download and install millions of applications from the Google Play Store.

1. Open the **Play Store** app.
2. Search for the desired app.
3. Tap **Install** to download and install the app.



Image 5.2: The tablet interface showing various applications available through the Google Play Store.

5.6 Parental Controls

The tablet includes robust parental control features to manage screen time and content access.

1. Navigate to **Settings > Digital Wellbeing & parental controls**.
2. Set up a profile for your child and configure screen time limits, content restrictions, and safe search options.

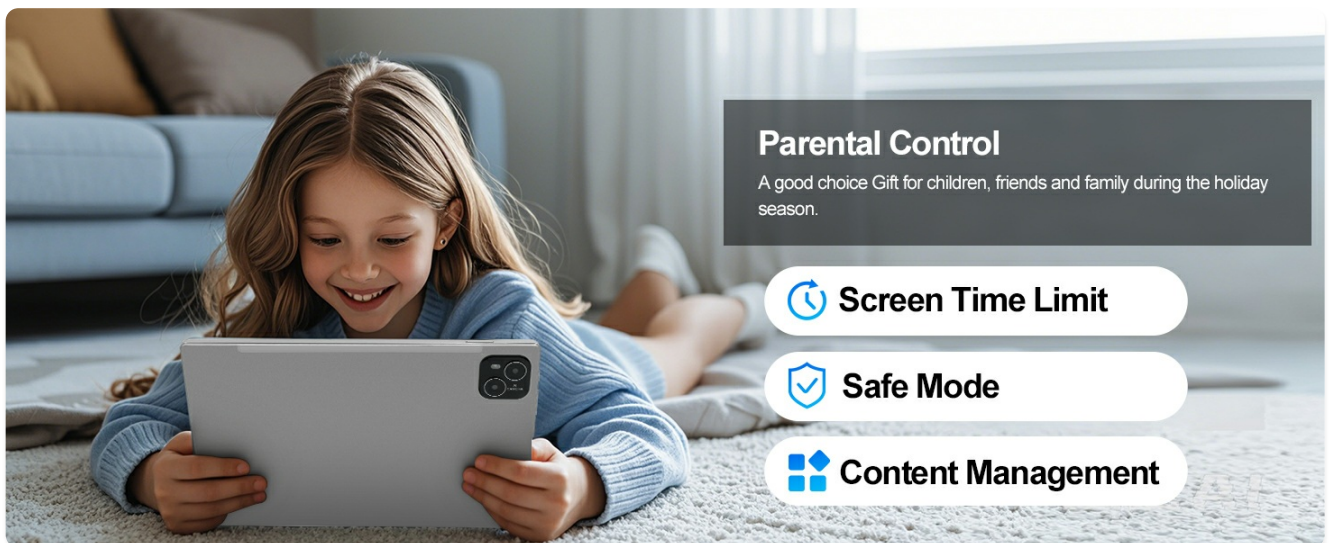


Image 5.3: A child using the tablet, illustrating the availability of parental control features such as Screen Time Limit, Safe Mode, and Content Management.

5.7 Split Screen Functionality

Android 14 allows for split-screen multitasking:

1. Open an app.
2. Swipe up from the bottom of the screen and hold to access recent apps.
3. Tap the app icon at the top of the app's card and select "Split top."
4. Choose a second app from the recent apps list or app drawer to use in the other half of the screen.

6. MAINTENANCE

6.1 Battery Care

- Avoid extreme temperatures, which can degrade battery life.
- Do not leave the tablet fully charged or fully discharged for extended periods.
- Use only the provided USB-C cable for charging.

6.2 Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals or abrasive materials.
- Ensure the tablet is powered off before cleaning.

6.3 Software Updates

Regularly check for and install software updates to ensure optimal performance and security.

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to download and install any available updates.

6.4 Storage Management

To maintain performance, regularly manage your tablet's storage.

1. Go to **Settings > Storage** to view storage usage.
2. Uninstall unused apps, delete unnecessary files, or move large files to an inserted TF card.

7. TROUBLESHOOTING

If you encounter issues with your ATMPC tablet, refer to the following common solutions:

Issue	Possible Solution
Tablet is unresponsive or frozen	Press and hold the Power button for approximately 10-15 seconds to force a restart.
Tablet is overheating	Close background applications, reduce screen brightness, or stop using the tablet for a short period to allow it to cool down. Avoid direct sunlight.
Battery drains quickly	Reduce screen brightness, disable Wi-Fi/Bluetooth when not in use, close background apps, and check for apps consuming excessive power in Battery settings.
Cannot connect to Wi-Fi	Ensure Wi-Fi is enabled in settings. Restart your router and the tablet. Forget the network and reconnect.
Apps are slow or crashing	Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Ensure sufficient free storage space. Restart the tablet.
Touchscreen is unresponsive or inaccurate	Clean the screen. Restart the tablet. If the issue persists, a factory reset might be necessary (back up data first).

8. SPECIFICATIONS

10.1 inch IPS Screen



10.1 inch
Display



1280*800
Resolution



IPS
Panel



Multi-touch



Image 8.1: Visual representation of the tablet's 10.1-inch HD IPS screen with 1280x800 resolution and multi-touch support.

- **Model:** IT-801B
- **Operating System:** Android 14
- **Processor:** Octa-Core (A523), 2 GHz
- **RAM:** 12GB (4GB + 8GB expansion)
- **Internal Storage (ROM):** 128GB
- **Expandable Storage:** Up to 1TB via TF Card (MicroSD)
- **Display:** 10.1-inch HD IPS Touchscreen, 1280 x 800 pixels
- **Wireless Connectivity:** Dual-band Wi-Fi 6 (802.11ax, 2.4G/5G), Bluetooth 5.4
- **Cameras:** Front 2MP, Rear 5MP
- **Battery:** 6000mAh (up to 10 hours average battery life)
- **Ports:** USB-C, 3.5mm Headphone Jack, TF Card Slot
- **Dimensions (LxWxH):** 9.6 x 6.4 x 0.37 inches
- **Weight:** Approximately 1 lb (0.45 kg)

Long Lasting Battery



6000mAh
Large battery



USB-C
Easy Charging



4 hours
Game



6 Hours
Video



9 Hours
Music



10 Hours
E-Books

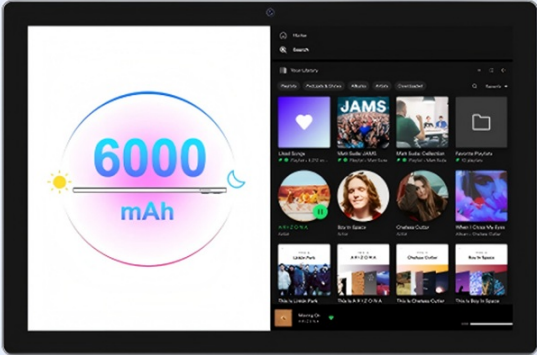


Image 8.2: Details on the tablet's 6000mAh long-lasting battery and USB-C charging, with estimated usage times for various activities.

9. WARRANTY AND SUPPORT

ATMPC is committed to providing reliable products and customer service.

- **Manufacturer Protection Plan:** Your ATMPC tablet includes a 1-year manufacturer protection plan.
- **Returns:** Enjoy 30-day hassle-free returns.
- **Customer Support:** For any questions or assistance, please contact our support team.

How to Contact Support:

- **Email:** atmpcservice@163.com
- **Online Service:** Available 24/7 with replies typically within 24 hours.
- **Via Amazon:** Find your tablet order and click "Contact Seller."

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I perform a hard reset on the ATMPC IT-801B 10-inch Android 14 tablet?

To perform a hard reset or factory reset on your ATMPC IT-801B tablet, please follow these steps. Note: A factory reset will erase all data on your device. Ensure you have backed up important...

[Read full answer](#)