

[Manuals.plus](#) /

› [LELO](#) /

› [LELO SONA 3 Sonic Massager: User Manual and Instructions](#)

## LELO SONA 3

# LELO SONA 3 Sonic Massager: User Manual

Comprehensive instructions for your LELO SONA 3 device.

## INTRODUCTION

The LELO SONA 3 is an external sonic massager designed for precise stimulation. It features SenSonic technology, 12 pleasure settings, and SmoothRise technology for gentle intensity transitions. Crafted from super-soft silicone, the SONA 3 offers a comfortable experience and can be connected to the LELO app for additional modes and features.



Image: The LELO SONA 3 device in Cyber Purple, shown alongside a smartphone connected to the LELO app and its elegant packaging.

## WHAT'S INCLUDED

Your LELO SONA 3 package contains the following items:

- LELO SONA 3 Sonic Massager
- User Manual (this guide)
- Moisturizer Sachet (5 ml / 0.17 fl. oz. water-based lubricant)
- Warranty Registration Card
- USB Charging Cable
- Satin Storage Pouch

**SONA 3**  
sonic clitoral massager



**MANUAL**  
how to use guide



**MOISTURIZER SACHET**  
water-based lubricant  
5 ml / 0.17 fl. oz.



**WARRANTY CARD**  
verifies product authenticity



**CHARGING CORD**  
USB cable



**SATIN POUCH**  
for storage

Image: A flat lay of all items included in the LELO SONA 3 product box, clearly labeled.

## SETUP AND FIRST USE

- 1. Initial Charging:** Before first use, fully charge your LELO SONA 3 for 2 hours using the provided USB charging cable. The device is fully charged when the indicator light stops blinking.
- 2. App Connection (Optional):** To unlock additional modes and features, download the LELO app from your device's app store. Connect your SONA 3 via Bluetooth within the app.

# Useful information



## CHARGING TIME / USE TIME

2 h both



## TRAVEL LOCK

hold the + and the - buttons for 3 seconds



## STANDBY

90 days



## 100% WATERPROOF

perfect for the bath and shower



Image: Visual guide highlighting useful information such as 2-hour charging/use time, 90-day standby, travel lock function, and 100% waterproof design.

## OPERATING INSTRUCTIONS

The LELO SONA 3 features intuitive controls for a personalized experience.

- **To Turn On:** Press the + button or the central power button.
- **To Switch Between Modes:** Press the central button shortly. The SONA 3 offers 12 distinct pleasure settings.
- **To Adjust Intensity:** Press the + button to increase intensity or the - button to decrease intensity. The SmoothRise technology ensures gentle transitions.
- **To Turn Off:** Press and hold the central button.
- **Travel Lock:** To activate or deactivate the travel lock, press and hold both the + and - buttons simultaneously for 3 seconds. This prevents accidental activation during travel.
- **App-Connected Features:** Connect your device via Bluetooth to the LELO app to unlock two additional modes and the Love Bridge feature for long-distance couple play.

# How to use

## **BEFORE THE FIRST USE**

charge for 2 hours

## **TO TURN IT ON**

press the + or central power button

## **TO SWITCH BETWEEN THE MODES**

press the central button shortly

## **TO ADJUST THE INTENSITY**

press the + or – button

## **TO TURN IT OFF**

press and hold the central button

## **APP-CONNECTED**

connect your device via Bluetooth to unlock additional modes



Image: A close-up of the LELO SONA 3 in hand, illustrating the button functions for power, mode selection, and intensity adjustment.

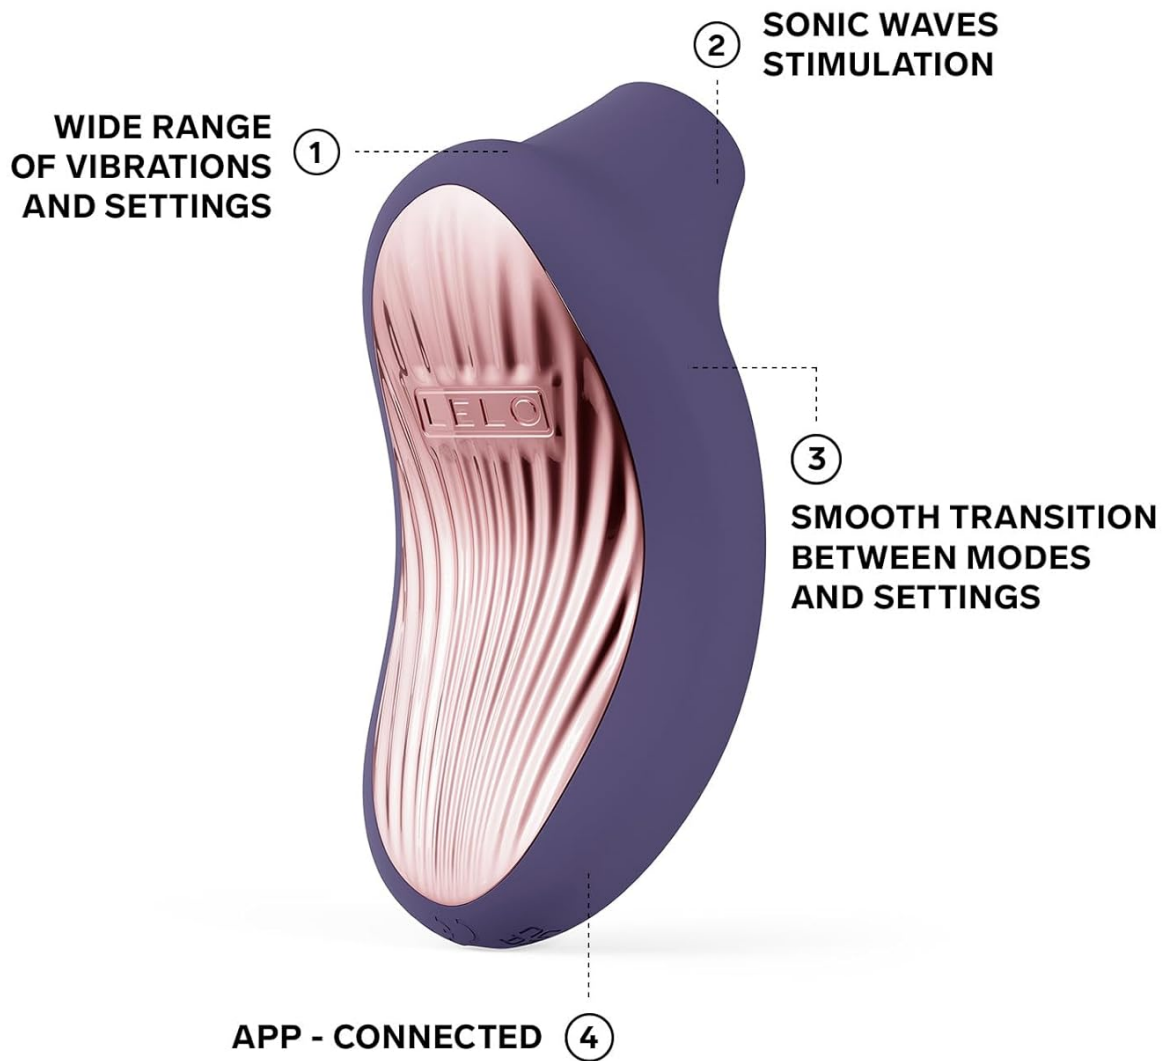


Image: An annotated diagram of the LELO SONA 3, pointing out its key features: wide range of vibrations and settings, sonic wave stimulation, smooth transition between modes, and app connectivity.

## CARE AND MAINTENANCE

Proper care ensures the longevity and hygiene of your LELO SONA 3.

- **Cleaning:** The SONA 3 is 100% waterproof. After each use, clean the device thoroughly. We recommend using LELO Premium Cleaning Spray. If not available, wash with lukewarm water and mild soap. Rinse thoroughly.
- **Drying:** Pat dry with a lint-free cloth or allow to air dry completely before storing.
- **Storage:** Store your SONA 3 in its satin pouch in a clean, dry place, away from direct sunlight and extreme temperatures.
- **Lubricants:** Only use water-based lubricants with your LELO SONA 3. Oil-based or silicone-based lubricants can damage the silicone material.

## TROUBLESHOOTING

If you encounter any issues with your LELO SONA 3, please refer to the following common solutions:

- **Device Not Turning On:** Ensure the device is fully charged. If the battery is depleted, charge it for 2 hours.
- **App Connectivity Issues:**
  - Ensure Bluetooth is enabled on your smartphone.
  - Make sure the LELO app is updated to the latest version.
  - Try restarting both your device and the LELO app.
  - If issues persist, try unpairing and re-pairing the device within the app's settings.
- **Device Not Responding:** If the device becomes unresponsive, try activating the travel lock (hold+ and - for 3 seconds) to reset it, then deactivate it.

For further assistance, please contact LELO customer support.

## SPECIFICATIONS

<b>Model</b>	SONA 3
<b>Material</b>	Acrylonitrile Butadiene Styrene (ABS), Silicone
<b>Dimensions (Package)</b>	7.24 x 5.71 x 2.64 inches
<b>Weight (Package)</b>	9.14 ounces
<b>Battery Type</b>	1 Nonstandard Battery (included)
<b>Charging Time</b>	2 hours
<b>Use Time</b>	Up to 2 hours
<b>Standby Time</b>	Up to 90 days
<b>Water Resistance</b>	100% Waterproof
<b>Manufacturer</b>	LELO

## WARRANTY AND SUPPORT

Your LELO SONA 3 comes with a **1-year LELO warranty** and a **10-year quality guarantee**. Please retain your proof of purchase for warranty claims.

For product support, warranty inquiries, or any other questions, please visit the official LELO website or contact their customer service directly. Details can be found on the warranty registration card included in your package.

You can also visit the [LELO Store on Amazon](#) for more information.

