



[Manuals.plus](#) /

› [LELO](#) /

› [LELO SONA 3 Sonic Massager Instruction Manual](#)

LELO 9615-SL

LELO SONA 3 Sonic Massager Instruction Manual

Model: 9615-SL

INTRODUCTION

Welcome to the LELO SONA 3 experience. This manual provides essential information for the safe and effective use of your new sonic massager. Please read these instructions carefully before first use and retain for future reference.

WHAT'S IN THE BOX



How to use

BEFORE THE FIRST USE

charge for 2 hours

TO TURN IT ON

press the + or central power button

TO SWITCH BETWEEN THE MODES

press the central button shortly

TO ADJUST THE INTENSITY

press the + or – button

TO TURN IT OFF

press and hold the central button

APP-CONNECTED

connect your device via Bluetooth to unlock additional modes

Image showing the LELO SONA 3 sonic massager in its packaging, along with the charging cord, satin pouch, manual, moisturizer sachet, and warranty card.

- LELO SONA 3 Sonic Massager
- USB Charging Cable
- Satin Storage Pouch
- Instruction Manual
- Moisturizer Sachet
- Warranty Card

KEY FEATURES

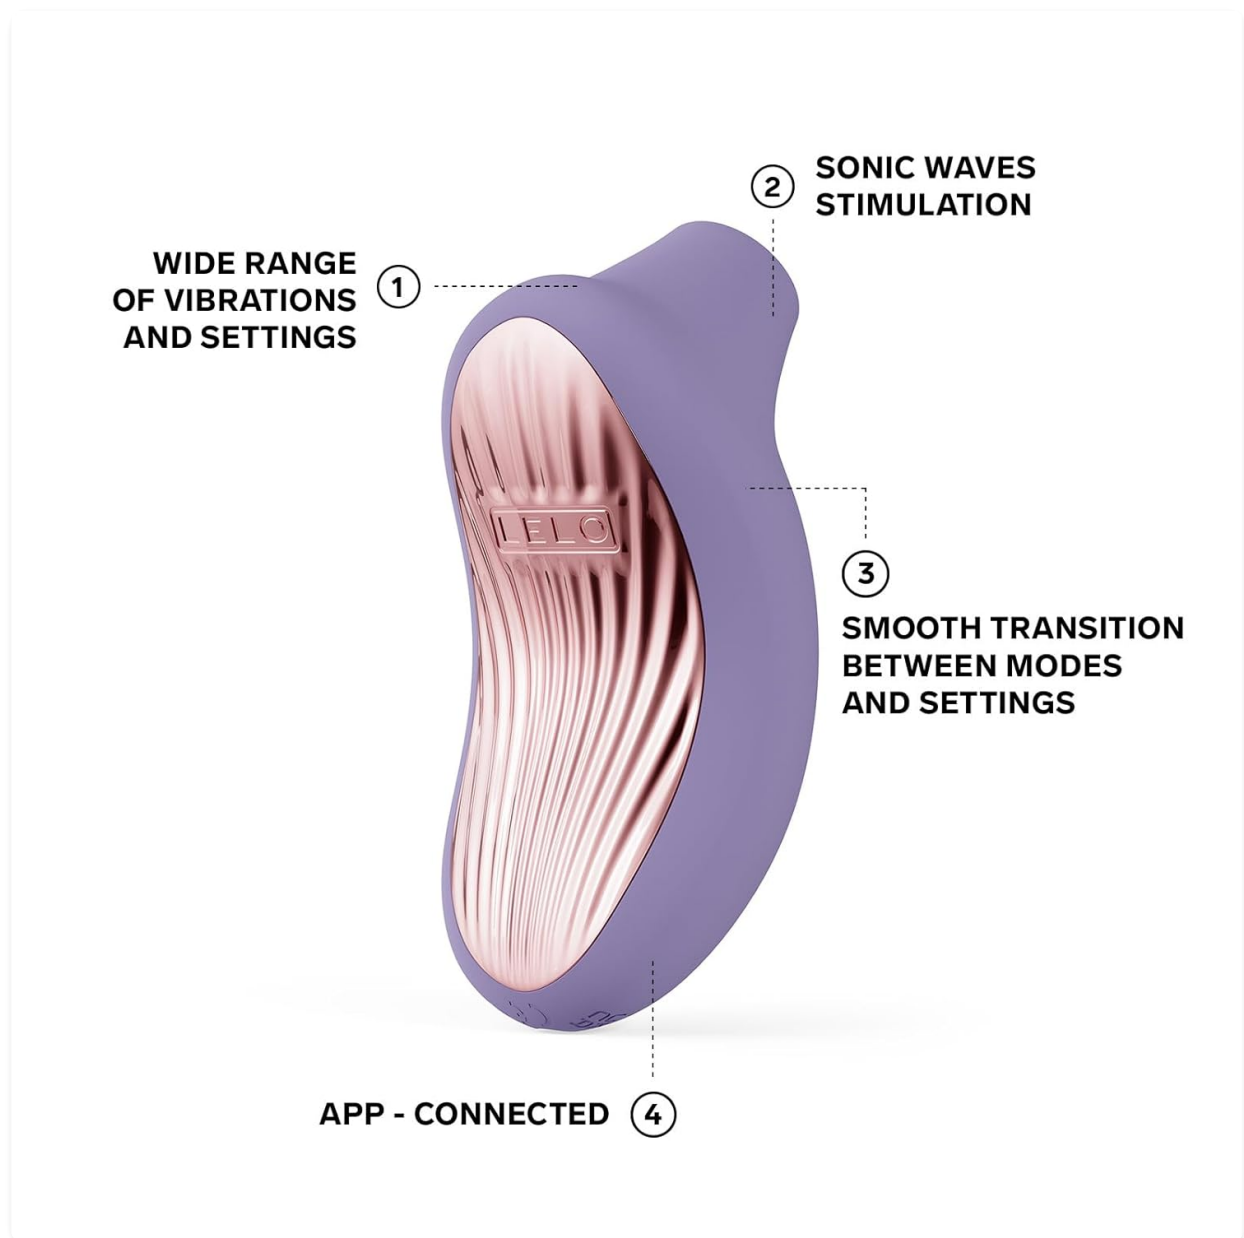


Diagram highlighting key features of the LELO SONA 3, including wide range of vibrations, sonic wave stimulation, smooth transition between modes, and app connectivity.

- **APP-CONNECTED:** Seamlessly connect SONA 3 to the LELO app to unlock long-distance partner play and two exclusive pleasure modes for a fully tailored experience.
- **SONIC WAVE TECHNOLOGY:** Without making direct contact, SONA 3's sonic waves offer fast yet gentle external stimulation.
- **SUPER SOFT SILICONE:** Exceptionally smooth silicone that conforms to your body's contours and mimics the skin's natural softness.
- **12 VIBRATION SETTINGS:** The product has ten modes with different intensity levels for maximum control over the sensations. Connect it with the LELO APP to unlock two additional modes.
- **SMOOTHRISE TECHNOLOGY:** Ensures there are no distracting jumps in intensity, allowing you to glide through vibration modes effortlessly.

SETUP AND FIRST USE

Features



SONSONIC TECHNOLOGY

deep but gentle sonic wave stimulation



SMOOTHRISE TECHNOLOGY

smooth transition through intensity levels



APP-CONNECTED

to connect and unlock more settings through LELO app



12 SETTINGS

from a teasing murmur to a satisfying pulse



SCULPTED FOR YOUR PLEASURE

made from a single piece of silicone



100% WATERPROOF

perfect for the bath and shower



EXTRA-SOFT SILICONE

premium silicone that feels warm to the touch

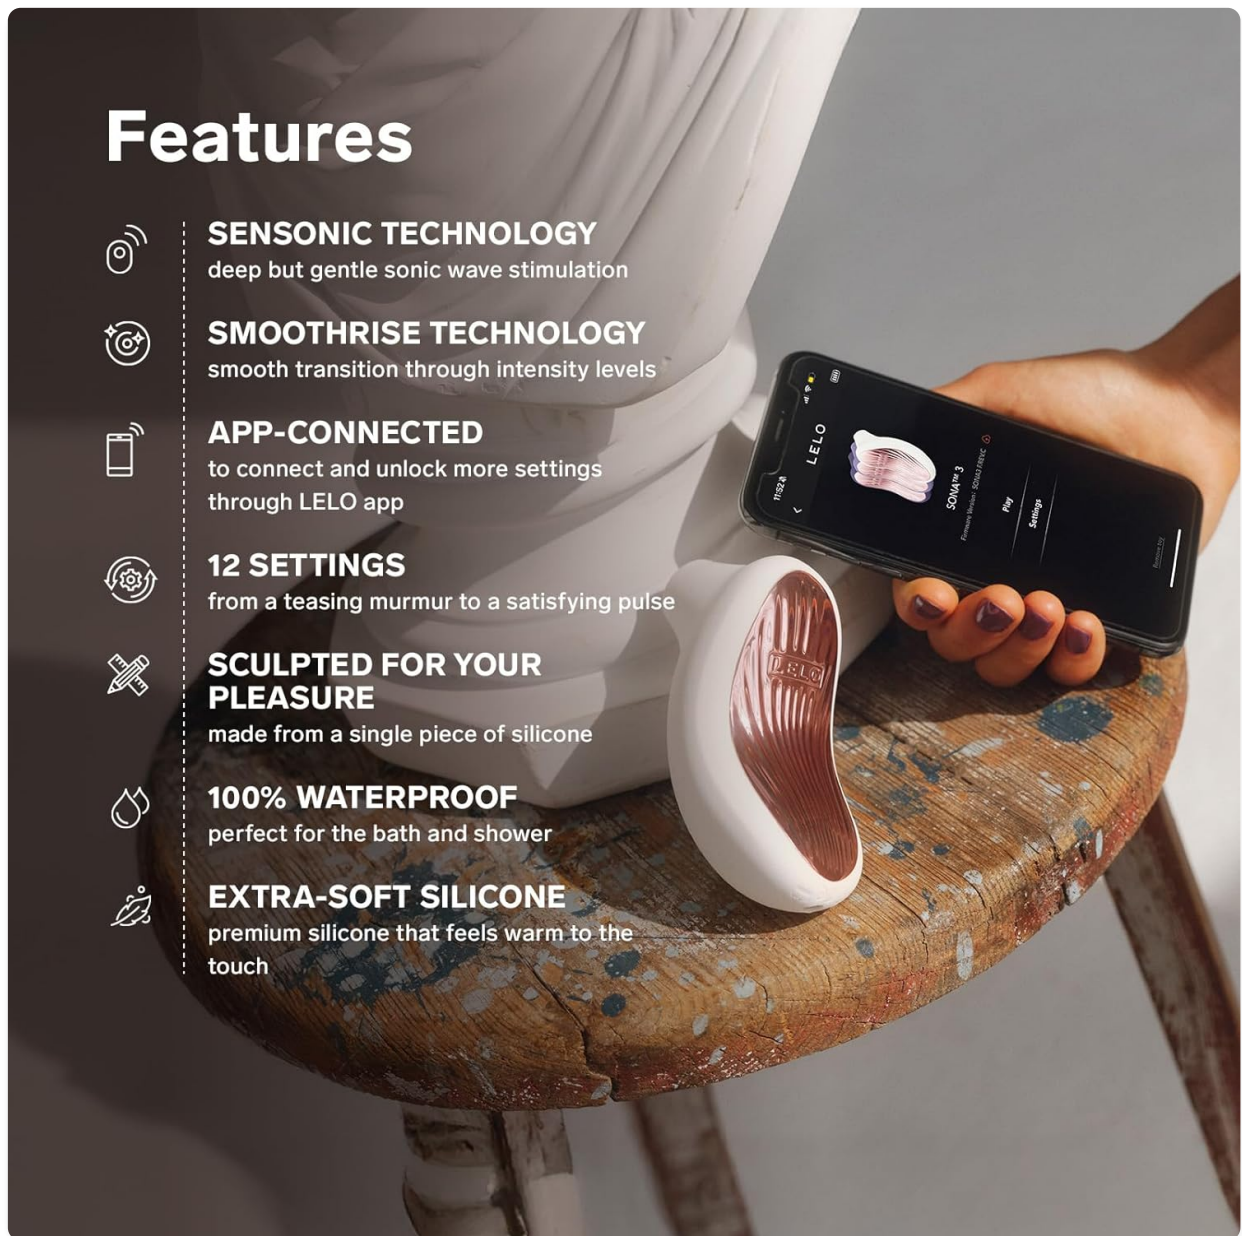


Diagram illustrating useful information for the LELO SONA 3, such as charging time, travel lock, standby duration, and waterproof rating.

1. **Initial Charge:** Before the first use, charge your LELO SONA 3 for 2 hours. Connect the USB charging cable to the device and a USB power source.
2. **Download LELO App:** For enhanced features and additional modes, download the official LELO app and connect your device via Bluetooth.
3. **Apply Lubricant:** For optimal comfort and experience, apply a water-based lubricant to both your body and the massager.

OPERATING INSTRUCTIONS

Useful information



CHARGING TIME / USE TIME

2 h both



TRAVEL LOCK

hold the + and the - buttons for 3 seconds



STANDBY

90 days



100% WATERPROOF

perfect for the bath and shower



Diagram providing step-by-step instructions on how to use the LELO SONA 3, including turning it on/off, switching modes, adjusting intensity, and app connection.

1. **Turn On:** Press the '+' or central power button to turn on the device.
2. **Switch Modes:** Press the central button shortly to cycle through the 12 vibration settings.
3. **Adjust Intensity:** Use the '+' or '-' buttons to increase or decrease the intensity of the vibrations.
4. **Turn Off:** Press and hold the central button to turn off the device.

CHARGING

The LELO SONA 3 uses a magnetic charging port. A full charge typically takes 2 hours and provides approximately 60 minutes of use. The device includes a USB charging cable for convenience.

TRAVEL LOCK

To activate the travel lock, press and hold the '+' and '-' buttons simultaneously for 3 seconds. The device will vibrate briefly to confirm activation. To unlock, repeat the process.

CLEANING AND MAINTENANCE

The LELO SONA 3 is 100% waterproof (rated to IPX7 standard), making it suitable for use in the shower or bath and easy to clean. After each use, wash the device with warm water and a toy cleaner or mild soap. Rinse thoroughly and pat dry with a lint-free cloth. Store in the provided satin pouch.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Check if the travel lock is activated.
- **Difficulty connecting to app:** Ensure Bluetooth is enabled on your smartphone and the device is within range. Restart both the device and the app.
- **Weak vibrations:** The device may require charging.

SPECIFICATIONS

Item Model Number	9615-SL
Brand	LELO
Material	Acrylonitrile Butadiene Styrene (ABS), Silicone
Color	Violet Dusk
Water Resistance Level	Waterproof (IPX7)
Batteries	1 Nonstandard Battery (included)
Manufacturer	LELO

OFFICIAL PRODUCT VIDEO

Official product video demonstrating the features and usage of the LELO SONA 3 sonic massager, including Sensonic Technology, Smoothrise Technology, app connectivity, and super-soft silicone.

WARRANTY AND SUPPORT

Your LELO SONA 3 comes with a comprehensive warranty. Please refer to the included warranty card for details on coverage and how to register your product. For further assistance, visit the official LELO website or contact their customer support.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.