

[Manuals.plus](#) /

> [eKids](#) /

> eKids Dora Karaoke Microphone with Boombox Instruction Manual

eKids 115

eKids Dora Karaoke Microphone with Boombox Instruction Manual

Model: 115 | Brand: eKids

1. INTRODUCTION

Welcome to the eKids Dora Karaoke Microphone with Boombox. This device is designed to provide an interactive and engaging musical experience. It features a wired microphone, built-in music, and Bluetooth connectivity for streaming audio from compatible devices. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance and enjoyment.

2. PRODUCT OVERVIEW

The eKids Dora Karaoke Microphone with Boombox is a portable audio device shaped like Dora's backpack, designed for children aged 3 and up. It combines a speaker with a wired microphone, allowing users to sing along to pre-loaded songs or music streamed via Bluetooth.



Figure 1: eKids Dora Karaoke Microphone with Boombox.

Key Features:

- **Bluetooth Speaker:** Connects to any music device via Bluetooth to stream popular karaoke playlists and more. Lightweight and portable, this karaoke boombox is designed for kids aged 3 and up.
- **Karaoke Microphone:** Includes a wired microphone to amplify your voice for singing.
- **Dora Backpack Design:** Features cute and colorful graphics inspired by the popular Nickelodeon series.
- **Built-in Music:** Contains extended clips of the songs 'Rainforest Ritmo', 'Cake', and 'Empanada'.
- **Portability:** Lightweight design with a built-in handle for easy transport.



Figure 2: Visual overview of the product's key features.

3. PACKAGE CONTENTS

Ensure all items are present upon unboxing:

- Dora Karaoke Microphone with Boombox (main unit)
- Wired Microphone
- Instruction Manual (this document)
- 3 x 'AA' Batteries (included)



Figure 3: Product as packaged, showing the boombox and microphone.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back or bottom of the boombox unit.
2. Using a Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert 3 'AA' batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Figure 4: Rear view of the boombox, indicating battery compartment and control buttons.

4.2 Microphone Connection

The wired microphone is typically pre-connected or plugs into a dedicated port on the boombox. Ensure the microphone cable is securely plugged in.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Locate the Power switch (often labeled ON/OFF or with a power symbol) on the unit. Slide it to the 'ON' position to power on the device. Slide it to 'OFF' to power off.

5.2 Playing Built-in Music

Press the designated 'Play Song' button (refer to Figure 4 for button layout) to cycle through the pre-loaded songs. The unit includes extended clips of 'Rainforest Ritmo', 'Cake', and 'Empanada'.

5.3 Using the Microphone

To use the microphone, ensure the 'Microphone On/Off' switch (refer to Figure 4) is in the 'On' position. Speak or sing into the microphone to amplify your voice through the boombox speaker.

5.4 Bluetooth Connectivity

To stream music from an external device:

1. Ensure the boombox is powered on.
2. Activate Bluetooth on your external music device (e.g., smartphone, tablet, computer).
3. Search for available Bluetooth devices and select "eKids Dora" or a similar name.
4. Once paired, you can stream audio from your device to the boombox.



Figure 5: Bluetooth connectivity allows streaming from various compatible devices.

5.5 Volume Control

Adjust the volume using the 'Volume: High/Medium/Low' switch on the unit (refer to Figure 4).

5.6 Demo Mode

The unit may include a 'Demo/Off/On' switch (refer to Figure 4). Set it to 'Demo' for a brief demonstration of features, or 'On' for full functionality.

6. MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Battery Care:** Remove batteries if the unit will not be used for an extended period to prevent leakage.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Solution
No power	Check battery installation and ensure batteries are fresh. Confirm the power switch is in the 'ON' position.
No sound from speaker	Increase the volume. Ensure the microphone is switched 'ON' if using it. If using Bluetooth, check device volume and connection.
Microphone not working	Ensure the microphone is securely plugged in and its 'On/Off' switch is in the 'On' position.

Problem	Solution
Bluetooth not connecting	Ensure the boombox is in Bluetooth pairing mode (if applicable, check manual for specific instructions). Turn off and on Bluetooth on your external device. Move devices closer together.

8. SPECIFICATIONS

- **Brand:** eKids
- **Model Name:** 115
- **Color:** Dora
- **Power Source:** Battery Powered (3 x 'AA' batteries)
- **Speaker Count:** 1
- **Connectivity Technology:** Bluetooth, 3.5mm audio jack (for wired microphone)
- **Item Weight:** 0.52 Kilograms
- **Item Dimensions (D x W x H):** 10.63"D x 2.24"W x 8.17"H
- **UPC:** 092298961934
- **Manufacturer:** KIDdesigns

9. WARRANTY AND SUPPORT

This product comes with a **1-year limited warranty** from the manufacturer, KIDdesigns. For warranty claims or technical support, please refer to the contact information provided with your purchase documentation or visit the eKids official website.

For additional product information or to explore other eKids products, visit the [eKids Brand Store](#).